

# RebarCAD

## Excel Template Creation Manual



GLOBAL CONSTRUCTION  
SOFTWARE AND SERVICES



Microsoft  
Partner

**RebarCAD for AutoCAD**, including all software and documentation, contains proprietary information belonging to Computer and Design Services Limited (herein referred to as “The Company”). They are provided under a license agreement containing restrictions on use and disclosure and are also protected by copyright, patent and other intellectual and industrial property laws.

Reverse engineering, disassembly or de-compilation of the software, except to the extent required to obtain interoperability with other independently created software or as specified by law is prohibited.

If you find any errors in the documentation, please report them to us in writing. The company does not warrant that this document is error free. The information contained in this document is subject to change without notice.

Except as may be expressly permitted in your license agreement, no part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of the company.

## Contents

1	Introduction .....	3
2	Customising the Excel Bar List Template .....	3
3	Create an Excel Bar List Report Template.....	6
3.1	Create the graphical layout of the template.....	6
3.2	Naming the cells in the report template.....	7
3.3	Report Configuration Tab .....	9
3.4	Defining the Cell Ranges .....	11
4	Create an Excel Weight Report Template.....	12
5	Create an Excel Summary Weight Report Template.....	15
6	Configuring Excel Report Templates in RebarCAD.....	18
7	Creating a Report using the Excel Report Templates .....	20
8	Excel Template Database fields .....	24
8.1	Data fields for header and footer .....	24
8.2	Data fields for bar data .....	27

# 1 Introduction

This manual explains how to create your own custom Excel Bar List Template for RebarCAD v2021 or higher.

You will need to have MS Office v2010 or higher installed in order to edit the Excel Template.

# 2 Customising the Excel Bar List Template

The Excel output routine in RebarCAD reads the data from the Bar List Dialog and prints this data in the appropriate Excel cell.

For example, the Release assigned in RebarCAD to rebar in the drawing will be printed in the Release data cell in Excel.

The default Excel Templates shipped with RebarCAD are stored in subfolders under the “C:\ProgramData\CADS\AutoCAD XXXX\RebarCAD XXXX.XX\CADS-RC\Templates\Reports\Excel Report Templates” folder.

## Schedule Report folder

- Canada2020
- Default Bar List
- USA Bar List Report with header fields

## Weight Report folder

- Weight Report by Bars with Release Column
- Weight Report by Bars
- Weight Report by Drawing Sheet Release Column
- Weight Report by Drawing Sheet
- Weight Report by Member Release Column
- Weight Report by Member
- Weight Report by Release

## Weight Summary Report folder


- Weight Summary by Bend Category
- Weight Summary by Bend Type
- Weight Summary by Drawing Sheet
- Weight Summary by Grade Size
- Weight Summary by Member
- Weight Summary by Release Grade Size
- Weight Summary by Release Status
- Weight Summary by Release

## Others folder

- Report By Release
- Weight Summary Report by Release-Grade-Size

Each template consists of two tabs, the first tab is the graphical layout of the bar list and the second tab describes the supported fields in the first tab using keywords.




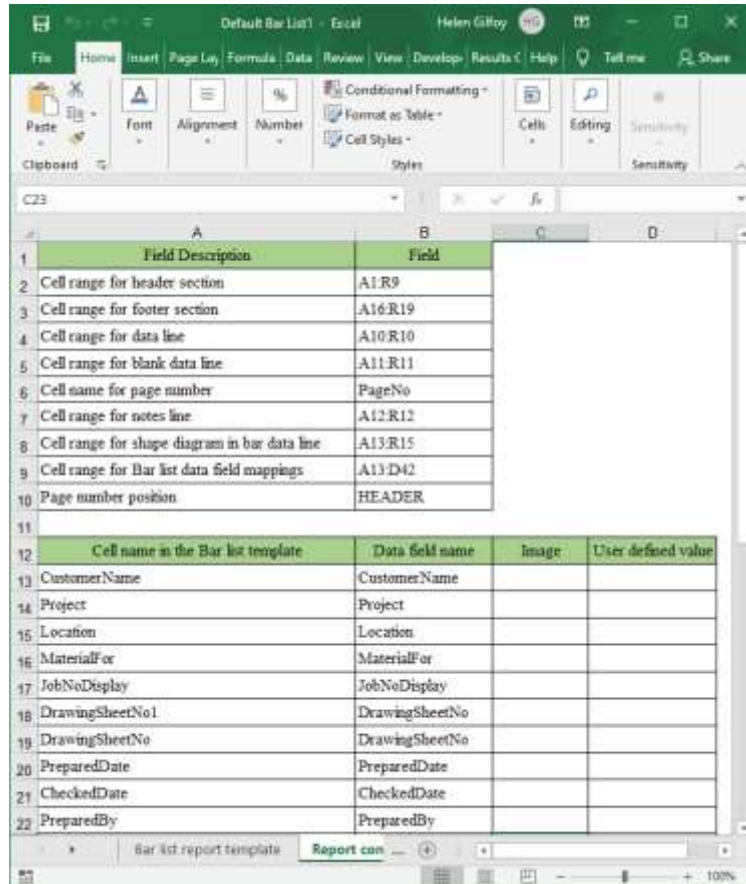

Field Description	Field
Cell range for header section	A1:R9
Cell range for footer section	A16:R19
Cell range for data line	A10:R10
Cell range for blank data line	A11:R11
Cell name for page number	PageNo
Cell range for notes line	A12:R12
Cell range for shape diagram in bar data line	A13:R15
Cell range for Bar list data field mappings	A13:D42
Page number position	HEADER

Cell name in the Bar list template	Data field name	Image	User defined value
CustomerName	CustomerName		
Project	Project		
Location	Location		
MaterialFor	MaterialFor		
JobNoDisplay	JobNoDisplay		
DrawingSheetNo1	DrawingSheetNo		
DrawingSheetNo	DrawingSheetNo		
PreparedDate	PreparedDate		
CheckedDate	CheckedDate		
PreparedBy	PreparedBy		

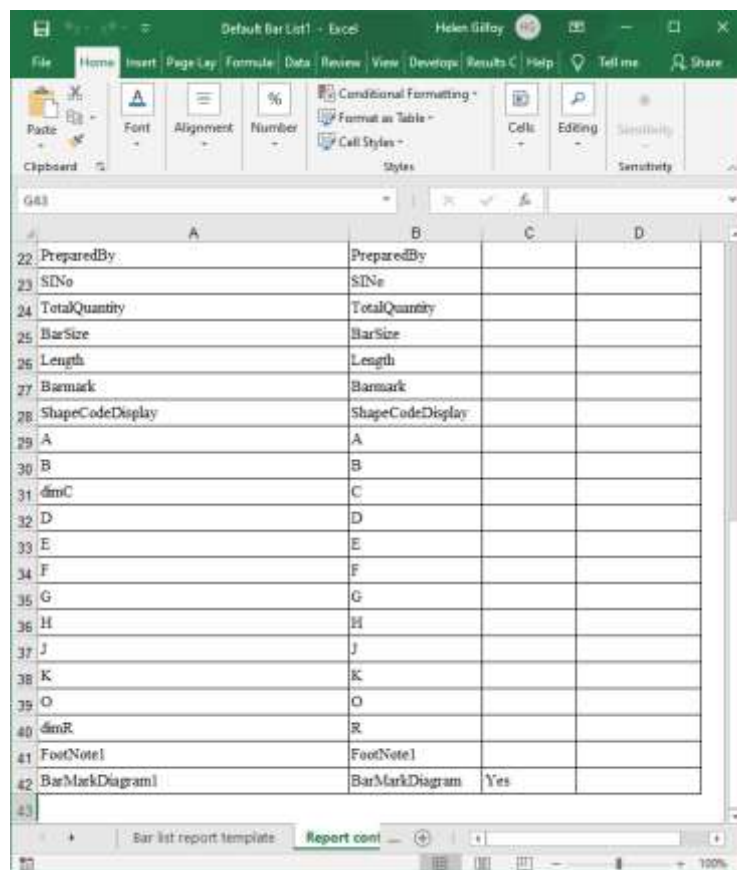

PreparedBy	PreparedBy		
SINo	SINo		
TotalQuantity	TotalQuantity		
BarSize	BarSize		
Length	Length		
Bemark	Bemark		
ShapeCodeDisplay	ShapeCodeDisplay		
A	A		
B	B		
dimC	C		
D	D		
E	E		
F	F		
G	G		
H	H		
J	J		
K	K		
O	O		
dimR	R		
FootNote1	FootNote1		
BarMarkDiagram1	BarMarkDiagram	Yes	

Report Configuration Tab

## 3 Create an Excel Bar List Report Template

Create a new Excel report template by following the procedure below:

1. Launch the 'Excel' application;
2. Open a new workbook, select the File pull down menu – New - Blank workbook' to create a new Excel workbook.
3. Immediately save the workbook to the "*C:\ProgramData\CADS\AutoCAD XXXX\RebarCAD XXXX.XX\CADS-RC\Templates\Reports\Excel Report Templates\Schedule Report*" folder. Select the File pull down menu - Save As, set the '*Save as type*' as '*Excel Template (.xltx)*' and then type in an appropriate filename to save the Excel template.


The Excel report templates comprises of the following two worksheets:

- **Bar list report Template.**  
Create a new worksheet for the schedule layout view, by renaming the default worksheet 'Sheet1' as *Bar list report template*.
- **Report configuration.**  
Create a new worksheet with the name 'Report configuration' this is the tab where all the fields in the bar list are mapped to fields from the RebarCAD drawing and Title Block.  
Right click on the Schedule Report tab and select Insert...  
Select Worksheet from the Insert dialog and click OK.  
Right Click on the Tab and select Rename, change the worksheet name to *Report configuration*.



### 3.1 Create the graphical layout of the template

On the Bar List Report Template Tab, create the graphical layout of the schedule template based on your standard office layout. An example of the default RebarCAD Default Bar List is shown below;

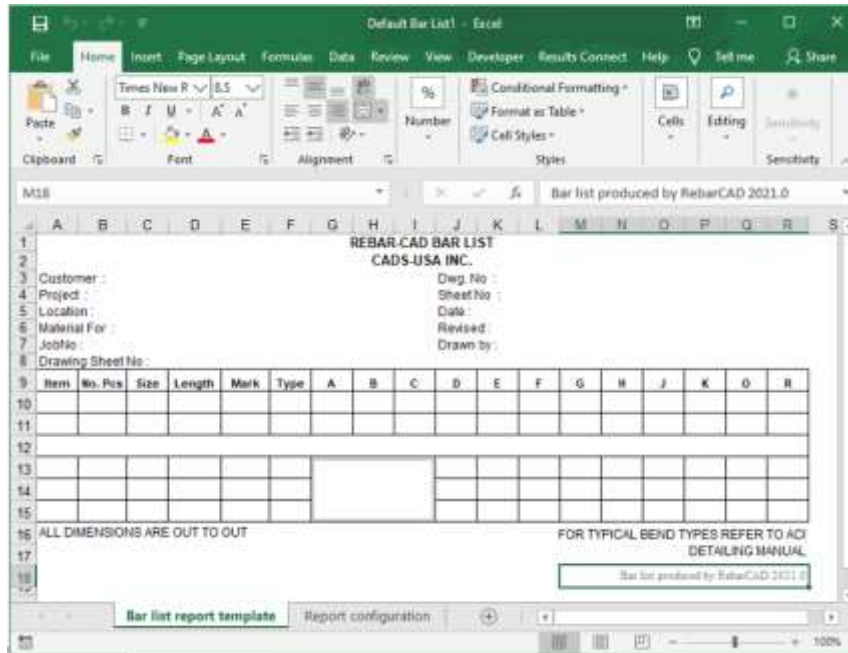


## 3.2 Naming the cells in the report template


Keywords need assigning to cells in the Bar List Report to receive bar list data exported from the Bar List dialog inside RebarCAD. This next section describes how to define the keywords inside the Excel Template.

The example below describes how to define a keyword for the Job No data cell using the default template.


1. Click into Cell D/E/F7 (on your template select the cell for the Job No data).
2. Right mouse click to display the pop-up menu.
3. Select the Define Name command.

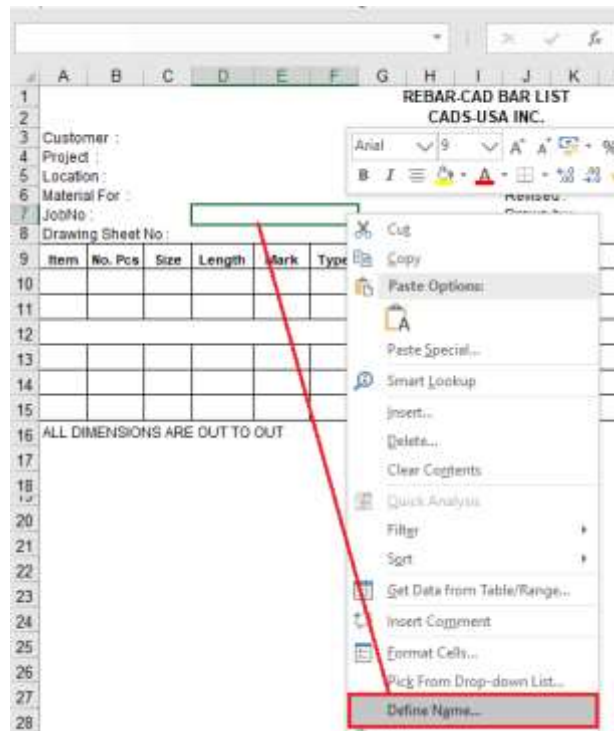

4. The New Name dialog is displayed.
5. Type in "JobNoDisplay" into the Name field, this is a keyword that the export routine is programmed to recognise.

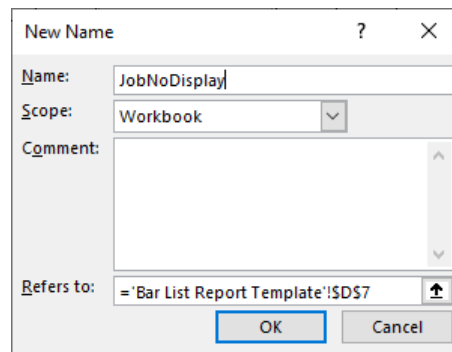

6. Leave the scope set to Workbook.
7. Refers to: displays the selected cell address
8. Click OK.
9. The JobNoDisplay keyword is displayed in the dropdown menu as shown below;

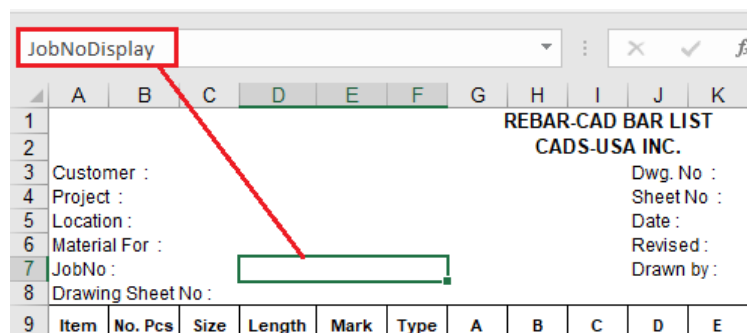

10. Please refer to Section 8 for the Keyword Definitions.
11. Continue defining the Keywords for all the data areas in the schedule report.

The diagram below illustrates the keywords defined in the RebarCAD Default Bar List Template for the Bar List Report Template Tab.


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R		
1	<b>REBAR-CAD BAR LIST</b>																			
2	<b>CADS-USA INC.</b>																			
3	Customer :	<b>CustomerName</b>					Dwg. No :	<b>DrawingSheetNo1</b>												
4	Project :	<b>Project</b>					Sheet No :	<b>PageNo</b>												
5	Location :	<b>Location</b>					Date :	<b>PreparedDate</b>												
6	Material For :	<b>MaterialFor</b>					Revised :	<b>CheckedDate</b>												
7	JobNo :	<b>JobNoDisplay</b>					Drawn by :	<b>PreparedBy</b>												
8	Drawing Sheet No :	<b>DrawingSheetNo</b>																		
9	<b>Item</b>	<b>No. Pcs</b>	<b>Size</b>	<b>Length</b>	<b>Mark</b>	<b>Type</b>	<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>	<b>E</b>	<b>F</b>	<b>G</b>	<b>H</b>	<b>J</b>	<b>K</b>	<b>O</b>	<b>R</b>		
10	<b>SINo</b>	<b>TotalQuantity</b>	<b>BarSize</b>	<b>Length</b>	<b>BarMark</b>	<b>ShapeCode DiagNo</b>	<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>	<b>E</b>	<b>F</b>	<b>G</b>	<b>H</b>	<b>J</b>	<b>K</b>	<b>O</b>	<b>R</b>		
11																				
12																				
13					<b>BarMarkDiagram1</b>															
14																				
15																				
16	ALL DIMENSIONS ARE OUT TO OUT										FOR TYPICAL BEND TYPES REFER TO ACI DETAILING MANUAL									
17	Bar list produced by RebarCAD 2021.0																			
18																				

## 3.3 Report Configuration Tab

The simplest way to reproduce the Report Configuration is to copy and paste from the RebarCAD Default Bar List Template.

The template is located in the "C:\ProgramData\CADS\AutoCAD XXXX\RebarCAD XXXX.XX\CADS-RC\Templates\Reports\Excel Report Templates\Schedule Report" folder.

1. Click on the Report Configuration Tab in your Schedule Template.
2. Open the default RebarCAD Bar List Template, "Default Bar List.xlsx".
3. Go to the report Configuration Tab
4. Highlight Cell A1 to Cell D42.
5. Select the Copy option from the Home Tab.
6. Return to your Schedule Template.
7. Click into Cell A1 and select Paste (Keep Source Column Widths).

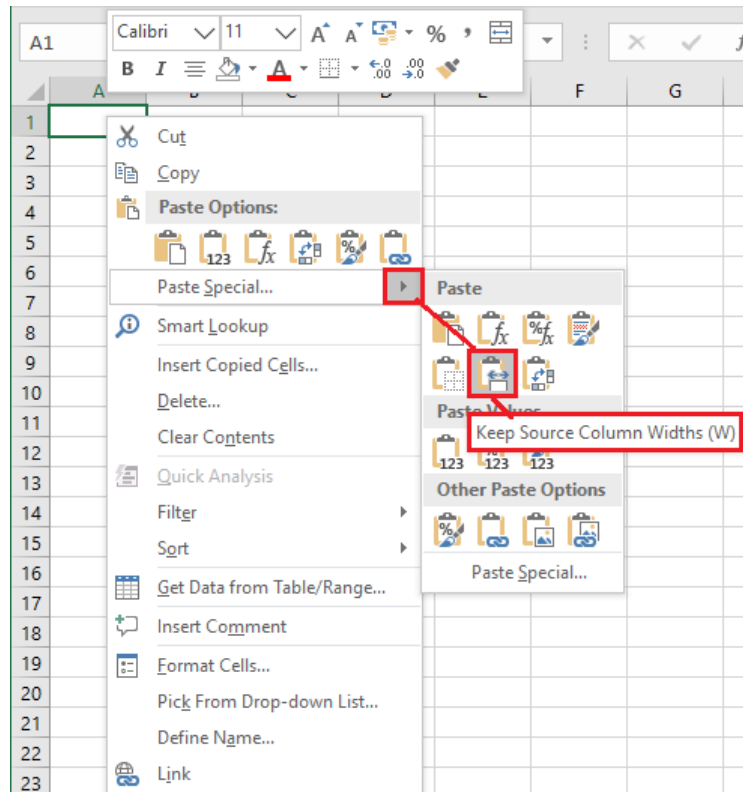

8. The next stage is to define the Keywords for the Cell Ranges in the Report Configuration.
9. To define the Cell range for the Header Section click into cell B2. Right mouse click and select Define Name.
10. Enter the name AddressRangeFor Header. Leave the scope set to Workbook. Refers to: displays the selected cell address.
11. Click OK.
12. Repeat this procedure for cells B3 to B9 with the Keywords shown in the diagram below, these are also defined in Section 8.

	A	B	C	D	E	F
1	Field Description	Field	<b>Keywords</b>			
2	Cell range for header section	A1:R9	<b>B2: AddressRangeForHeader</b>			
3	Cell range for footer section	A16:R19	<b>B3: AddressRangeForFooter</b>			
4	Cell range for data line	A10:R10	<b>B4: AddressRangeForData</b>			
5	Cell range for blank data line	A11:R11	<b>B5: AddressRangeForBlankRow</b>			
6	Cell name for page number	PageNo	<b>B6: PageNumberCellName</b>			
7	Cell range for notes line	A12:R12	<b>B7: AddressRangeForNotes</b>			
8	Cell range for shape diagram in bar data line	A13:R15	<b>B8: AddressRangePictureCellsForData</b>			
9	Cell range for Bar list data field mappings	A13:D42	<b>B:9 AddressRangeForScheduleMappings</b>			
10	Page number position	HEADER				

13. None of the other cells in the Report Configuration Tab need keywords defining.

## 3.4 Defining the Cell Ranges

The final step is to define the cell ranges that form the schedule.

The coloured areas in the diagrams below indicate the cell ranges in the Bar List Report Template and the related Field in the Report Configuration.

Type in the cell allocations from the Bar List Report Template for each section in the Report Configuration Tab. The cells allocated in the Default bar list template are shown in the Report Configuration diagram below.

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R
1	<b>REBAR-CAD BAR LIST</b>																	
2	<b>CADS-USA INC.</b>																	
3	Customer :									Dwg. No :								
4	Project :									Sheet No :								
5	Location :									Date :								
6	Material For :									Revised :								
7	JobNo :									Drawn by :								
8	Drawing Sheet No :																	
9	Item	No. Pcs	Size	Length	Mark	Type	A	B	C	D	E	F	G	H	J	K	O	R
10																		
11																		
12																		
13																		
14																		
15																		
16	ALL DIMENSIONS ARE OUT TO OUT									FOR TYPICAL BEND TYPES REFER TO ACI DETAILING MANUAL								
17																		
18	Bar list produced by RebarCAD 2021.0																	

	A	B	C	D	E	F
1	Field Description	Field	<b>Keywords</b>			
2	Cell range for header section	A1:R9	<b>B2: AddressRangeForHeader</b>			
3	Cell range for footer section	A16:R19	<b>B3: AddressRangeForFooter</b>			
4	Cell range for data line	A10:R10	<b>B4: AddressRangeForData</b>			
5	Cell range for blank data line	A11:R11	<b>B5: AddressRangeForBlankRow</b>			
6	Cell name for page number	PageNo	<b>B6: PageNumberCellName</b>			
7	Cell range for notes line	A12:R12	<b>B7: AddressRangeForNotes</b>			
8	Cell range for shape diagram in bar data line	A13:R15	<b>B8: AddressRangePictureCellsForData</b>			
9	Cell range for Bar list data field mappings	A13:D42	<b>B:9 AddressRangeForScheduleMappings</b>			
10	Page number position	HEADER				

If the Page Number is to be displayed in a different position than the Header Section, say the Footer change B10 to reflect this.

This completes the Bar List Template Creation.


To configure RebarCAD to use the Excel template refer to Section 6.


To create a Bar List Report using the Excel template refer to section 7.

## 4 Create an Excel Weight Report Template

RebarCAD is shipped with several Weight Report Templates. These are located in the “C:\ProgramData\CADS\AutoCAD XXXX\RebarCAD XXXX.XX\CADS-RC\Templates\Reports\Excel Report Templates\Weight Report” folder.

The default Weight Report is the Weight Report By Bars as shown below;

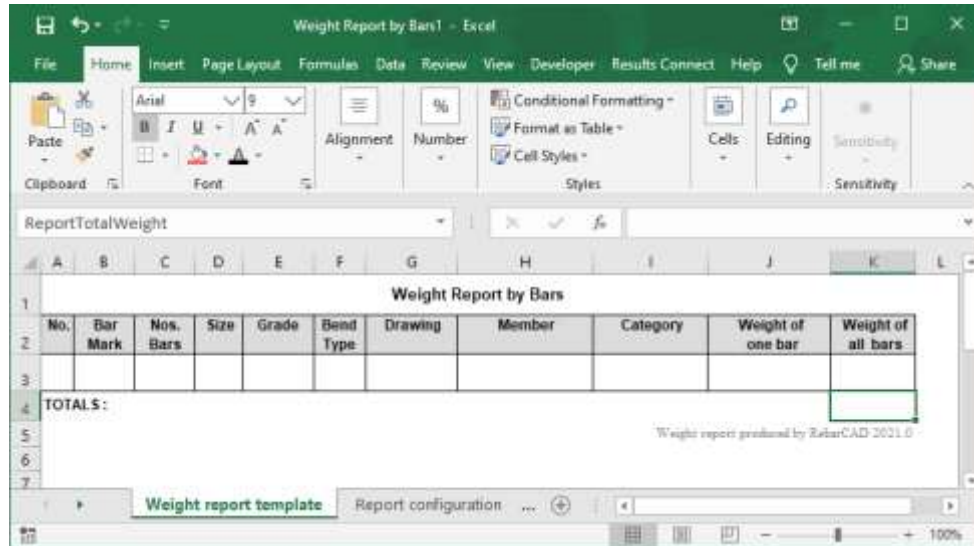

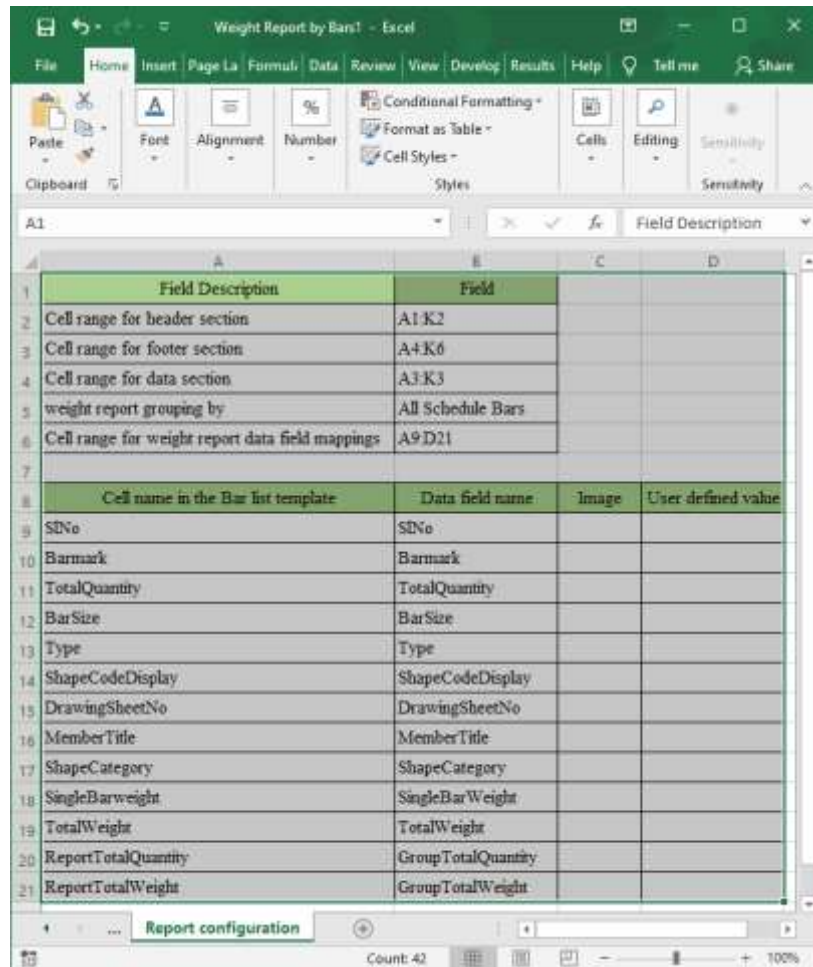

Create a new Excel report template by following the procedure below:

1. Launch the 'Excel' application;
2. Open a new workbook, select the File pull down menu – New - Blank workbook' to create a new Excel workbook.
3. Immediately save the workbook to the “*C:\ProgramData\CADS\AutoCAD XXXX\RebarCAD XXXX.XX\CADS-RC\Templates\Reports\Excel Report Templates\Weight Report*” folder. Select the File pull down menu - Save As, set the 'Save as type' as 'Excel Template (.xltx)' and then type in an appropriate filename to save the Excel template.

The Excel report templates comprises of the following two worksheets:

- **Weight Report Template.**  
Create a new worksheet for the schedule layout view, by renaming the default worksheet 'Sheet1' as *Weight report template*.
- **Report configuration.**  
Create a new worksheet with the name 'Report configuration' this is the tab where all the fields in the bar list are mapped to fields from the RebarCAD drawing and Title Block.  
Right click on the Schedule Report tab and select Insert...  
Select Worksheet from the Insert dialog and click OK.  
Right Click on the Tab and select Rename, change the worksheet name to *Report configuration*.

Different font Keywords need assigning to cells in the Weight Report to receive the bar list data exported from the Bar List dialog inside RebarCAD.

All the Keywords are described in Section 8.

Define the keywords and cell ranges using the same procedure in Section 3.2 and 3.3

The diagrams below show the keywords and cell ranges used in the default Weight Report by Bars shipped with RebarCAD.

	A	B	C	D	E	F	G	H	I	J	K	L	
1	<b>Weight Report by Bars</b>												
2	No.	Bar Mark	Nos. Bars	Size	Grade	Bend Type	Drawing	Member	Category	Weight of one bar	Weight of all bars		
3													
4	TOTALS :												
5	<b>Keywords</b>	<b>SINo</b>	<b>BarMark</b>	<b>ReportTotalQuantity</b>	<b>TotalQuantity</b>	<b>BarSize</b>	<b>Type</b>	<b>ShapeCodeDisplay</b>	<b>DrawingSheetNo</b>	<b>MemberTitle</b>	<b>ShapeCategory</b>	<b>SingleBarWeight</b>	<b>TotalWeight</b>



	A	B	C	D	E	F	G
1	Field Description	Field	<b>Keywords</b>				
2	Cell range for header section	A1:K2	<b>AddressRangeForHeader</b>				
3	Cell range for footer section	A4:K6	<b>AddressRangeForFooter</b>				
4	Cell range for data section	A3:K3	<b>AddressRangeForData</b>				
5	weight report grouping by	All Schedule Bars	<b>WeightReportBy</b>				
6	Cell range for weight report data field mappings	A9:D21	<b>AddressRangeForWeightReportMappings</b>				

# 5 Create an Excel Summary Weight Report Template

RebarCAD is shipped with several Weight Summary Report Templates.

These are located in the “C:\ProgramData\CADS\AutoCAD XXXX\RebarCAD XXXX.XX\CADS-RC\Templates\Reports\Excel Report Templates\Weight Summary Report” folder.

The default Weight Report is the Weight Summary By Grade & Size as shown below;

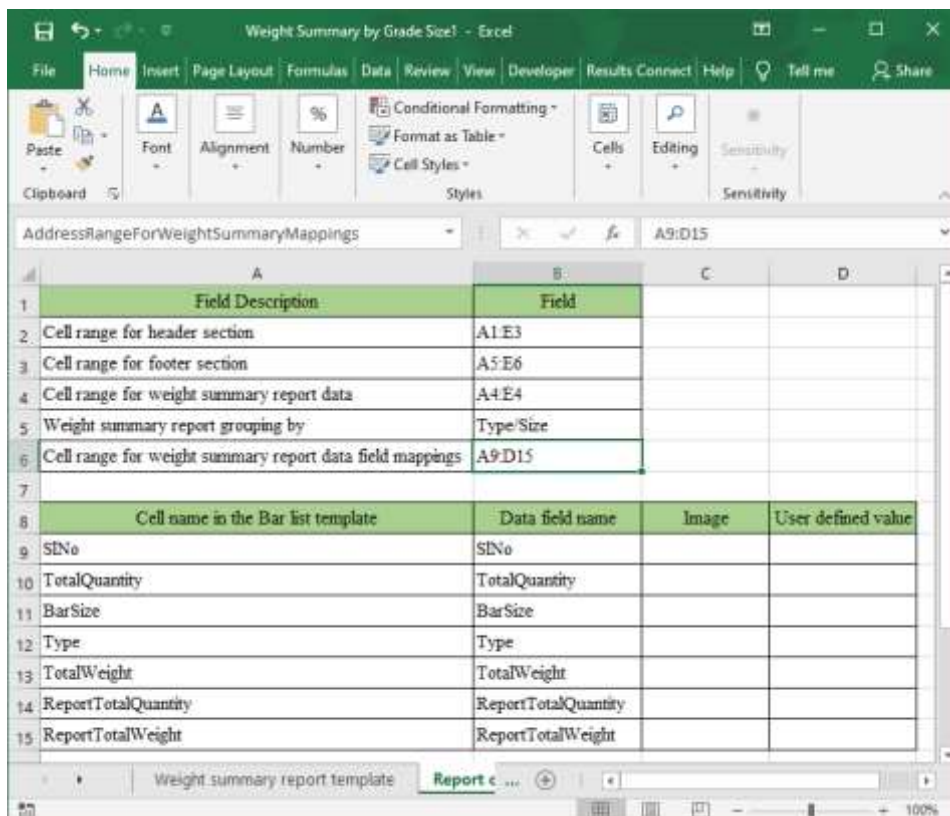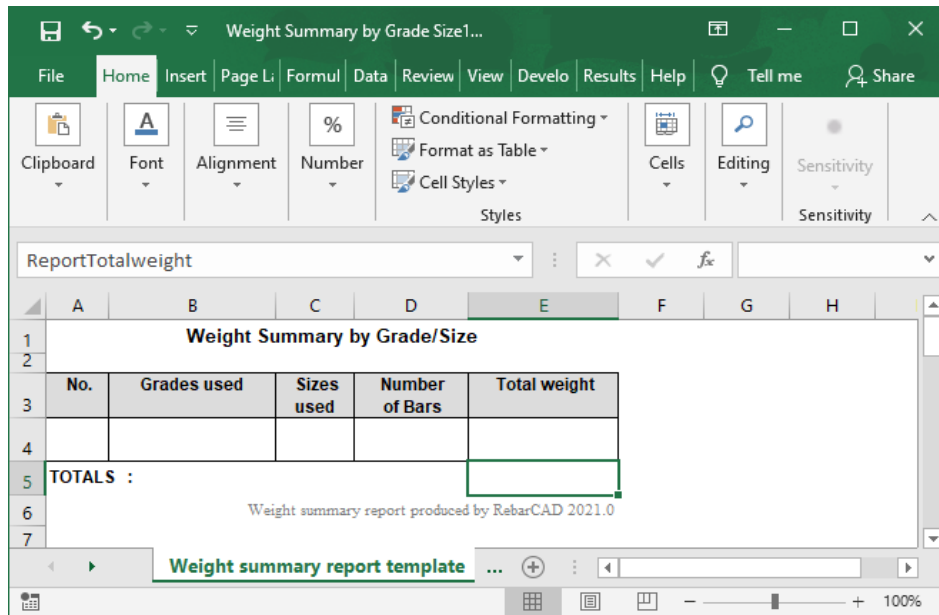

Create a new Excel report template by following the procedure below:

1. Launch the 'Excel' application;
2. Open a new workbook, select the File pull down menu – New - Blank workbook' to create a new Excel workbook.
3. Immediately save the workbook to the "*C:\ProgramData\CADS\AutoCAD XXXX\RebarCAD XXXX.XX\CADS-RC\Templates\Reports\Excel Report Templates\Weight Summary Report*" folder. Select the File pull down menu - Save As, set the 'Save as type' as 'Excel Template (.xltx)' and then type in an appropriate filename to save the Excel template.

The Excel report templates comprises of the following two worksheets:

- **Weight Report Template.**  
Create a new worksheet for the schedule layout view, by renaming the default worksheet 'Sheet1' as *Weight report template*.
- **Report configuration.**  
Create a new worksheet with the name 'Report configuration' this is the tab where all the fields in the bar list are mapped to fields from the RebarCAD drawing and Title Block.  
Right click on the Schedule Report tab and select Insert...  
Select Worksheet from the Insert dialog and click OK.  
Right Click on the Tab and select Rename, change the worksheet name to *Report configuration*.

Font Keywords need assigning to cells in the Weight Report to receive the bar list data exported from the Bar List dialog inside RebarCAD.

All the Keywords are described in Section 8.

Define the keywords and cell ranges using the same procedure in Section 3.2 and 3.3

The diagrams below show the keywords and cell ranges used in the default Weight Summary By Grade & Size shipped with RebarCAD.


	A	B	C	D	E	F										
1	<b>Weight Summary by Grade/Size</b>															
2																
3	<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>No.</th> <th>Grades used</th> <th>Sizes used</th> <th>Number of Bars</th> <th>Total weight</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> <td> </td> <td> </td> <td> </td> </tr> </tbody> </table>						No.	Grades used	Sizes used	Number of Bars	Total weight					
No.	Grades used	Sizes used	Number of Bars	Total weight												
4																
5	TOTALS :															
6	<b>Keywords</b>	SINo	Type	BarSize	ReportTotalQuantity TotalQuantity	TotalWeight										

	A	B	C	D	E	F	G
1	Field Description	Field		<b>Keywords</b>			
2	Cell range for header section	A1:E3	=====	AddressRangeForHeader			
3	Cell range for footer section	A5:E6	=====	AddressRangeForFooter			
4	Cell range for weight summary report data	A4:E4	=====	AddressRangeForData			
5	Weight summary report grouping by	Type/Size	=====	WeightSummaryBy			
6	Cell range for weight summary report data field mappings	A9:D15	=====	AddressRangeForWeightSummaryMappings			


# 6 Configuring Excel Report Templates in RebarCAD

The Excel Report Templates are configured inside the Configure Bar List Settings dialog in the Report Templates Tab.

1. Open RebarCAD
2. Select the Configuration Centre from the RebarCAD Ribbon, Configuration Panel.
3. Select the Configure Bar List Settings.

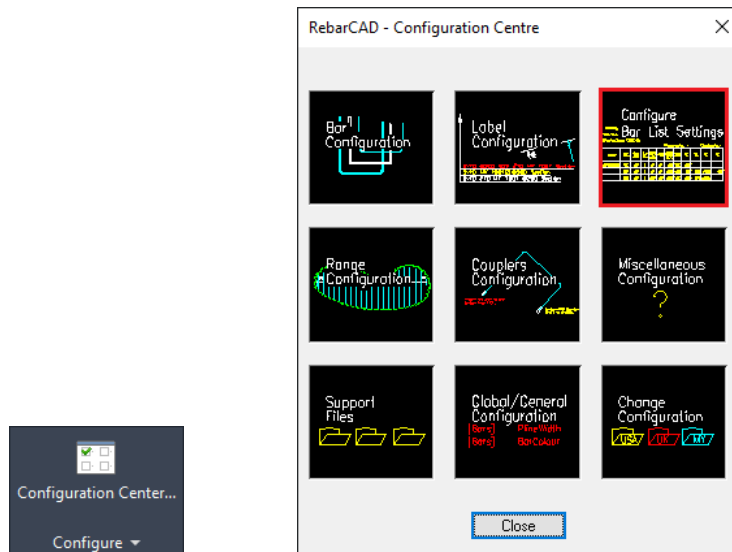

4. Go to the Reports Tab.

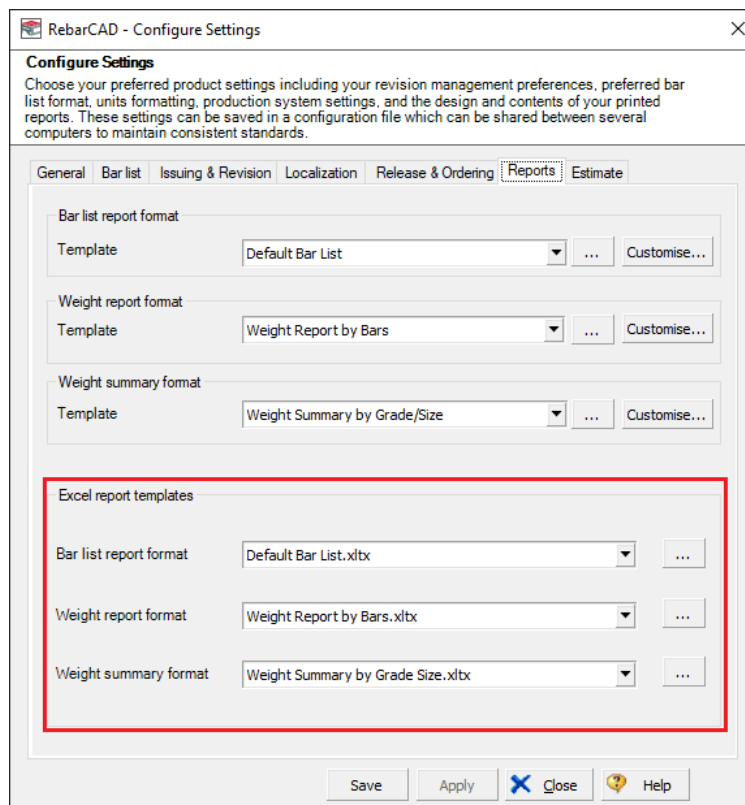

5. Select the browse button alongside the report format to be configured.
6. Select and open the required Excel Template.
7. Click the Save button to save the change to your configured Bar List Configuration File.
8. The Save default location is “C:\ProgramData\CADS\AutoCAD XXXX\RebarCAD XXXX.XX\CADS-RC”

The following are the default locations for the Excel report templates

### **Bar List Report Format**

“C:\ProgramData\CADS\AutoCAD XXXX\RebarCAD XXXX.XX\CADS-RC\Templates\Reports\Excel Report Templates\Schedule Report”


### **Weight Report**

“C:\ProgramData\CADS\AutoCAD XXXX\RebarCAD XXXX.XX\CADS-RC\Templates\Reports\Excel Report Templates\Weight Report”


### **Weight Summary**

“C:\ProgramData\CADS\AutoCAD XXXX\RebarCAD XXXX.XX\CADS-RC\Templates\Reports\Excel Report Templates\Weight Summary Report”



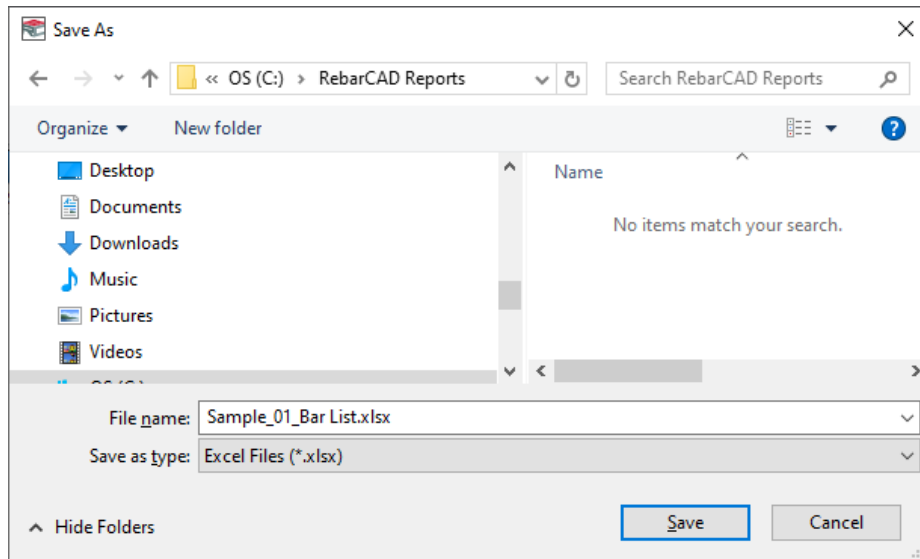


8. Answer Yes to View the file

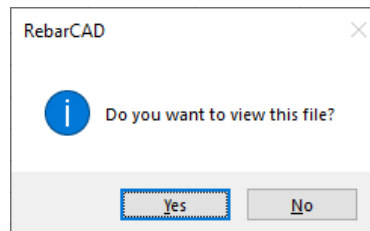


9. The Bar List is displayed inside the RebarCAD Excel Viewer.

REBAR-CAD BAR LIST																		
CADS-USA INC.																		
3	Customer :										Dwg. No : 01							
4	Project :										Sheet No : 1							
5	Location :										Date : 07/08/2020							
6	Material For :										Revised :							
7	JobNo :										Drawn by :							
8	Drawing Sheet No : 01																	
9	Item	No. Pcs	Size	Length	Mark	Type	A	B	C	D	E	F	G	H	J	K	O	R
10		8	#6	9144				30'-0"										
11		10	#6	9144				30'-0"										
12		7	#6	9144				30'-0"										
13		1	#6	5257.8	620a	117		0'-6"	16'-9"									
14																		
15		1	#6	7702.55	620h	117		0'-6"	24'-9 1/2"									
16		8	#6	9144	621	117		0'-6"	29'-6"									
17		1	#6	9144	622	117		0'-6"	29'-6"									
18		1	#6	10439.4	623	117		0'-6"	33'-9"									
19		1	#6	3003.55	624a	117		0'-6"	9'-4 1/2"									
20																		
21		1	#6	5207	624h	117		0'-6"	16'-7"									
22		8	#6	9144	625	117		0'-6"	29'-6"									
23		10	#6	9144	627	117		0'-6"	29'-6"									
24		10	#6	8515.35	628	117		0'-6"	27'-3 1/2"									
25		7	#6	9144	630	117		0'-6"	29'-6"									
26		7	#6	3060.7	631	117		0'-6"	9'-6 1/2"									
27		13	#6	9144	633	117		0'-6"	29'-6"									
28		13	#6	5441.95	634	117		0'-6"	1'-4 1/2"									
29		8	#6	8623.3	635	117		0'-6"	27'-3 1/2"	0'-6"								
30		13	#6	9144	637	117		0'-6"	29'-6"									
31		13	#6	10293.35	638	117		0'-6"	33'-3 1/2"									
32		13	#6	9144	640	117		0'-6"	29'-6"									
33		13	#6	1009.65	641	117		0'-6"	2'-9 3/4"									
34		8	#6	5899.15	642	117		0'-6"	18'-4 1/2"	0'-6"								
35		14	#6	3924.3	643	117		0'-6"	11'-10 1/2"	0'-6"								

10. Select the Print option to open the Preview Dialog.

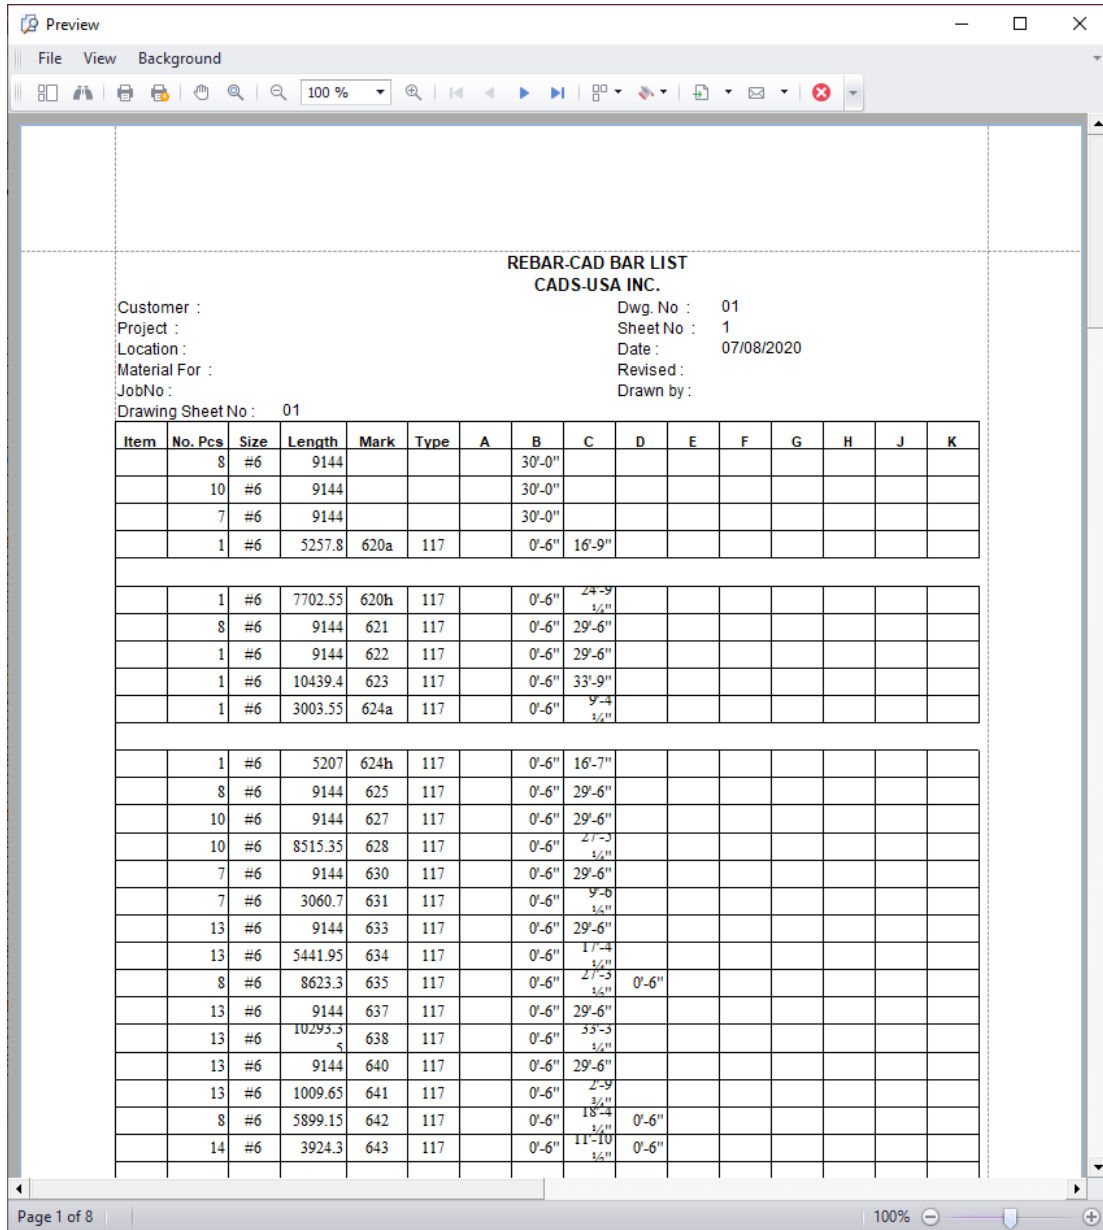

11. The Bar list can be printed, exported or sent via an email in either PDF or Image format.

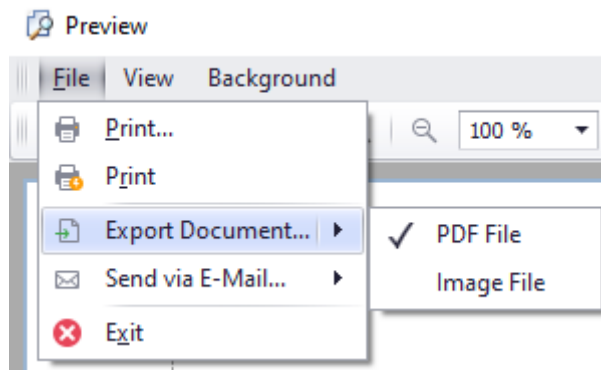

## 8 Excel Template Database fields

The database fields that can be mapped in the Excel report templates can be classified as below:

- Data fields for header and footer;
- Data fields for bar data.

### 8.1 Data fields for header and footer

The list of all the data fields, which can be mapped in the header and footer are given below:

Data field name	Description	Remarks
JobNoDisplay	<b>Job Number</b> value filled in the <b>Edit Header and Footer</b> dialog	
DrawingSheetNo	<b>Drawing Number</b> value filled in the <b>Edit Header and Footer</b> dialog	Drawing Number is taken from the configured title block.
CustomerName	<b>Client</b> value filled in the <b>Edit Header and Footer</b> dialog	
Project	<b>Project Name</b> value filled in the <b>Edit Header and Footer</b> dialog	
Address	<b>Address</b> value filled in the <b>Edit Header and Footer</b> dialog	
SiteReference1	<b>Site Reference 1</b> value filled in the <b>Edit Header and Footer</b> dialog	
SiteReference2	<b>Site Reference 2</b> value filled in the <b>Edit Header and Footer</b> dialog	
PreparedDate	<b>Date Prepared</b> value filled in the <b>Edit Header and Footer</b> dialog	
PreparedBy	<b>Drawn By</b> value filled in the <b>Edit Header and Footer</b> dialog	
RevisionMark	<b>Revision Mark</b> value filled in the <b>Edit Header and Footer</b> dialog	Revision will be automatically added when the Drawing Sheet has been issued.
RevisionLevel	Not available yet	

CheckedDate	<b>Date Issued</b> value filled in the <b>Edit Header and Footer</b> dialog.	Revision date will be automatically added when the Drawing Sheet has been issued.
CheckedBy	<b>Checked by</b> value filled in the <b>Edit Header and Footer</b> dialog.	
FootNote1	<b>Footnote 1</b> value filled in the <b>Edit Header and Footer</b> dialog.	
FootNote2	<b>Footnote 2</b> value filled in the <b>Edit Header and Footer</b> dialog.	
Location	<b>Location</b> value filled in the <b>Edit Header and Footer</b> dialog.	
MaterialFor	<b>Material For</b> value filled in the <b>Edit Header and Footer</b> dialog.	
DrawingSetNumber	<b>Drawing Set Number</b> value filled in the <b>Edit Header and Footer</b> dialog.	
SheetNo	Report page number.	
IssueType	Holds the first letter of issue type in the dialog while issuing.	Issue Type will be automatically added when the Drawing Sheet has been issued.
UserField1	<b>User Field 1</b> value filled in the Edit Header and Footer dialog.	
UserField2	<b>User Field 2</b> value filled in the Edit Header and Footer dialog.	
UserField3	<b>User Field 3</b> value filled in the Edit Header and Footer dialog.	
UserField4	<b>User Field 4</b> value filled in the Edit Header and Footer dialog.	
UserField5	<b>User Field 5</b> value filled in the Edit Header and Footer dialog.	
UserField6	<b>User Field 6</b> value filled in the Edit Header and Footer dialog.	
UserField7	<b>User Field 7</b> value filled in the Edit Header and Footer dialog.	
UserField8	<b>User Field 8</b> value filled in the Edit Header and Footer dialog.	

UserField9	<b>User Field 9</b> value filled in the Edit Header and Footer dialog.	
UserField10	<b>User Field 10</b> value filled in the Edit Header and Footer dialog.	
UserField11	<b>User Field 11</b> value filled in the Edit Header and Footer dialog.	
UserField12	<b>User Field 12</b> value filled in the Edit Header and Footer dialog.	
UserField13	<b>User Field 13</b> value filled in the Edit Header and Footer dialog.	
UserField14	<b>User Field 14</b> value filled in the Edit Header and Footer dialog.	
UserField15	<b>User Field 15</b> value filled in the Edit Header and Footer dialog.	
UserField16	<b>User Field 16</b> value filled in the Edit Header and Footer dialog.	
UserField17	<b>User Field 17</b> value filled in the Edit Header and Footer dialog.	
UserField18	<b>User Field 18</b> value filled in the Edit Header and Footer dialog.	
UserField19	<b>User Field 19</b> value filled in the Edit Header and Footer dialog.	
UserField20	<b>User Field 20</b> value filled in the Edit Header and Footer dialog.	
Status	Not available yet.	
CompanyName	Not available yet.	
CompanyId	Not available yet.	
CustomerId	Not available yet.	
Status	Not available yet.	
AttachDiagramPath	Holds the path of the shape diagram location (where the WMF file is placed).	
StruckOutFormat	Hold the strikeout format given in the config setting under issue and revision.	

## 8.2 Data fields for bar data

The list of all the data fields, which can be used in the data row are listed in this section.

Data field name	Description	Remarks
Barmark	Bar mark for non-tapered straight bars in US DYI.	
DispBarmark	Bar mark.	
BarMarkDiagram	Shape/bend type diagram.	
BarSize	Bar size.	
Diameter	Bar diameter.	
AlternateSize	Alternate bar size.	
DrawingField	Drawing file ID.	For project based.
DrawingSheetNo	Drawing sheet number.	
GroupId	Null.	
IsDiagramLine	Flag to indicate whether the data line is a diagram line or not.	
IsStriked	Flag to indicate whether the data line has been struck out or not.	
IsOrdered	Flag to indicate whether the data line has been ordered or not.	
IsFirstTaperedBarWeightZero	Flag to indicate whether the data line is the first tapered bar weight is zero or not.	
Wrap	Flag to indicate whether the data line is a wrapped line or not.	
JobNumber	Default value 2000	

Length	Length of the bar.	
GrossLength	Gross length of the bar.	
NettLength	Nett Length of the bar.	
TotalLength	Total length of the bar.	
LineNo	Schedule/Bar List line number.	
MemberTitle	Member title.	
Multi	Multiple value given in the bar dialog.	Set in the Multi field in the draw bar dialog.
Multiplier	Bar multiplier (No. of members).	Set in the Member Title dialog.
Notes	Schedule/Bar List notes.	Added to an inserted line in the Bar List.
BarLabelNotes	Bar label notes.	Added to the bar label in the draw bar dialog.
ExtraLabelNotes1	Extra bar label notes 1.	Added to the bar label in the draw bar dialog.
ExtraLabelNotes2	Extra bar label notes 2.	Added to the bar label in the draw bar dialog.
ExtraLabelNotes3	Extra bar label notes 3.	Added to the bar label in the draw bar dialog.
ExtraLabelNotes4	Extra bar label notes 4.	Added to the bar label in the draw bar dialog.
OrderedLineNo	Ordered line number in the schedule/bar list (Based on the sorting and segregation).	
PageNo	Report page number for particular bar mark.	
DisplayPageNo	Report page number to be displayed.	
TotalPageNo	Total page number in the report.	
Qty	Quantity of bars.	

QuantityDisplay	Always *.	shows only if Qty and multi is an integer, for example "1*8". but it's not possible for multi to have integer so always *.
TotalQuantity	Total quantity of bars.	
ReleaseNumber	Release number.	Set in the Releases dialog.
Release	Release.	Set in the Releases dialog.
RevisionMark	Revision mark.	Revision will be automatically added when the Drawing Sheet has been issued.
ShapeCategory	Shape/Bend type category.	
ShapeCode	Shape code/Bend type.	
ShapeCodeDisplay	Shape code to be displayed based on ReportAsPartial in GConfig.	
ShapeCodeDiagram	Shape code diagram is null always.	Origin from shape code data table in MM.
TotalWeight	Total weight of the bar.	Formatted weight of total weight.
UnitWeight	Unit weight of the bar.	
WeightPerBar	Weight per bar.	
SingleBarWeight	Weight of single bar.	Formatted Weight of weight per bar.
SingleBarTotalWeight	Formatted total weight of weight per bar.	Formatted total weight of weight per bar.
ReportTotalWeight	Total weight of the bars in the entire report.	
ReportSingleBarWeight	Total weight of single bars in the report with its units.	
ReportWeight	Formatted output of total weight of total weight.	

TotalWeightLeft	Total weight of bars that are not issued.	
TotalWeightWithOutStrikeBars	Total weight of bars that are not struck out.	
RptTotalWeightIssued	Total weight of the bars issued in the entire report.	
RptTotalWeightLeft	Total weight of the bars that are not issued in the entire report.	
TotalWgtDisplayUnit	Display unit for the total weight of bars.	
Type	Bar Type/Grade.	
TypeSize	Bar Type/Grade and size.	
TypeOfRange	Bar range type (To identify tapered bars).	
RevMark	Revision mark of the bar.	Revision will be automatically added when the Drawing Sheet has been issued.
RevisionLevel	Revision level of the bar.	
IssueStatus	Issue status.	Issue Status will be automatically added when the Drawing Sheet has been issued.
DrawingSheetRevisionMark	Drawing sheet revision mark.	Revision will be automatically added when the Drawing Sheet has been issued.
WmfFilePath	The folder in which the wmf file of the shape/bend type diagram is present.	
DispValue	Not available.	
SegregatedColumn	Holds segregated values based on first sort option given in Format bar list.	Holds all the segregated values based on first sort option (for example if we use first sort based on bar size and the page contains

		size of 7,10,12 then this field holds <b>7,10,12</b> ).
Country	Based on country it holds the below value. "UK", "US", "IN"	
WeightFormatString	Holds the string format for <b>weight</b> given under localisation setting in MM Config.	
TotalWeightFormatString	Holds the string format for <b>total weight</b> given under localisation setting in MM Config.	
MemberDescription	Member description.	Set in the Member Title dialog.
MemberSortId	ID based on custom member sorting.	Custom sorting of member titles available in the Format Bar List Dialog with the custom option set.
ReleaseSortId	ID based on custom Release sorting.	Custom sorting of releases available in the Format Bar List Dialog with the custom option set.
ReleaseDescription	Release description.	Set in the Releases dialog.
BidItemId	Always empty.	MM db contains value but report dataset doesn't.
BidItem	Bid Item.	
BidItemSortId	Always empty.	MM db contains value but report dataset doesn't.
BidStructureId	Always empty.	MM db contains value but report dataset doesn't.
BidStructureSortId	Always empty.	MM db contains value but report dataset doesn't.
BidStructure	Bid structure.	
BillingCodeId	Always empty.	MM db contains value but report datasets do not.
BillingCode	Billing code.	

DisplaySpacing	Bar spacing to be displayed.	
CouplerLabel1	Coupler label notes for bar end 1.	
CouplerLabel2	Coupler label notes for bar end 2.	
CouplerType1	Coupler type for bar end 1.	
CouplerType2	Coupler type for bar end 2.	
CouplerQuantity1	Coupler quantity for bar end 1.	
CouplerQuantity2	Coupler quantity for bar end 2.	
CouplerCatalogNo1	Coupler catalog number for bar end 1.	
CouplerCatalogNo2	Coupler catalog number for bar end 2.	
CouplerDescription1	Coupler description for bar end 1.	
CouplerDescription2	Coupler description for bar end 2.	
A	Dimension of the Leg <b>A</b> .	
B	Dimension of the Leg <b>B</b> .	
C	Dimension of the Leg <b>C</b> .	
D	Dimension of the Leg <b>D</b> .	
E	Dimension of the Leg <b>E</b> .	
F	Dimension of the Leg <b>F</b> .	
G	Dimension of the Leg <b>G</b> .	
H	Dimension of the Leg <b>H</b> .	
I	Dimension of the Leg <b>I</b> .	
J	Dimension of the Leg <b>J</b> .	
K	Dimension of the Leg <b>K</b> .	

O	Dimension of the Leg <b>O</b> .	
R	Dimension of the Leg <b>R</b> .	
TotalStraightBarWeight	Total weight of the straight bar.	
TotalBentBarWeight	Total weight of the bent/light bar.	
TotalLinkWeight	Total weight of the link/heavy bar.	
TotalSpiralBarWeight	Total weight of the spiral bar.	
GroupGrossLength	Sum of GrossLength based on grouping given in the template.	For example: if the template is weight report by member, then it holds the sum of GrossLength for each member.
GroupLength	Sum of Length based on grouping given in the template.	For example: if the template is weight report by member, then it holds the sum of Length for each member.
GroupNettLength	Sum of Nett Length based on grouping given in the template.	For example: if the template is weight report by member, then it holds the sum of Nett Length for each member.
GroupTotalLength	Sum of TotalLength based on grouping given in the template.	For example: if the template is weight report by member, then it holds the sum of TotalLength for each member.
GroupTotalQuantity	Sum of TotalQuantity based on grouping given in the template.	For example: if the template is weight report by member, then it holds the sum of TotalQuantity for each member.
GroupTotalWeight	Sum of TotalWeight based on grouping given in the template.	For example: if the template is weight report by member, then it holds the sum of TotalWeight for each member.

GroupTotalWeightIssued	Sum of TotalWeightIssued based on grouping given in the template.	For example: if the template is weight report by member, then it holds the sum of TotalWeightIssued for each member.
GroupTotalWeightLeft	Sum of TotalWeightLeft based on grouping given in the template.	For example: if the template is weight report by member, then it holds the sum of TotalWeightLeft for each member.
GroupTotalWeightWithOutStrikeBars	Sum of TotalWeightWithOutStrikeBars is based on grouping given in the template.	For example: if the template is weight report by member, then it holds the sum of TotalWeightWithOutStrikeBars for each member.
GroupTotalStraightBarWeight	Sum of TotalStraightBarWeight based on grouping given in the template.	For example: if the template is weight report by member, then it holds the sum of TotalStraightBarWeight for each member.
GroupTotalBentBarWeight	Sum of TotalBentBarWeight based on grouping given in the template.	For example: if the template is weight report by member, then it holds the sum of TotalBentBarWeight for each member.
GroupTotalLinkWeight	Sum of TotalLinkWeight based on grouping given in the template.	For example: if the template is weight report by member, then it holds the sum of TotalLinkWeight for each member.
GroupTotalSpiralBarWeight	Sum of TotalSpiralBarWeight based on grouping given in the template.	For example: if the template is weight report by member, then it holds the sum of TotalSpiralBarWeight for each member.