



RebarCAD

User Guide



GLOBAL CONSTRUCTION
SOFTWARE AND SERVICES



Microsoft
Partner

RebarCAD

VERSION 2026.0

USER GUIDE

Program version : 2026.0

User Guide Issue : 6

DATE OF ISSUE : Sep 2025

Upgrade Note Records

For future reference, please record the details of Upgrade Notes as you receive them in the table below:

Upgrade Note No.	Date Received	Received by

RebarCAD

COPYRIGHT 2025

Computer and Design Services Limited,
Arrowsmith Court,
10, Station Approach,
Broadstone,
Dorset, BH18 8AX
UK

No part of this manual may be reproduced, transmitted, stored in a retrieval system, or translated into any language in any form or by any means without the written permission of CADS.

Whilst the description of CADS programs contained in this user manual is as accurate and upto-date as possible, it is our policy to continuously improve and expand the facilities which the programs offer.

We therefore reserve the right to change the program specifications at any time without prior notice. AutoCAD, AutoLISP, ARX and ADS are registered trademarks of Autodesk Inc. All other trademarks acknowledged.

Important Notice

Please read this –

All due care has been taken to ensure that the data produced by this program is accurate. However, it remains the responsibility of the user to verify that any design based upon this data meets all applicable standards. Please refer to the CADS Software Maintenance and Licence Agreement for detailed information.

Computer and Design Services Ltd.,
Arrowsmith Court,
Broadstone,
Dorset,
BH18 8AX,
UK
UK (Sales) : +44 (0) 1202 603031
UK (Support) : +44 (0) 1202 603733
UK (Fax) : +44 (0) 1202 690284
UK Email (Sales) : sales@cadcs.co.uk
UK Email (Support): support@cadcs.co.uk
UK Website : <http://www.cadcs.co.uk>

Contact Details for North America:

TOLL FREE (Sales) : 800-470-4566
TOLL FREE (Support) : 800-609-7916
(9am - 5pm USA East Coast Time)
TOLL FREE (Fax) : 800-511-4566
Email (Sales/Business) : office@cadcsusa.com
Email (Support) : support@cadcs.co.uk
Website : www.cadcsusa.com

If contacting the UK direct, please dial the 011 international access code before dialing the UK 44 country code.

Contents

1	Introduction	1-14
1.1	Overview	1-14
1.2	Installation	1-16
2	Bar Organisation	2-17
2.1	Drawing Bars	2-17
2.1.1	Draw Bar	2-17
2.1.2	Draw Range	2-18
2.2	The Bar Set	2-18
2.3	Marks, Views & Sets	2-19
2.3.1	New Mark	2-19
2.3.2	Add View	2-20
2.3.3	New Set	2-20
2.4	Bar Views	2-20
2.4.1	Side View	2-20
2.4.2	Left View	2-21
2.4.3	Right View	2-21
2.4.4	Plan View	2-21
2.5	Bar Alignments	2-21
2.5.1	Outer Alignment	2-21
2.5.2	Inner Alignment	2-21
2.5.3	Centre Alignment	2-21
2.6	Bar Styles	2-22
2.6.1	Centre Style	2-22
2.6.2	Profile Style	2-22
2.7	Release Codes	2-22
2.8	Bar Manipulation	2-22
2.8.1	Erase	2-22
2.8.2	Copy	2-23
2.8.3	Mirror	2-24
2.8.4	Array	2-24
3	RebarCAD Manager	3-25
3.1	Introduction	3-25
3.1.1	General Items	3-26
3.1.2	Project Details	3-27
3.1.3	Drawing Weight Summary	3-28

3.1.4	Measurement System	3-28
3.1.5	Drawing Details	3-29
3.1.6	Configuration	3-30
3.1.7	Estimated Weight dialog	3-35
3.1.8	Bar List.....	3-36
4	Bar Drawing.....	4-38
4.1	Bar Drawing Dialog.....	4-38
4.1.1	Bend Type	4-39
4.1.2	Un-scheduled Bar.....	4-39
4.1.3	View.....	4-39
4.1.4	Alignment.....	4-39
4.1.5	Bar Style	4-40
4.1.6	Bar Label Data	4-40
4.1.7	Set Release Code.....	4-42
4.1.8	Extract Data.....	4-42
4.1.9	Dimension Data.....	4-42
4.1.10	Set Sketch Bar	4-42
4.1.11	Suppress c/c Display.....	4-42
4.1.12	Suppress Label Multiply	4-42
4.1.13	Current Release Code.....	4-42
4.1.14	Set No.....	4-43
4.1.15	Couplers	4-43
4.2	Draw Bar Command.....	4-43
4.2.1	New Mark.....	4-43
4.2.2	Add View	4-43
4.2.3	New Set	4-43
4.3	Range Drawing.....	4-44
4.3.1	Range Options.....	4-44
4.3.2	Standard Range Types.....	4-47
4.3.3	Tapered Range Types.....	4-48
4.3.4	Bar Run Range Types.....	4-49
4.4	Draw Range Commands.....	4-49
4.4.1	New MARK	4-49
4.4.2	Add View	4-50
4.4.3	New SET	4-50
4.5	Utilities to Assist in Bar & Range Drawing	4-50
4.5.1	CADS Input Application	4-50
4.5.2	Extra Snaps.....	4-50

4.5.3	Lap Bar	4-52
4.5.4	Tolerance Bar Leg.....	4-52
4.5.5	Label Aligning Options	4-52
5	Labelling	5-54
5.1	Labelling	5-54
5.1.1	Set Release Code.....	5-54
5.1.2	Label Bar.....	5-59
5.1.3	New Label.....	5-59
5.1.4	Masking a Label.....	5-59
5.1.5	Tick & Tag	5-61
5.1.6	Leader 1 (Leader with Arrow)	5-61
5.1.7	Leader 2 (Leader with Dot)	5-62
5.1.8	Leader 3 (Leader with no end block)	5-62
5.1.9	More.....	5-63
5.1.10	Tag to Line.....	5-63
5.1.11	Mult. Arrow Leader 1	5-63
5.1.12	Mult. Arrow Leader 2	5-64
5.1.13	Next Bar Mark	5-64
5.1.14	Set Release Code by Entity.....	5-65
5.1.15	Tools & Symbols.....	5-65
6	Bar Editing.....	6-67
6.1	Stretch Edit.....	6-67
6.1.1	Radial Range Types	6-68
6.1.2	Varying and Trapezoidal Tapered Ranges.....	6-68
6.1.3	Run To Path and Alternate Run To Path	6-68
6.1.4	Linear Tapered Range Types	6-68
6.2	Stretch To Stock	6-68
6.3	Bar/Label Edit.....	6-70
6.3.1	Bend Type	6-71
6.3.2	View, Alignment & Bar Style	6-71
6.3.3	Bar Label Data	6-72
6.3.4	Suppress c/c Display.....	6-74
6.3.5	Suppress Label Multiply	6-74
6.3.6	First Bar	6-74
6.3.7	Last Bar.....	6-75
6.3.8	Release Code.....	6-75
6.4	Range Edit	6-75
6.4.1	Information	6-76

6.4.2	Adjust Ends.....	6-76
6.4.3	Edit Range	6-76
6.4.4	RebarCAD Range Edit	6-77
6.4.5	RebarCAD Multiple Range Edit - Group List.....	6-78
6.5	Strike Out Set	6-82
6.6	Change Release Code.....	6-82
6.7	View / Set Toggles.....	6-82
6.7.1	Change SET to View.....	6-82
6.7.2	Change View to SET.....	6-83
6.8	More.....	6-83
6.9	Change Bar Style	6-83
6.10	Change Bar View	6-83
6.11	Add Entity To View.....	6-84
6.12	Add Text To View	6-84
6.13	Redraw RC EntMore->Redraw RC entity.....	6-85
7	Group Layering Option (GLO).....	7-86
7.1	Setting Up the Layers	7-86
7.2	Using the Group Layering Option	7-86
7.2.1	Show Group.....	7-87
7.2.2	Show Group ONLY.....	7-87
7.2.3	Show All Groups	7-88
7.2.4	Suppress Group.....	7-88
7.2.5	Suppress Group ONLY	7-88
7.2.6	Suppress All Groups	7-88
7.2.7	Change to Other Group.....	7-89
7.3	Group Layering and Non - RC Entities.....	7-89
7.4	Group Layering Option.....	7-89
7.5	RC Entities	7-90
7.6	Naming the layers	7-91
7.7	Defining the Layer Groups	7-92
7.8	Group Layering Option Definition Example	7-93
8	Outlines	8-97
8.1	General Description	8-97
8.1.1	Beam Sect/Elev	8-97
8.1.2	Column Sect/Elev	8-97
8.1.3	Slab Sections	8-98
8.1.4	Miscellaneous	8-98
8.2	Freehand Outline	8-98

8.3	Detailers	8-99
9	Enquiry	9-101
9.1	Bar Tooltips	9-101
9.2	Show Bars.....	9-101
9.3	Select Bars.....	9-101
9.4	Configuration	9-102
9.5	Bar Configuration	9-103
9.5.1	Reinf. Bar Layer	9-104
9.5.2	Profile Line Colour	9-104
9.5.3	Bar Section Layer.....	9-104
9.5.4	Pline Width = Diameter	9-105
9.5.5	Draw Over Sized Ends & Over Sized End Factor	9-105
9.5.6	Bend type Window.....	9-105
9.5.7	Display SET Warnings	9-105
9.5.8	New View DLG Appears	9-105
9.5.9	Rounding / Match Bars	9-105
9.5.10	Bar Marking.....	9-107
9.5.11	Special Bars	9-110
9.6	Label Configuration	9-116
9.6.1	Bar Label Layer	9-116
9.6.2	Bar Label Text Style	9-116
9.6.3	Bar Label Width Factor.....	9-117
9.6.4	Bar Label Height	9-117
9.6.5	Label Question Default	9-117
9.6.6	Notes File	9-117
9.6.7	Bent, Straight and Tapered Label Formats	9-117
9.6.8	Bar Reference Text Layer	9-118
9.6.9	Bar Ref. Text Style	9-119
9.6.10	Bar Ref. Width Factor	9-119
9.6.11	Bar Ref. Height	9-119
9.6.12	Bar Ref. Formatting.....	9-119
9.6.13	Tick & Tag Configuration	9-120
9.6.14	Leader Configuration	9-124
9.7	Range Configuration	9-126
9.7.1	Indicator Line Layer.....	9-126
9.7.2	End Marker Layer	9-127
9.7.3	RC Dot Layer	9-127
9.7.4	Range Text Layer	9-127

9.7.5	Intermediate Layer.....	9-127
9.7.6	Staggered Text	9-128
9.7.7	Alternate Text (1).....	9-128
9.7.8	Alternate Text (2).....	9-128
9.7.9	First Bar Offset	9-128
9.7.10	Last Bar Offset.....	9-128
9.7.11	Start of Range Snap.....	9-128
9.7.12	Other Range Snaps.....	9-129
9.7.13	Draw RC Dots	9-129
9.7.14	Draw Range Text	9-129
9.7.15	New View DLG Appears	9-129
9.7.16	Runs.....	9-130
9.8	Coupler Configuration.....	9-131
9.8.1	Lenton Coupler Configuration.....	9-132
9.8.2	MacAlloy Coupler Configuration	9-135
9.9	Miscellaneous Configuration	9-138
9.9.1	Section Marker Configuration.....	9-139
9.9.2	More Miscellaneous Configuration.....	9-139
9.10	Support Files	9-141
9.10.1	Bar Dims Txt Files	9-142
9.10.2	9.10.2. Bar Types File	9-143
9.10.3	Bar Bending Data File.....	9-144
9.10.4	Bar Bend Types File	9-144
9.10.5	Dialog Control File.....	9-145
9.11	Global / General Configuration.....	9-145
9.12	Change Configuration	9-146
9.13	Bar List Configuration.....	9-147
9.13.1	Bar List on Drawing Configuration	9-147
9.13.2	Bent Bar List on Drawing Configuration.....	9-148
9.13.3	Weights Configuration	9-150
9.13.4	Miscellaneous Configuration	9-151
9.13.5	Revision Config.....	9-152
9.13.6	Bar List Format	9-154
10	Utilities.....	10-156
10.1	Auditing.....	10-156
10.1.1	Drawing Audit	10-156
10.1.2	Check RC Database.....	10-156
10.1.3	Match Bars	10-158

10.1.4	Compact Bar Marks.....	10-158
10.1.5	Redraw RC Entities	10-158
10.1.6	Sketch Mode	10-159
11	Bar List and Output Options	11-160
11.1	Bar List Display Overview.....	11-160
11.1.1	Sheet	11-160
11.1.2	Release Code Field	11-161
11.1.3	Site Ref. 1, Site Ref. 2, Date Prep., Prep. By, Date Revised, Revised By, Footnote 1 and Footnote 2.....	11-161
11.1.4	Bar List Mode	11-161
11.1.5	Dimension Rounding Pick Box.....	11-161
11.1.6	Block Start, Block End & All Buttons	11-161
11.1.7	Format Button.....	11-162
11.1.8	Edit Button	11-162
11.1.9	Review Button.....	11-162
11.1.10	Weights Button	11-162
11.1.11	Print Button.....	11-162
11.1.12	SDL Print Button.....	11-163
11.1.13	Text.....	11-163
11.1.14	Rev. Head.....	11-163
11.1.15	Output Options	11-163
11.1.16	Display Mode	11-163
11.1.17	OK Button.....	11-163
11.1.18	Cancel Button.....	11-163
11.2	Format Options	11-164
11.2.1	Sort Option.....	11-164
11.2.2	Move Option	11-165
11.2.3	Reposition Option	11-165
11.2.4	Combine Option.....	11-165
11.2.5	Compact Option	11-165
11.2.6	User Format 1	11-166
11.2.7	User Format 2	11-166
11.3	Edit Options.....	11-166
11.3.1	Insert Option	11-166
11.3.2	Delete Option.....	11-166
11.3.3	Headers Option	11-167
11.3.4	Attach Option (Attach slide to special bars or standard bend types).....	11-168
11.3.5	Detach Option (Detach slide from special bars or standard bend types).....	11-170

11.4	Review Options	11-170
11.4.1	Issue	11-171
11.4.2	View Issues	11-171
11.4.3	Move Lines	11-171
11.4.4	Bar List Status.....	11-171
11.4.5	Revision Config.....	11-172
11.4.6	Unissue.....	11-172
11.4.7	Line Revision - Manual Control	11-172
11.5	Weights Option	11-173
11.6	Schedule Printout Option	11-174
11.6.1	Using the Print Option	11-174
11.7	Bar List Printout Option Using SDL file.....	11-175
11.7.1	SDL File option	11-176
11.7.2	Output Required option.....	11-176
11.7.3	Weights	11-177
11.8	Output Options	11-177
11.8.1	Bar List on Drawing	11-178
11.8.2	Bent Bar List on Drawing.....	11-178
11.8.3	Text List on Drawing.....	11-179
11.8.4	Output Bar Tags	11-179
11.8.5	Standard File Output (CSF).....	11-180
11.8.6	Formwork File Output (CSG)	11-180
11.8.7	Links to Production Software	11-180
11.8.8	Unlock Release Code.....	11-182
11.8.9	External Routines	11-182
12	Special Bars	12-185
12.1	Overview	12-185
12.2	Quick Special Bar Option.....	12-185
12.3	Quick Special Bar Example	12-188
13	Couplers	13-193
13.1	Overview of the RebarCAD coupler facility	13-193
13.2	RebarCAD coupler facility commands.....	13-193
13.2.1	Add/Edit Coupler.....	13-194
13.2.2	Add Symbols/Labels	13-197
13.2.3	Couple Bars	13-198
13.2.4	Couple To Face	13-199
13.2.5	Connect To Coupler.....	13-200
13.2.6	Annotate Couplers	13-201

13.2.7	Coupler or Thread	13-202
13.2.8	Symbol/Label to attach	13-203
13.2.9	Symbol Type	13-203
14	OverStock Length Feature.....	14-204
14.1	Overview of the RebarCAD Over Stock Feature.	14-204
14.2	Drawing Bars Beyond Stock Length	14-204
14.3	Editing of the RebarCAD Over Stock Bars	14-209
14.4	Configuration Options for Over Stock Bars.....	14-210
14.5	Configuration Options for Over Stock Bars.....	14-212
15	Appendix A - Important Operating Notes	15-217
16	Appendix B - RebarCAD Configuration Reference	16-219

1 Introduction

Chapter Objectives

This chapter provides an overview of RebarCAD 2026.0 for AutoCAD 2026 & Architectural Desktop 2026.

1.1 Overview

RebarCAD is a program designed to make detailing and listing of reinforcement within the AutoCAD environment accurate and cost effective.

This version of the program has been designed specifically to run under AutoCAD 2026 & Architectural Desktop 2026 for Windows 10 & 11 and makes full use of the many features it offers. Some of the key features that RebarCAD provides include the following:

- ▶ Support of standard and non-standard bend types to the ACI Detailing Manual 1994, CRSI Manual of Standard Practice 1998 and the RSIC Manual OF Standard Practice 1995;
- ▶ Support for detailing to inch/pound, soft metric and hard metric systems;
- ▶ Extensive special bend type support;
- ▶ Extensive bar range types including tapered, staggered and alternate, with corresponding bar run types;
- ▶ Extensive bar editing facilities, including bar stretching (with automatic lapping if bar exceeds stock length) and editing via dialog boxes. Double clicking on bar invokes bar property dialog;
- ▶ Group Layering Option allowing user-definable layers for all RebarCAD items along with the facility to place rebar on specific layer groups as they are detailed;
- ▶ Rebar library for storing standard reinforcement details which can be imported into drawings with automatic bar renumbering as required. Program uses AutoCAD's MDI feature and Design centre extensively for RC entities, i.e Drag and Drop, Copy and Paste etc work across drawings and from Design Centre;
- ▶ Label and bar mark format options to allow bar labels to be modified to suit user requirements. Masking of Label is possible.
- ▶ Active Bar List displayed via a dialog is available at all times;
- ▶ Bar list outputs can be customised to individual requirements;
- ▶ Full Bar List and Bent Bar List on Drawing options with special bend type support.
- ▶ Bar List data can be output in data form to integrate with rebar fabricator production software applications;
- ▶ Bar weight printout facility;

- ▶ Partial Take-Off facility.

Commands can be selected from the RebarCAD pop-down menu, toolbar or entered at the AutoCAD command line.

Although RebarCAD can run stand-alone, it has been designed to integrate fully with other CADS Detailing Applications such as CADS Scale & CADS Viewport Manager to provide a complete detailing environment within AutoCAD.

This manual is intended to guide you through the program's features and show where you would use them.

Our CADS UK Technical Support Department staff will be pleased to help you or listen to your suggestions.

Computer and Design Services Ltd.,

Arrowsmith Court,

Broadstone,

Dorset,

BH18 8AX,

UK

UK (Sales) : +44 (0) 1202 603031

UK (Support) : +44 (0) 1202 603733

UK (Fax) : +44 (0) 1202 690284

UK Email (Sales) : sales@cadcs.co.uk

UK Email (Support): support@cadcs.co.uk

UK Website :

<http://www.cads.co.uk>

Contact Details for North America:

TOLL FREE (Sales) : 800-470-4566

TOLL FREE (Support) : 800-609-7916

(9am - 5pm USA East Coast Time)

TOLL FREE (Fax) : 800-511-4566

Email (Sales/Business) : office@cadcsusa.com

Email (Support) : support@cadcs.co.uk

Website : www.cadsusa.com

If contacting the UK direct, please dial the 011 international access code before dialing the UK 44 country code.

1.2 Installation

For installation procedures, please click the "View Documents" link available on the Installer page, and then select the "Installer Guide" link.



Figure 1.1 Installer



Figure 1.2. Documents

2 Bar Organisation

Chapter Objectives

This chapter explains bar organisation in RebarCAD.

When detailing reinforced concrete using RebarCAD there are two main points to consider as you develop the drawing:

1. Using the correct commands to indicate the required rebar arrangement on the drawing.
2. Controlling the input of data to the Bar List.

2.1 Drawing Bars

The drawing of bar bends is obviously an important part of RebarCAD and this is covered in greater detail in the tutorial examples in Appendixes A and B. This section will give a general idea of the intended use of the most commonly used commands.

There are 2 basic commands within the RebarCAD pop-down menu for drawing bars: DRAW BAR and DRAW RANGE.

2.1.1 Draw Bar

The DRAW BAR commands allows you to draw a single view of a bar. For example, consider the section and elevation of a retaining wall shown in Figure 2.1. To draw the bend type 17 in the top of the wall section, you would use a DRAW BAR command as you are only drawing a single view of the bar.

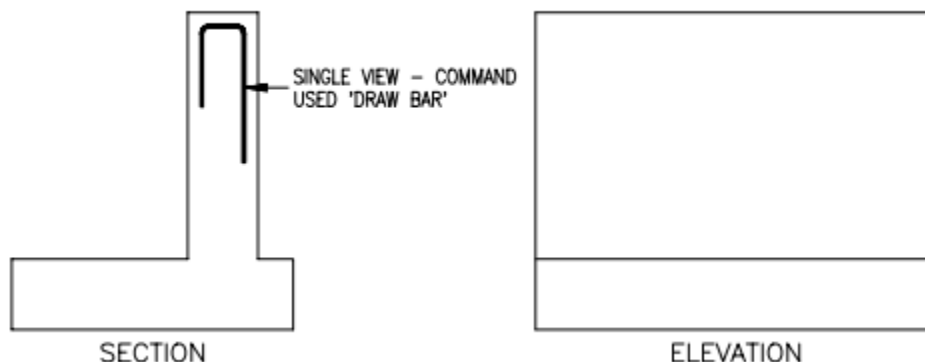


Figure 2.1 Draw Bar Command

2.1.2 Draw Range

The DRAW RANGE commands allow you to draw a BAR RANGE or a BAR RUN as shown in Figure 2.2.

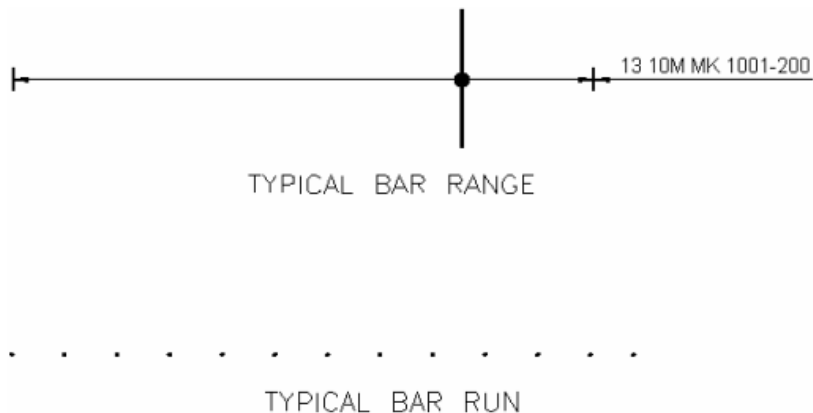


Figure 2.2 Bar Range and Bar Run Drawing

For example, consider again the section and elevation of a retaining wall shown in Figure 2.3. If you wished to show the bend type 17 already detailed on the section again on the elevation, you would use a DRAW RANGE command. This would allow you to draw the required view of the bar (known in RebarCAD as an indicator bar) and to specify the start and end of the range line to indicate where the bar occurs.

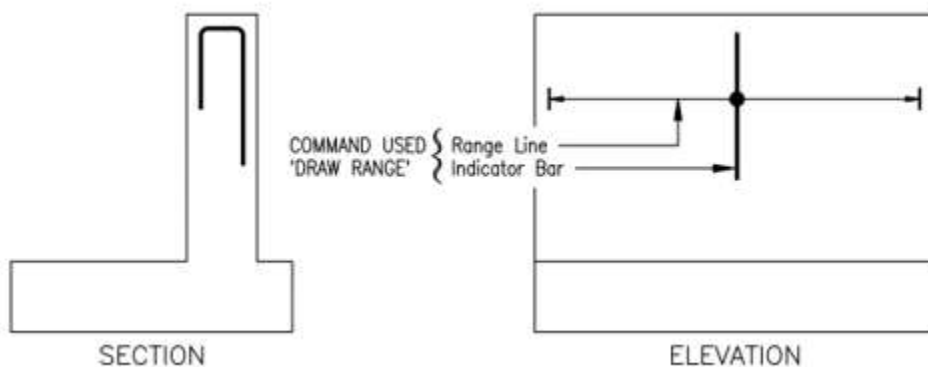


Figure 2.3 Draw Range Command

2.2 The Bar Set

Each view of a drawn bar forms part of a bar set. A bar set would normally consist of a number of views of the bar to show its location in the structure and a label giving No. off, Type, Size etc. Each bar set also has a corresponding line in the Bar List. For example, take the bend type 17 in the retaining wall in Figure 2.4.

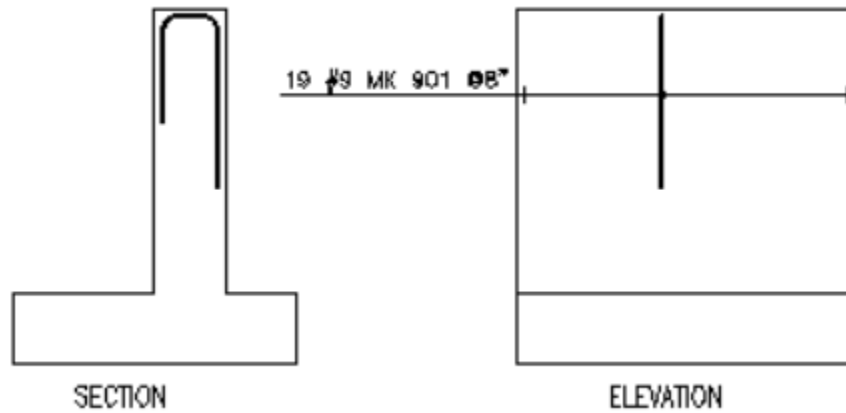


Figure 2.4 Bar Set

The bend type 17 is drawn on the section. It is also drawn on the elevation in the form of a range and a bar label is shown. These 3 'views' form the bar set, which also has a corresponding line in the Bar List.

NOTE: Only one Bar Label is allowed per Bar Set.

2.3 Marks, Views & Sets

Both the 'DRAW BAR' and 'DRAW RANGE' commands are used in conjunction with either of the following sub commands: -

- a) NEW MARK
- b) Add View
- c) NEW SET

These 3 sub commands control the input of data to the Bar List.

As a drawing is developed, it is quite common to show the same bar in different views on the drawing. If each time one of these views were drawn, additional bars were added to the Bar List, obviously there would be too many bars in the Bar List on completion of the drawing. Therefore, commands are required to draw bars in different bar views and 'ADD NEW LINE TO THE BAR LIST' or 'UPDATE EXISTING LINE'. This is achieved by the correct use of the NEW MARK, Add View and NEW SET options.

2.3.1 New Mark

This instructs RebarCAD that the bar view to be drawn is the first of a NEW BAR SET and allocates the set a New Bar Mark. This will also add a new line to the Bar List for this bar set.

2.3.2 Add View

This instructs RebarCAD that the bar view to be drawn is another view of an existing BAR SET already on the drawing. This will not add a new line to the Bar List but may update the line already present in the Bar List for this bar set.

2.3.3 New Set

This instructs RebarCAD that the bar view to be drawn is the first of a NEW BAR SET but uses a Bar Mark already in use. (i.e. 2 identical sets of bars with the same Bar Mark). This will also add a new line to the Bar List for this bar set.

NOTE: A number of lines in the Bar List with the same Bar Mark can be combined into 1 line showing the total number of bars if required.

2.4 Bar Views

Most bend types have a minimum of 4 bar views available for drawing. These are typically SIDE, LEFT, RIGHT & PLAN. The bend type 17 shown in Figure 2.5 is a good example to indicate the views produced by side, left, right & plan options (see also Appendixes A and B).

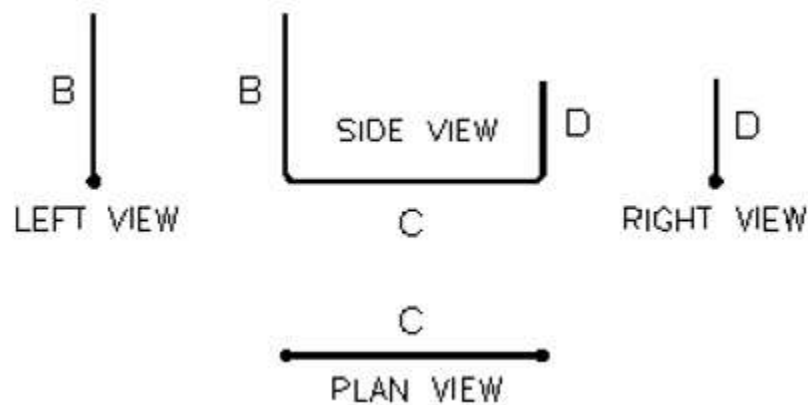


Figure 2.5 Bend type 17

2.4.1 Side View

The SIDE view of a bend type 17 draws the full bend type. The start point (or insertion point) is the intersection of leg B & C and is indicated by a white dot on the bar slide. The bar can be drawn at any angle or orientation required.

2.4.2 Left View

The LEFT view of a bend type 17 will ALWAYS draw LEG B. The start point (or insertion point) is the end indicating leg C as a dot.

2.4.3 Right View

The RIGHT view of a bend type 17 will ALWAYS draw LEG D. The start point (or insertion point) is the end indicating leg C as a dot.

2.4.4 Plan View

The PLAN view of a bend type 17 will ALWAYS draw LEG C. The start point (or insertion point) is the end indicating leg B as a dot.

2.5 Bar Alignments

Bars can be drawn by defining either the OUTER FACE, the INNER FACE or the CENTRE LINE of the bar (see also Appendix A).

2.5.1 Outer Alignment

If the bar drawing alignment is set to OUTER, then the dimensions are defined whilst drawing to the outer face of the bar is to be defined.

2.5.2 Inner Alignment

If the bar drawing alignment is set to INNER, then the dimensions are defined whilst drawing to the inner face of the bar is to be defined.

2.5.3 Centre Alignment

If the bar drawing alignment is set to CENTRE, then the dimensions are defined whilst drawing to the centre line of the bar is to be defined.

NOTE - No matter what alignment is used to generate a bar, the bar dimensions shown in the Bar List will be 'out to out' except A or G on standard 180-deg and 135-deg hooks, e.g. the inner face of a bend type T1 may be defined on the drawing but its overall dimensions will be shown in the Bar List.

2.6 Bar Styles

Bars can be drawn in two styles to cater for detailing at different scales etc. (see also Appendix A1).

2.6.1 Centre Style

This will draw the centre line only of the bar on a layer in a colour specified by the user in the configuration.

2.6.2 Profile Style

This will draw the full profile of the bar on a layer in a colour specified by the user in the configuration.

NOTE - A drawing can have a combination of bar styles and bars can be changed from one style to another using the RebarCAD CHANGE BAR STYLE command.

2.7 Release Codes

Bar Sets can be allocated to Release Codes. This allows grouping together or separation of bar sets in the Bar List. For example, a drawing may consist of reinforcement details for two stairs. It may be necessary to allocate the reinforcement to Release Codes so that they can be identified in the Bar List. The allocation of bar sets to release codes allows RebarCAD to process the Bar

List this way. It also allows the same bar mark to be used in different Release Codes but as RebarCAD will not combine bars allocated to different release codes in the Bar List, the bar sets will be shown separately under their respective release codes.

(See also Chapter 5 - Set Release Codes)

2.8 Bar Manipulation

2.8.1 Erase

If you select an RC entity when using AutoCAD's erase command, you will be presented with this dialog.

Selecting Erase Bar View will erase only the drawing details that you have selected. The bar will remain in the Bar List.

If you select Erase Bar Set, then not only will your selected entities be removed, but also the bar details in the bar list and all other occurrences of that bar set in the drawing.

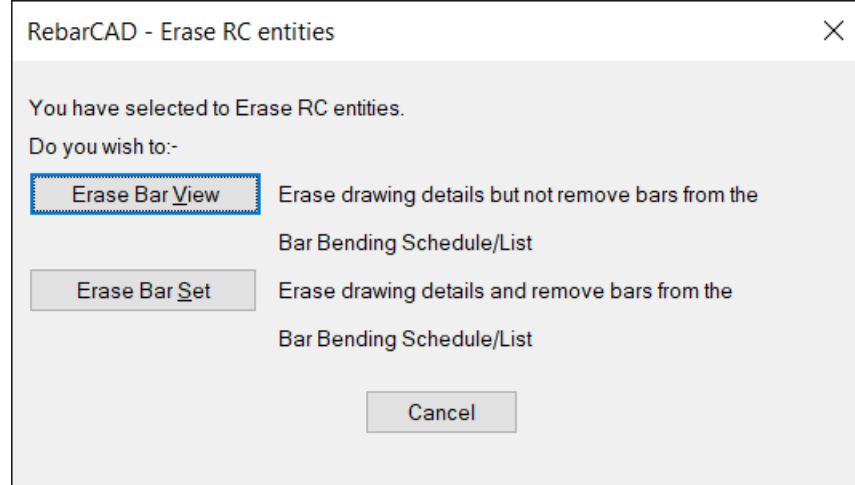


Figure 2.6 Erase RC entities dialog

2.8.2 Copy

If you select an RC entity when using AutoCAD's copy command, you will be presented with this dialog.

Selecting Copy Bar View will copy only the drawing details that you have selected. No bars will be added to the bar list.

If you select Copy Bar Set, then a new line will be added to the bar list.

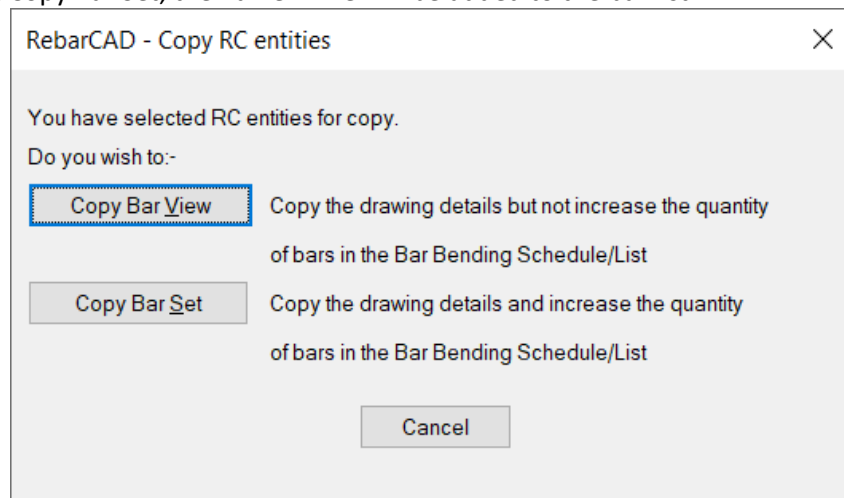


Figure 2.7 Copy RC entities dialog

2.8.3 Mirror

If you select an RC entity when using AutoCAD's mirror command, you will be presented with this dialog. Selecting Mirror Bar View will mirror only the drawing details that you have selected. No bars will be added to the bar list.

If you select Mirror Bar Set, then a new line will be added to the bar list.

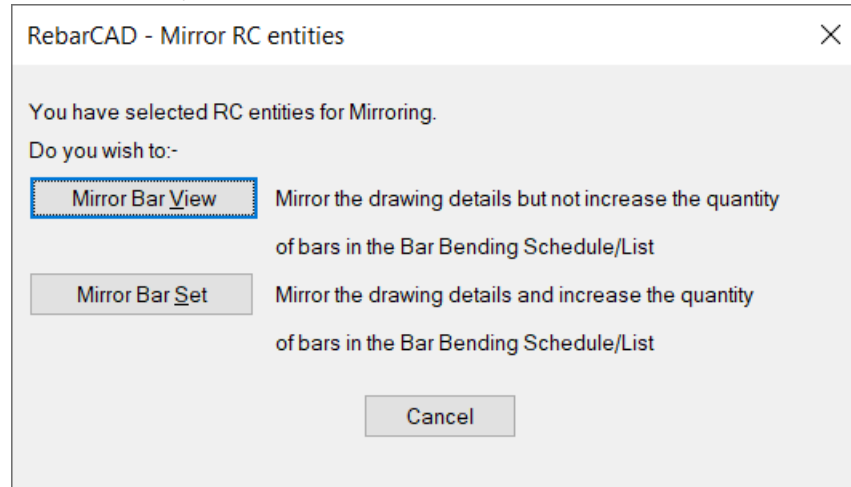


Figure 2.8 Mirror RC entities dialog

2.8.4 Array

If you select an RC entity when using AutoCAD's array command, you will be presented with this dialog. Selecting Copy Bar View will array only the drawing details that you have selected. No bars will be added to the bar list.

If you select Copy Bar Set, then a new line will be added to the bar list.

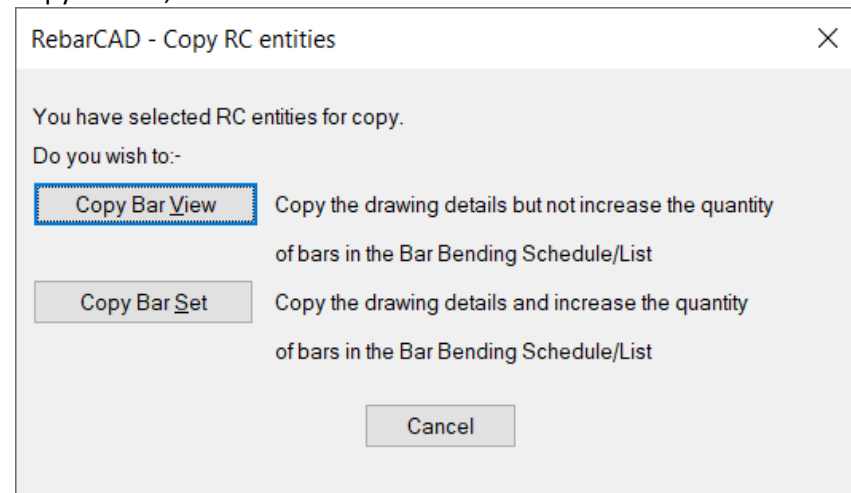


Figure 2.9 Array RC entities dialog

3 RebarCAD Manager

Chapter Objectives

This chapter describes how to set-up and manage Rebar projects inside the RebarCAD Manager. It also describes how to link your title panels to RebarCAD Manager.

3.1 Introduction

RebarCAD Manager is an easy to learn front-end system to AutoCAD that allows you to create and access projects. You can then create new drawings or open existing drawings.

RebarCAD Manager is specifically developed for the concrete reinforcement detailer. It permits the storage and easy viewing of certain project and drawing information, such as job and drawing description, client, engineer and architect information that ordinarily are not accessible in your standard file manager.

It also has a Rebar Viewer facility that permits the viewing of all rebar currently detailed in a Project.

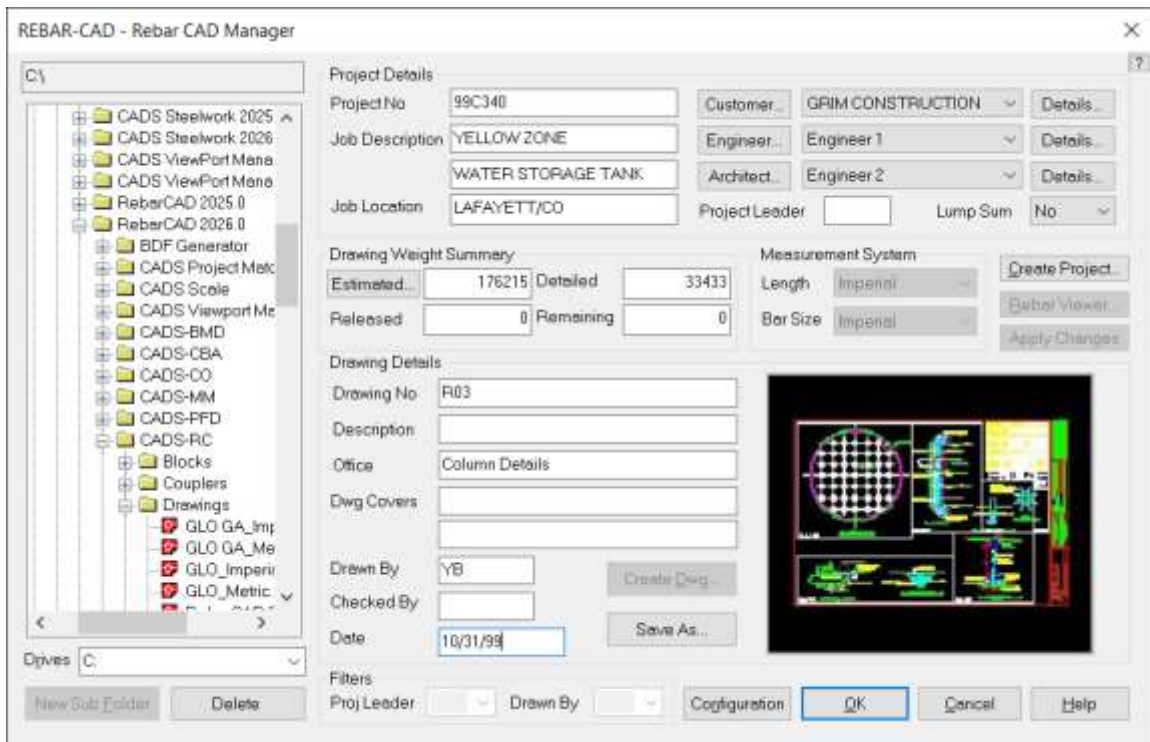


Figure 3.1 RebarCAD Manager dialog

The items contained in this dialog are described as follows:

3.1.1 General Items

Delete

Delete key. To use this facility, highlight the folder or drawing you wish to delete and then pick this button.

Drives

Indicates the current hard disk drive letter that your drawings are being stored on.

New Sub Folder

This option is not yet functional.

On larger projects, it is often advantageous to break them down into smaller folders such as Foundations; 1st floor, Roof etc.

Create Project

Select this option if you wish to create a new Project. On picking the option, you will notice that many of the dialog fields are now greyed-out, or not accessible to you. The fields that still appear in white are areas into which you can enter information.

The Project Number will also define the folder name of the Project. Please note that this field has to be filled in. Adding data in the other accessible fields is optional.

Once you have entered all the relevant information, pick the SAVE button at the bottom of the dialog.

Bar List

Displays all project reinforcement details. See Bar List.

Apply Changes

Pick this button to apply any changes made to the RebarCAD Manager Project or Drawing Settings.

3.1.2 Project Details

Project Number

This is a manual entry. RebarCAD Manager creates a folder with the data entered in this field. The Project Number is also added into the Bar List Header and it can also be added automatically to the drawing title if RebarCAD Manager is configured to your title block. Please see Configuration for further details. This field is only editable when creating a new Folder. See Create Project.

Job Description

This consists of two fields and it is a manual entry. The Job Description from these fields is added into the Bar List Header and it can also be added automatically to the drawing title if RebarCAD Manager is configured to your title block. Please see Configuration for further details.

Job Location i.e. Site Address

This is a manual entry. The Job Location can be added automatically to the drawing title if RebarCAD Manager is configured to your title block. Please see Configuration for further details.

Customer

This button accesses the Client/Contractor Details dialog to set up a customer's name, address, telephone and contact details. The Customer/Contractor Details from these fields can be added automatically to the drawing title if RebarCAD Manager is configured to your title block. Please see Configuration for further details.

Engineer

This button accesses the Engineer Details dialog to set up an Engineer's name, address, telephone and contact details. The Engineer Details from these fields can be added automatically to the drawing title if RebarCAD Manager is configured to your title block. Please see Configuration for further details.

Architect

This button accesses the Architect Details dialog to set up an Architect's name, address, telephone and contact details. The Architect Details from these fields can be added automatically to the drawing title if RebarCAD Manager is configured to your title block. Please see Configuration for further details.

Project Leader

This is a manual entry of 3 initials. The Project Leader's Initials from this field can be added automatically to the drawing title if RebarCAD Manager is configured to your title block. Please see Configuration for further details.

Details Button (Top)

Permits editing of Customer Details.

Details Button (Middle)

Permits editing of Engineer Details.

Details Button (Bottom)

Permits editing of Architect Details.

Lump Sum

Select Yes or No to record this status for the Project.

3.1.3 Drawing Weight Summary

Estimated.....

This button accesses the Estimated Weight dialog for entering the Estimate weight and Variation Order values and notes.

The field just to the right of this button displays the current total of Estimated Weight and Change Order values.

Released

Shows the current weight of all rebar in the project that has been released for fabrication.

Detailed

Shows the current weight of all rebar in the project that has been detailed.

Remaining

Displays the current balance of all rebar in the project that has been detailed but not yet released for fabrication.

3.1.4 Measurement System

Length

The units of the drawing are set with this option either metric or imperial.

Bar Size

The bar diameters can be defined as either imperial or metric.

Note: Inside the configuration dialog there is an option to define a default configuration file. The default configuration file contains measurement system settings which may conflict with the length and bar size set in the Rebar Project manager and cause RebarCAD to behave incorrectly. It is recommended that the def file option is not ticked unless you are an advanced user.

3.1.5 Drawing Details

Drawing Number

This is a manual entry. RebarCAD Manager creates a Drawing file with the data entered in this field. The Drawing Number is also added into the Bar List Header and it can also be added automatically to the drawing title if RebarCAD Manager is configured to your title block. Please see configuration for further details.

This field is only editable when creating a New Drawing or Save As.

Description

This is a manual entry. The Drawing Description from this field is added into the Bar List Header and it can also be added automatically to the drawing title if RebarCAD Manager is configured to your title block. Please see Configuration for further details.

Office

This is a manual entry. The Office description from this field can be added automatically into the drawing title if RebarCAD Manager is configured into your title block. Please see configuration for further details.

Dwg Covers

This consists of two fields and is a manual entry. This is used to describe the structures detailed inside the drawing.

Drawn By

This is a manual entry of 3 initials. The Draughtsman's initials from this field can be added automatically to the drawing title if RebarCAD Manager is configured to your title block. Please see Configuration for further details.

Checked By

This is a manual entry of 3 Initials. The Checker's initials from this field can be added automatically onto the drawing title if RebarCAD Manager is configured to your title block. Please see Configuration for further details.

Date

RebarCAD Manager will automatically use the system date at the time of drawing creation. This can be edited if necessary.

Create Drawing

Select this option if you wish to create a new Drawing.

On picking the option, you will notice that much of the dialog fields are now greyed-out, or not accessible to you. The fields that still appear in white are areas that you can enter information.

The Drawing Number will also define the file name of the drawing. Please note that this field has to be filled in. Adding data in the other accessible fields is optional.

Once you have entered all the relevant information, pick the OPEN button at the bottom of the dialog.

Save As Button

Pick this button if you wish to save you current drawing under a different file name or folder.

Filter - Project Leader

This facility is not yet active.

Filter - Drawn By

This facility is not yet active.

Configuration

Accesses the program configuration facilities.

3.1.6 Configuration

The RebarCAD Manager Configuration dialog is a list of Attribute Tags that CADs have defined. These attribute tags have then be used in the appropriate fields inside the AutoCAD title blocks. Once the two sets of attribute tag definitions match, any information entered in these fields in the main RebarCAD Manager dialog will be automatically passed to the AutoCAD title block.

You can use different attribute tag names provided you enter the new name into the configuration dialog.

The items contained in this dialog are described as follows:

Project No.

Entering the attribute tag name defined for the Project Number on your title sheet will allow RebarCAD Manager to add the data entered in the Project No. field directly to your title sheet.

Job Description

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data entered in the Job Description field directly to your title sheet.

Project Leader

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data entered in the Project Leader field directly to your title sheet.

Job Location

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data entered in the Job Location field directly to your title sheet.

Estimated

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data entered in the Estimated field directly to your title sheet.

Drawing Attribute Settings
✕

Project Details

Project No	PRJNO	Customer	CUSTOMER
Job Description	PROJECT 1	Engineer	ENGINEER
	PROJECT 2	Architect	ARCHITECT
Project Leader	PrjLeader	Lump Sum	LumpSum
Job Location	JobLocation		

Project Weight Summary

Estimated	Estimated	Detailed	Detailed
Taken Off	TakenOff	Remaining	Remaining

Measurement System

Length	Length
Bar Size	BarSize

Drawing Details

Drawing No.	DrawNo	Office	Location
Drawing Description	DrawDesc	Drawn By	DrawnBy
Dwg Covers	DrawingCovers	Checkd By	ChkdBy
	DrawingCovers2	Date	Date

Filters

Proj Leader	ProjDet	Drawn By	FilterDrawnBy
-------------	---------	----------	---------------

File Configuration

<input checked="" type="checkbox"/> DEF File	RC_LAB	<input type="button" value="Make Default"/>	<input checked="" type="checkbox"/> Specials File	C:\Specials.SPL	<input type="button" value="Browse..."/>
--	--------	---	---	-----------------	--

Figure 3.2 Drawing Attribute Settings dialog

Taken Off

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data in the Taken Off field directly onto your title sheet.

Detailed

Entering the attribute tag name defined for the Attribute Tag on your title Sheet will allow RebarCAD Manager to add the data in the Detailed field directly to your title sheet.

Remaining

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data in the Remaining field directly to your title sheet.

Drawing Number

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data entered in the Drawing Number field directly to your title sheet.

Drawing Description

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data entered in the Drawing Description field directly to your title sheet.

Drawing Covers

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data entered in the Drawing Covers field directly to your title sheet.

Customer

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data in the Customer field directly to your title sheet.

Engineer

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data in the Engineer field directly to your title sheet.

Architect

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data entered in the Architect field directly to your title sheet.

Lump Sum

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data in the Lump Sum field directly to your title sheet.

Measurement System

Length. Not required for this version.

Bar Size. Not required for this version

Office

Entering the attribute tag name defined for the Attribute Tag on your title Sheet will allow RebarCAD Manager to add the data entered in the Office field directly onto your title sheet.

Drawn By

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data entered in the Drawn By field directly to your title sheet.

Checked By

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data entered in the Checked By field directly to your title sheet.

Date

Entering the attribute tag name defined for the Attribute Tag on your title sheet will allow RebarCAD Manager to add the data in the Date field directly to your title sheet.

Filters

Proj Leader: This facility is not operational in this version.

Drawn By: This facility is not operational in this version

File Configuration

Select from this list of current RebarCAD DEF configuration files to use with this project.


Make Default

Sets current DEF file as default.

Specials File

Sets the path and location of the Specials file which stores special bar shapes. It is defaulted to the project folder.

3.1.7 Estimated Weight dialog

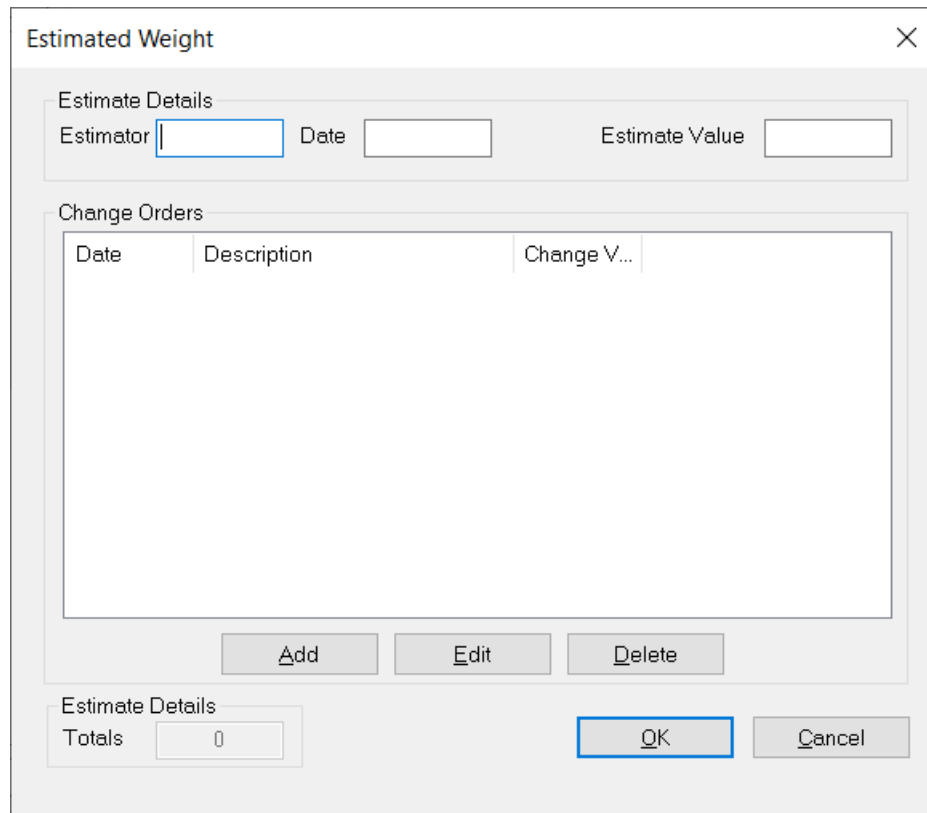

The dialog box is titled "Estimated Weight" and has a close button (X) in the top right corner. It contains the following sections:

- Estimate Details:**
 - Estimator:
 - Date:
 - Estimate Value:
- Change Orders:**

Date	Description	Change V...
------	-------------	-------------
- Buttons:**
 - Below the Change Orders table: Add, Edit, Delete
 - At the bottom: OK, Cancel
- Estimate Details Totals:**
 - Totals:

Figure 3.3 Estimated Weight dialog

Estimator

Enter Estimators Initials.

Date

Enter Date of Estimate

Estimate Value

Enter Estimate Value in Lbs. or Kgs. Depending on the RebarCAD configuration selected.

Add

Add New Variation Order.

Edit

Change an existing, highlighted Variation Order.

This controls the display of available bend types within the project or drawing. The list displays all available bend types within the current project folder or selected drawing.

Release Code

This controls the information displayed as either for all release codes or an individual release code. The list displays all available release codes within the current drawing.

Category

This controls the display of available bar bend classes within the project or drawing. The list displays all available bend classes within the current project folder or selected drawing.

Data Format

Organises project or drawing information into the listed formats.

Weight Summaries Display

Displays the data in either the original drawing measurement format or converts it to the listed options.

4 Bar Drawing

Chapter Objectives

This chapter describes the tools for bar drawing which are to be found in the RebarCAD pull-down menu in the DRAW BAR and the DRAW RANGE submenu bars.

4.1 Bar Drawing Dialog

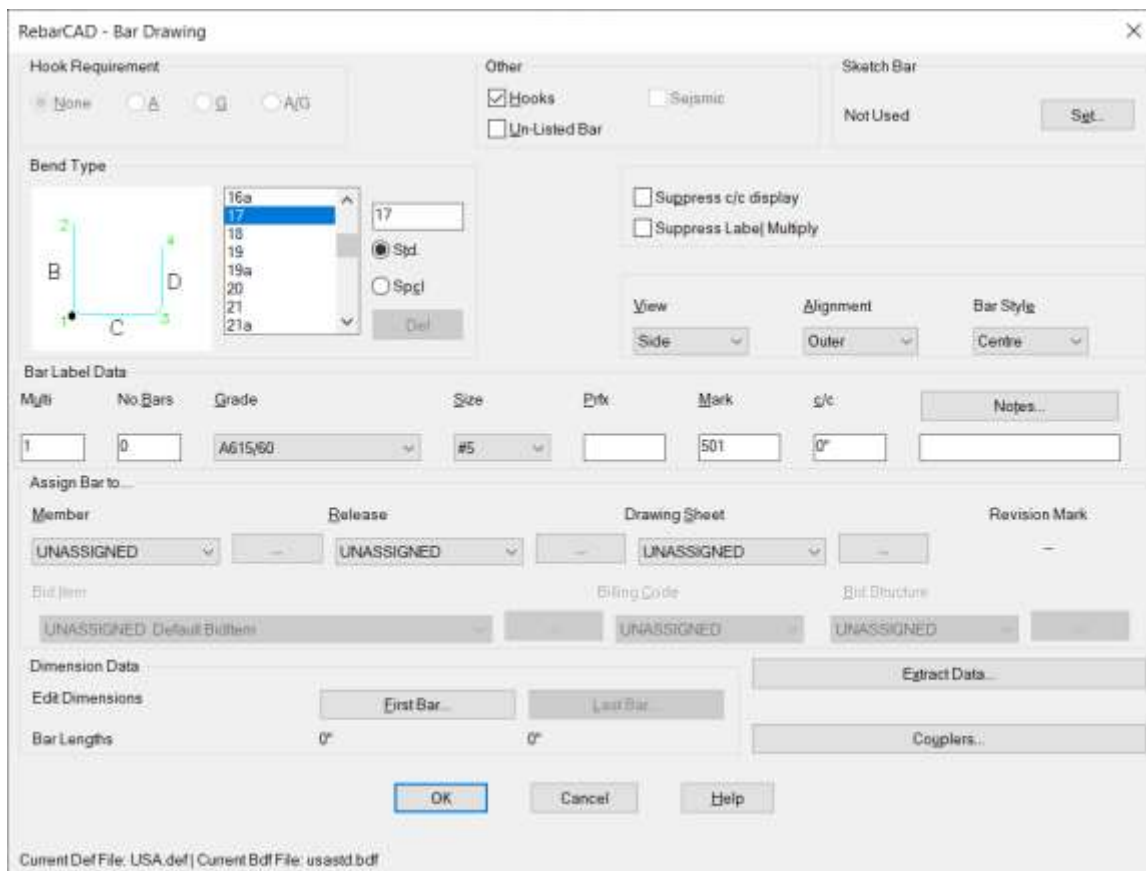


Figure 4.1 The Bar Drawing Dialog

The Bar Drawing dialog is the main tool for the selection and input of bending dimensions /data within RebarCAD. There are 3 main ways of inputting bending dimensions /data :-

1. Drawing the required bend type on the drawing.
2. Extracting some or all of the bending dimensions /data from another bar.
3. Inputting all or some of the bending dimensions /data within the Bar Drawing dialog.

A combination of the 3 options may also be used. The options available within the Bar Drawing dialog are as follows:

4.1.1 Bend Type

The bend type currently selected is displayed in three ways, a slide showing the bend type, a scrolling list beside it giving the bend type reference and an input field beside it. To select another bend type, either activate the scrolling list and pick the required bend type reference or enter the required bend type reference in the input field and pick the Std button below. If a bend type with that reference exists, it will be selected. If no bend type with that reference exists, you will be asked if you wish to create a bend type with that reference using the Special bend type option. The slide will update to show the bend type selected. The order in which the available bend types appear in the scrolling list can be altered. If you wish to alter the bend type order, please contact CADS Technical Support Department.

4.1.2 Un-scheduled Bar

If activated by picking the box to display a tick in it, the bar drawn will not be added to the Bar List. New views of this bar can be drawn, including range views, but these will also not be added to the Bar List. If when drawing an Add View or NEW SET of an existing un-scheduled bar the Un-scheduled Bar option is activated, then the drawn bar is created as a un-scheduled New Bar Set with no effect on the existing bar set.

4.1.3 View

This specifies the bar view required, there are typically 4 options: -

1. Side
2. Plan
3. Left
4. Right

The Bar View is selected via the pop-up list. Plan, Left and Right views will display a slide indicating the bar leg which this view draws. For more information on Bar Views, see Chapter 2 and Appendix A1. Once you have exited the Bar Drawing dialog, there is still the option to change the Bar View from the side menu before you start to draw the bar.

4.1.4 Alignment

This specifies the bar Alignment required, there are 3 options: -

1. Outer - outer face of the bar is to be defined.
2. Centre - centre line of the bar is to be defined.
3. Inner - inner face of the bar is to be specified.

The Bar Alignment is selected via the pop-up list. For more information on Bar Alignments, see Chapter 2 and Appendix A1. Once you exit the Bar Drawing dialog, there is still an option to change the Bar Alignment from the side menu before you start to draw the bar.

4.1.5 Bar Style

This controls the style in which RebarCAD will draw the bar, there are 2 options: -

1. Centre - The centre line of the bar will be drawn.
2. Profile - The full bar profile will be drawn.

If a bar run is being drawn, then 'centre' will draw the run as solid dots. If it is set to 'profile', then the dots will be drawn as hollow circles. For more information on Bar Styles, see Chapter 2 and Appendix A1.

4.1.6 Bar Label Data

This consists of 8 fields which, amongst other things, assist in calculating the number of bars required and pass data to the Bar List. The fields are as follows: -

Multi.

This is a label multiplier.

If a value of 1 is input, then the label will show, for example, 10 601 giving a No. of bars of 10 in the Bar List.

If a value of 3 is entered in the Multi. field, the label will show 3x10 601, giving a No. of bars of 30 in the Bar List. (See also 'Suppress Label Multiply' later in this section).

The label multiplier also allows invisible multipliers in the bar label. It's objective is to multiply the no. of bars in the bar label for scheduling purposes. This is achieved by entering multipliers in the form 1*2, the outcome of applying multipliers in this format is shown in Figure 4.2 below.

Multi Input	Bar Drawing dialog No. Bars	No. bars in bar label with suppress label multi NO	No. bars in bar label with suppress label multi Yes	No. bars in the Bar List
1	10	10 601	10 601	10
1*2	10	10 601	10 601	20
2	10	2x10 601	20 601	20
2*2	10	2x10 601	20 601	40

Figure 4.2 Label Multiplier Affects

No. Bars

The number of bars required can be input in this field. If left at 0, these will be calculated when a range view is drawn or input at a later date using dialog edit. If the number of bars has not yet been determined, the label will be shown in the form? 601.

Type

This specifies the grade of reinforcement for the bar. The required grade is selected from the pop-down list. (See also Appendix D - Support Files).

Size

The required bar size is selected from the options available in the pop-down list. (See also Chapter 8 - Enquiry).

Prfx

This input can be used to add an alphanumeric prefix to the bar mark. This will be applied to subsequent bar marks.

If, for instance, bar mark 03 was offered as default, entering AA in the Prfx. field would give a bar mark of AA03. The next new bar mark offered would be mark AA04 with AA entered automatically in the Prfx. field.

Changing the Prfx. option would apply the new prfx. to the current and subsequent bar marks.

Mark

The bar mark offered as default is the next highest available. If bar marking is configured to prefix with bar size, the next highest available is offered for the current bar size setting. Other bar marks can be entered. If an entered bar mark is already in use, a warning is given and the previously entered mark is restored. (See also Chapter 8 – Enquiry).

NOTE:

Although RebarCAD allows bar marks to consist of up to 30 characters, certain output file formats only support up to 6 character bar marks.

c/c

This is the bar centres input used in range views to calculate the number of bars required. The bar centres, if left at 0, are asked for when doing a range view. (See also 'Suppress c/c display' later in this section).

Notes

Notes can be added to the label by picking on the Notes field and typing in the required note or by picking on the Notes Button and selecting a note from the list. (This list can be added to by the user. See Chapter 8 - Label Configuration).

4.1.7 Set Release Code

Picking the Set Release Code button accesses the Release Code Selection dialog. To allocate the bar to a release code, pick the required release code from the list and exit the dialog using the OK button. Whilst inside the release code dialog, release codes can be created, edited, made current etc. (See also Chapter 5 – Labelling - Set Release Code).

4.1.8 Extract Data

Accesses the Extract Bar Data dialog where various bar data can be extracted from another bar. The Extract Bar Data dialog can be accessed again, if required, to extract other bar data from a different bar.

4.1.9 Dimension Data

The First and Last bar buttons allow access to the bar dimension dialog where bar dimensions may be entered prior to drawing the bar view. The Last bar option is only available when drawing tapered ranges to allow dimension data for the first and last bar to be entered.

4.1.10 Set Sketch Bar

This accesses the Sketch Bar Selection dialog where a sketch bar view can be activated. If activated, the Bar Drawing Dialog Sketch Bend type prompt is changed from Not Used to display the bend type of the sketch bar view. This option allows the bar view drawn to be of a different bend type than that which is specified in the bar drawing dialog and Bar List for the bar set.

4.1.11 Suppress c/c Display

If activated by picking the box to display an 'X', a label previously displayed 10 601-8" will then display 10 601 and vice versa, i.e. the label c/c are removed or reinstated to the label.

4.1.12 Suppress Label Multiply

If activated by picking the box to display an 'X', a label previously displayed 3x10 601 will then display 30 601 and vice versa. (See also 3.1.6 Multi.)

4.1.13 Current Release Code

Displays the Release Code to which this bar set is to be allocated.

4.1.14 Set No.

This is the number used by RebarCAD to index sets in the Bar List. As this number is unique to individual sets, it can be used to manipulate the data. It cannot be altered by the user.

4.1.15 Couplers

This allows the attachment of couplers to the bar being drawn. For more information on coupler attachment, see the chapter entitled "Couplers".

4.2 Draw Bar Command

The DRAW BAR commands allow the user to draw a single view of a bar. Off the DRAW BAR menu bar, the following options are available:

4.2.1 New Mark

Menu Option Draw Bar -> New Mark

Command Line `cads_rcBars`, press enter, M, press enter

Tool Bar



Instructs RebarCAD that the bar view to be drawn is the first of a NEW BAR SET and allocates the set a New Bar Mark. This will also add a new line in the Bar List for this BAR SET.

4.2.2 Add View

Menu Option Draw Bar -> New View

Command Line `cads_rcBars`, press enter, V, press enter

Tool Bar



Instructs RebarCAD that the bar view to be drawn is another view of a picked BAR SET already on the drawing. This will not add a new line in the Bar List but may update the line already present in the Bar List for this BAR SET.

4.2.3 New Set

Menu Option Draw Bar -> New Set

Command Line `cads_rc_bars`, press enter, S, press enter

Tool Bar



Instructs RebarCAD that the bar view to be drawn is the first of a NEW BAR SET but uses a Bar Mark already in use. (i.e. 2 sets of bars with the same Bar Mark) This will also add a new line in the Bar List for this BAR SET.

Note: A number of lines in the Bar List with the same Bar Mark can be combined into 1 line showing the total number of bars if required.

4.3 Range Drawing

4.3.1 Range Options

RebarCAD provides a number of range types for use on different structure types. The range types available are as shown in Figure 4.3.

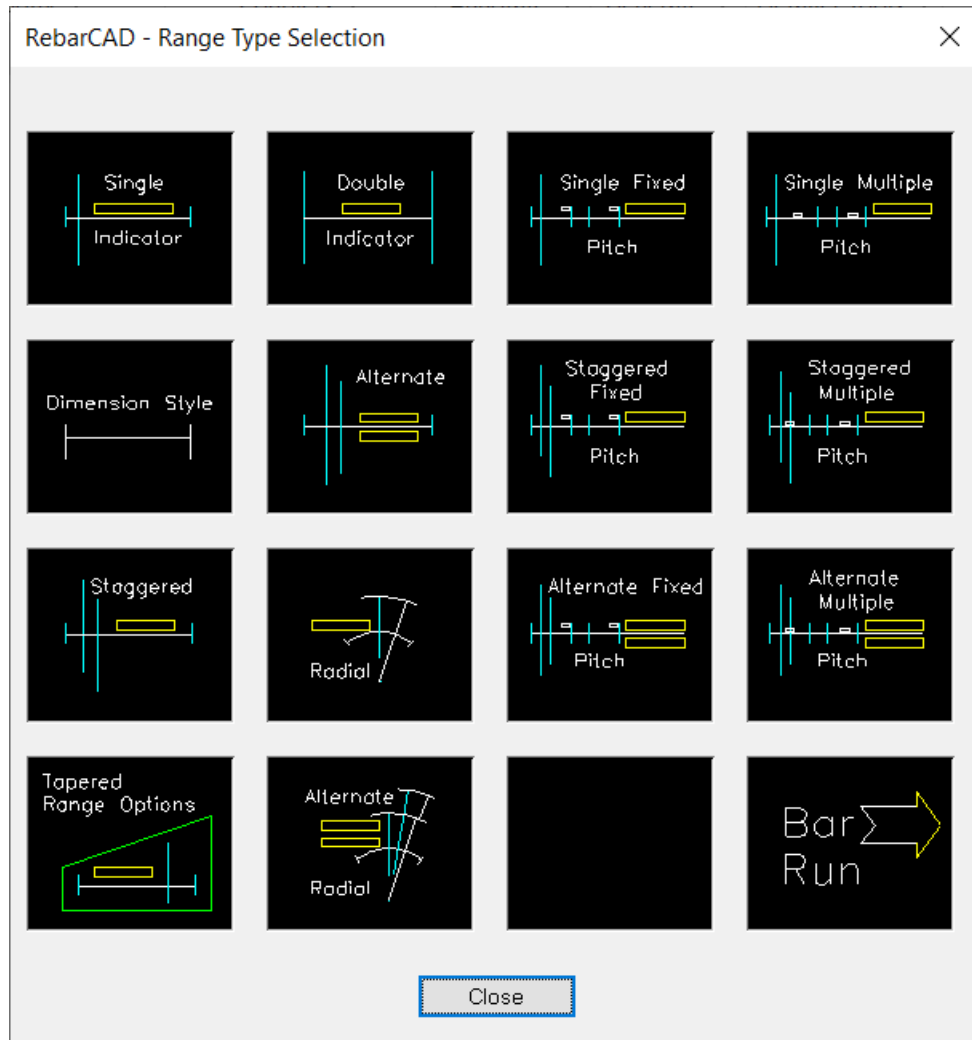


Figure 4.3

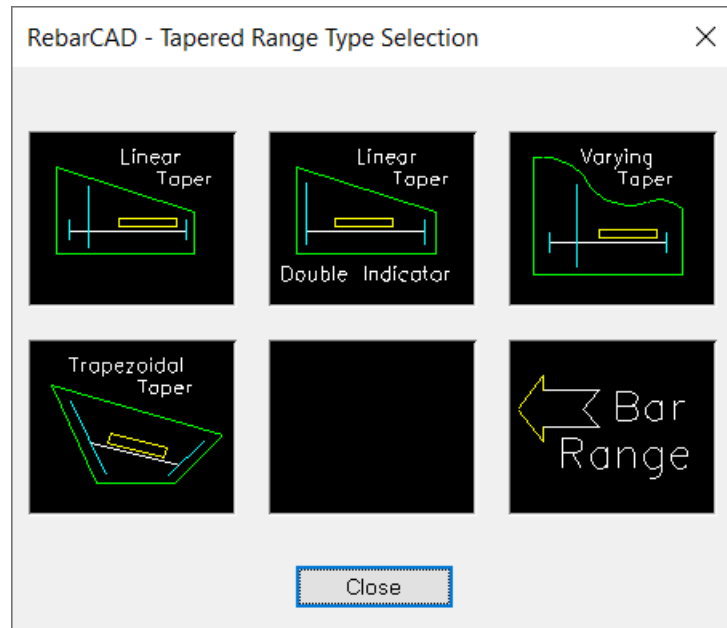


Figure 4.4 Draw Range Dialogs

4.3.2 Standard Range Types

Single Indicator

This range draws a single bar view within one range group. The bar c/c can be entered to calculate the number of bars required or a number of bars can be specified and the c/c will be calculated to suit by RebarCAD.

Double Indicator

This range is similar to the Single indicator but a view of the bar is drawn at each end of the range group. The most common use of this range type is when indicating beam stirrups on elevations or plans.

Dimension Style

This range is similar to the Single indicator but no view of the bar is drawn. Only a range line is drawn, indicating the extents of the range group. The most common use of this range type is when indicating beam stirrups on elevations or plans where, due to congestion, the range is drawn outside the beam outline.

Staggered

This range is similar to the Single indicator but two views of the bar are drawn in a staggered fashion within one range group. The bar label can contain a configurable note to indicate that the bars are placed staggered within the range group. This range type can also be used for alternate bar reversed ranges but the bar label note will have to be amended manually.

Alternate

This range draws two bars that have different bar marks within one range group. The label for each bar mark can contain configurable notes to indicate that they are alternately placed within the range group.

Radial

This range type allows radial ranges to be specified, for instance when detailing circular tank slab bottoms. The bars can be calculated at the inner or outer ends of the bar or along the range line. One bar view can be drawn within one range group and the bar c/c can be specified or a total number of bars entered.

Alternate Radial

This range type is similar to the Radial type described earlier but allows alternate bars to be detailed in the range.

Single Fixed Pitch and Single Multiple Pitch

These range types are similar to the Single Indicator but allow a number of range groups to be drawn with the number of bars in each group indicated and the label displaying the total number of bars. The Fixed Pitch option assumes that the bar c/c are the same in each range group, whereas the Multiple Pitch option allows the bar c/c to be different in each range group.

Staggered Fixed Pitch and Staggered Multiple Pitch

These range types are similar to the Staggered range but allow a number of range groups to be drawn with the number of bars in each group indicated and the label displaying the total number of bars. The Fixed Pitch option assumes that the bar c/c are the same in each range group, whereas the Multiple Pitch option allows the bar c/c to be different in each range group.

Alternate Fixed Pitch and Alternate Multiple Pitch

These range types are similar to the Alternate range but they allow a number of range groups to be drawn with the number of bars in each group indicated with the label displaying the total number of bars. The Fixed Pitch option assumes that the bar c/c are the same in each range group, whereas the Multiple Pitch option allows the bar c/c to be different in each range group.

4.3.3 Tapered Range Types

Linear Taper

This range draws a single bar view within one range group, it then asks for the first and last bars to be drawn or uses the entered data so it can calculate the required tapered dimensions for the bar set. The label produced will give the total number of bars within the range with a configurable suffix relating to the number of bars in the range. The Bar List will display each bar in the range i.e. 601a, 601b, 601c etc. with that bars individual bending data. Tapered ranges can contain bar marks 601a to 601zz giving a maximum of 676 bars in any bar set.

Linear Taper Double Indicator

This range is similar to the Single Taper but a view of the bar is drawn at each end of the range group.

Varying Taper

This range type draws a single bar view within one range group. It then asks for an entity to be picked to define the boundary of the area to be reinforced with tapering bars. The bars are calculated as if placed at the angle of the indicator bar. The entity picked to define the boundary must be a closed polyline, circle or ellipse. The label produced will give the total number of bars within the range with alphabetical suffix relating to the number of bars in the range. The Bar List will display each bar in the range i.e. 601a, 601b, 601c etc. with that marks individual bending data. Tapered ranges of this type can contain bar marks 601a to 601zz giving a maximum of 676 bars in any bar set.

NOTE: This type of range cannot be edited, you will have to delete the range and redraw it if any of the bar/range data needs amending.

Trapezoidal Taper

This range type draws an indicator bar at each end of the range to define the first and last bars in the range. The intermediate bars are calculated as placed in a fan arrangement. The label produced will give the total number of bars within the range with alphabetical suffix relating to the number of bars in the range. The Bar List will display each bar in the range i.e. 01a, 01b, 01c etc. and marks the bar with its individual bending data. Tapered ranges of this type can contain bar marks 01a to 01zz giving a maximum of 676 bars in any bar set.

NOTE: This type of range cannot be edited, you will have to delete the range and redraw it if any of the bar/range data needs amending.

4.3.4 Bar Run Range Types

Run to Path

Two Run to Path options are available. One details a single bar mark and the other alternate bar marks. The run is defined by picking a pline entity and the bars are calculated from the pline length and placed along the pline.

Each of the above range types has a corresponding Run type which can be used in conjunction with the range.

NOTE: The two run to path ranges cannot be edited, you will have to delete these range types and redraw it if any of the bar/range data needs amending.

4.4 Draw Range Commands

The DRAW RANGE commands allow the user to draw a range or run view of a bar. Off the DRAW RANGE menu bar there are the following options:

4.4.1 New MARK

Menu Option Draw Range -> New MARK

Command Line `cads_rc_range`, press enter, M, press enter

Tool Bar




Instructs RebarCAD that the range to be drawn is the first of a NEW BAR SET and allocates the set a New Bar Mark. This will also add a new line in the Bar List for this BAR SET.

4.4.2 Add View

Menu Option Draw Range -> Add View

Command Line `cads_rc_range`, press enter, V, press enter

Tool Bar 

Instructs RebarCAD that the range to be drawn is another view of a picked BAR SET already on the drawing. This will not add a new line in the Bar List but may update the line already present in the Bar List for this BAR SET.

4.4.3 New SET

Menu Option Draw Range -> New SET

Command Line `cads_rc_range`, press enter, S, press enter

Tool Bar 

Instructs RebarCAD that the range to be drawn is the first of a NEW BAR SET but uses a Bar Mark already in use (i.e. 2 sets of bars with the same Bar Mark). This will also add a new line in the Bar List for this BAR SET. NOTE: A number of lines in the Bar List with the same Bar Mark can be combined into 1 line showing the total number of bars if required.

4.5 Utilities to Assist in Bar & Range Drawing

4.5.1 CADS Input Application

The CADS Input Application consists of a number of Extra Snaps and a Lap Bar facility to aid in the drawing of bar views and ranges. They are available from the side menu and RebarCAD SNAPS toolbar during bar and range drawing operations, they do not replace AutoCAD's snaps which are still available for use in the normal fashion.

4.5.2 Extra Snaps

These commands are additional to the standard AutoCAD object snaps. Although similar to the object snaps, they expand them by allowing a point to be specified relative to an existing object

or point. The Extra Snaps can be particularly useful when placing bars to an outline where no cover lines are present as bars can be placed relative to the outline itself.

Relative

Toolbar



Allows you to specify a point, using a rectangular co-ordinate, relative to a picked point. Typically, you may wish to place a bar with 2" cover from the corner of an outline. Therefore, the bar can be placed RELATIVE to the INTERSECTION at the corner of the outline and given relative co-ordinates, for example, of 2",2". When entering the co-ordinate offset do not use the normal @ (relative distance) symbol, as this is implied automatically.

Polar

Toolbar



This is equivalent to Relative except it expects a polar co-ordinate entered at the appropriate prompt in the form of a distance and an angle for the offset.

Midpoint

Toolbar



This allows you to snap to a point midway between two picked points.

Datum

Toolbar



Enables you to set a point which can be used repeatedly for specifying relative points. In effect, it allows a second origin (Datum) to be set on the drawing. The datum point is selected the first time the command is used during an editing session. Each time you wish to define points relative to this datum you must select the Datum option from the side menu. If you subsequently wish to change the datum, select the Datum option from the side menu and enter R for Reset at the prompt.

Along

Toolbar



Enables you to snap to a point at a specified distance along a line or to a point along a line by entering a division factor. For instance, if you specify a division factor of 3, the snap will be at the third point along the line from the nearest end of the line picked.

Divide

Enables you to snap to a point along a line by entering a division factor. For instance, if you specify a division factor of 3, the snap will be at the third point along the line from the nearest end of the line picked.

Intersection

This snap will locate the projected intersection point of two lines which do not actually intersect. Note that you can also select two segments within the same polyline and obtain their intersection point.

Inters of Perps

This snap finds the intersection point of the perpendiculars from two lines. The perpendiculars spring from the points at which the two lines are picked. AutoCAD's OSNAPS can be used to pick particular end, mid or intersection points on the lines for precision. Unfortunately, you cannot use the other Extra Snaps such as Along in this instance, as AutoLisp does not allow re-entrant calls.

4.5.3 Lap Bar

Toolbar



The Lap Bar function can be used to place or calculate bars which lap onto existing bars. The lap length offered as a default is that relating to the smallest diameter of either the bar being drawn or the bar being lapped to. Lap information is defined in the bar types file. Users wishing to modify or add to the default lap data may contact CADS Technical Support Department.

4.5.4 Tolerance Bar Leg

Toolbar



The Tolerance option can be picked prior to defining an individual bar leg dimension during the drawing of the bar view. Picking Tolerance will apply the relevant tolerance to the leg dimension. Tolerance values can be modified to suit project criteria, users wishing to modify the default tolerance data may contact CADS Technical Support Department.

4.5.5 Label Aligning Options

Toolbar



Align Horizontal

Toolbar  Align Vertical

Picking one of the above options when prompted to place a bar label will align the bar label either vertically or horizontally with an existing bar label.

5 Labelling

Chapter Objectives

This chapter describes the Labelling section of RebarCAD, which is primarily concerned with the Labelling/Notation of reinforcing bars and Release Code control.

5.1 Labelling

The tools for labelling and release code control are to be found off the RebarCAD pull down menu Labelling menu bar where there are the following options:

5.1.1 Set Release Code

Menu Option Labelling -> Set Release Code

Command Line `cads_rc_set_title`

Toolbar



Activates the Release Code Selection dialog shown in Figure 5.1, where the required Release Code can be made 'current'. The 'current' Release Code is the one RebarCAD will allocate any new bar sets/marks subsequently drawn to in the Bar List.

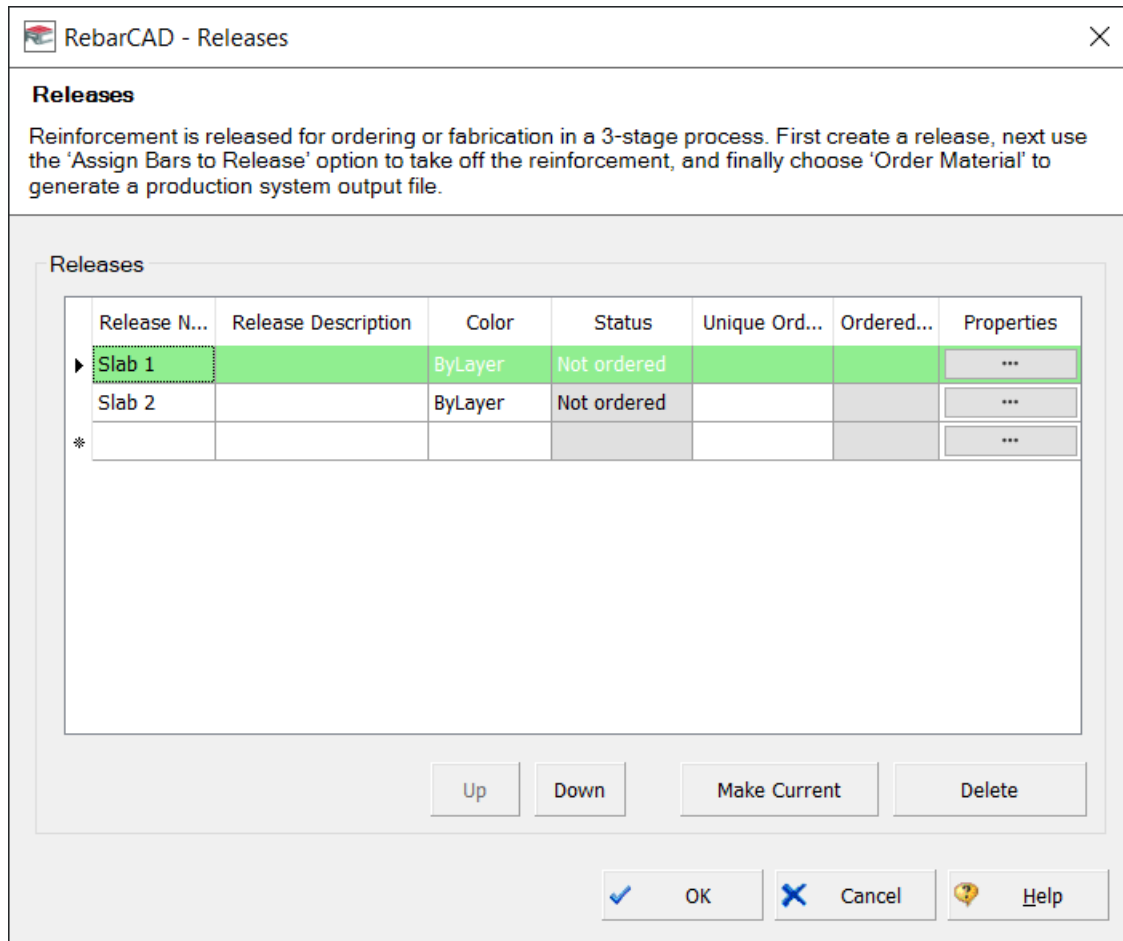


Figure 5.1 Releases Dialog

Release Codes allow RebarCAD to group bars by release code in the Bar List. You may, on one drawing, detail 2 slabs named SLAB 1 and SLAB 2. By allocating the bars for Slab 1 to one release code and those for Slab 2 to another, RebarCAD will sort the bars for each release code on request.

If you do not wish to utilise the Release Code system, all bars on a drawing can be allocated to a single release code.

Each Release Code can have a 3 digit Control Code allocated to it, the Control Code is used in the file name created when a Release Code is output to a file for import into rebar production software. Control Codes are dealt with in more detail later in this section.

The 'Current Release Code' is displayed at the top of the dialog box with the associated Control Code shown below. The list box displays all of the Release Codes and Control Codes created so far on the drawing.

The options available within the Release Code Selection dialog are as follows: -

New Button

To create a new release code, change the 'Release Code' field below the list to that required for the new release code (The 'Num.' and 'Control Code' could also be set at this point if required) and then pick the "New" button. The new release code is created and displayed in the list box.

Current Button

To make a release code current, pick the required release code in the list and then pick the 'Current' button. The 'Current Release Code' field above the list box will be updated to display the new current release code.

Delete Button

To erase an existing release code, highlight the release code in the list and then pick the delete button. A release code can only be deleted if it does not have any bar sets allocated to it.

Update Button**Num.**

This value is the 'No. Off' required of the release code. For instance, you may detail a column footing once on a drawing knowing that 4 identical arrangements are required, 3 for other column footings. If you were to allocate all the bars required in the column footing to a particular release code and set that release code Num. option to 4, the Bar List will show 4 times the detailed rebar on the drawing.

To change, pick the required release code in the list box, change the 'Num.' field below and pick the "Update" button.

Release Code

This title is displayed on the Bar List. To edit the release code pick the required release code in the list box, change the 'Release Code' field below and pick the 'Update' button.


Control Code

The Control Code allocated to a Release Code is used by the output file options available in RebarCAD. The reinforcement allocated to a particular Release Code can be output in file format for linking into other production software. When a Release Code is selected for output to file, its associated Control Code is used to identify the file created. To edit a control code, pick the required release code in the list box, change the 'Control Code' field below and pick the 'Update' button.

NOTE: Individual or a selection of bar sets can be allocated to different release codes by using the Change Release Code command. See also the Chapter "Bar Editing".

Properties Button

Accesses the Release Code Properties dialog of the current release code as shown in Figure 5.2.


RebarCAD - Release Properties
✕

The Release property data for synchronization with the Harris Management system specific to the Harris output format.

Release Properties

Release	Slab 1	Release group code	Group
Job Number		Fabrication location code	Loc
Drawing Set Number		Requested Ship Date	11-03-2025
Description line 1	Line 1	Fabrication date	19-03-2025
Description line 2	Line 2	Location on truck	Truck
Placing (tag)	Tag Number	Footnote 1	Note 1
Sheet Number	Sheet No	Footnote 2	Note 2
Prepared By	ABC	Footnote 3	Note 3
Tag color	RRR	Footnote 4	Note 4
Tag code	12	Sub Contract	False
Bar/paint color	22	Shipped from job inventory	False

☒ OK
 ☐ Cancel

Figure 5.2 Release Properties Dialog

The Release Code Properties dialog allows property information to be defined for each release code created. This information (excluding the Standard File Output Headers which are optional in the CSF file output) can be output in comma separated format via the write CSG file output option for linking to estimating packages.

Each release code can have the following properties defined: -

Concrete Grade

Select the required concrete grade from the pop-down list.

Structure Type

A numerical value can be selected from the pop-down list to indicate structure type which can be recognised by the estimating package link.

Level

A level in meters can be defined so the estimating package can cost formwork support requirements.

Volume


The total volume of each release code can be calculated by defining a number of volume elements that make up the release code. Elements can be defined by picking the Create button beneath the volume list and defining a mean cross section area in metres² and a length in metres from which the volume for that element is calculated. The sum of the volume elements is displayed as the total release code volume. Elements can be edited and deleted by highlighting the required element in the list and picking the Edit or Delete button.

Formwork Faces

The formwork faces can be defined for each release code. Formwork faces can be defined by picking the Create button beneath the formwork face list. Each formwork face can have a formwork type value which can be used to indicate if the face is vertical, horizontal, curved etc. The formwork face area is defined by entering a mean depth in metres and the face length in metres and from this the face area is calculated. Formwork faces can be edited and deleted by highlighting the required face in the list and picking the Edit or Delete button.

Standard File Output Headers

Picking the Standard File Output Headers button accesses the Std. File Headers dialog as shown in Figure 5.3

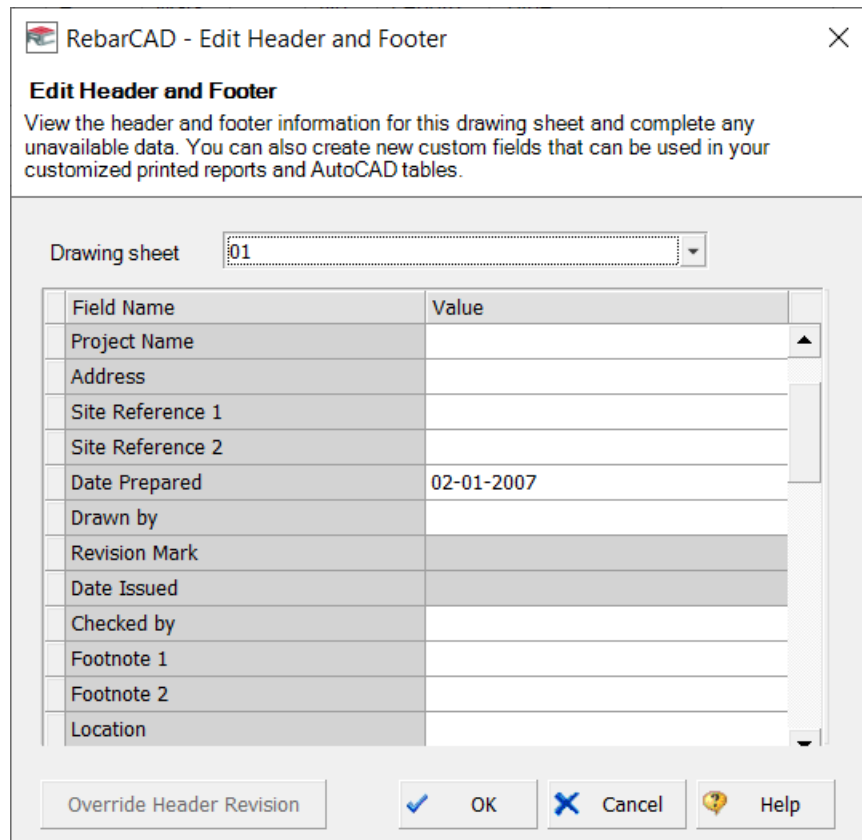

RebarCAD - Edit Header and Footer

Edit Header and Footer
 View the header and footer information for this drawing sheet and complete any unavailable data. You can also create new custom fields that can be used in your customized printed reports and AutoCAD tables.

Drawing sheet: 01

Field Name	Value
Project Name	
Address	
Site Reference 1	
Site Reference 2	
Date Prepared	02-01-2007
Drawn by	
Revision Mark	
Date Issued	
Checked by	
Footnote 1	
Footnote 2	
Location	

Override Header Revision ☒ OK ☐ Cancel

Figure 5.3 Std. File Headers Dialog

The header fields shown can be included at the end of the CSF file output by setting the Output Extra fields option to Yes.

5.1.2 Label Bar

Menu Option Labelling -> Label Bar

Command Line cads_rc_lbar

Toolbar



Allows a Bar Label to be placed on the drawing for a bar set not yet labelled. Placement of bar labels is aided by side menu options to align vertically or horizontally with existing labels or to stack labels to form columns.

NOTE: If a bar set is already labelled a message to this effect is given and the command cancelled. Only one bar label is allowed per bar set.

5.1.3 New Label

Menu Option Labelling -> New Label

Command Line cads_rc_newlabel

Toolbar



Allows the creation of a new set of bars (and hence adds new line in the Bar List for this set) in the form of a Bar Label only. On selecting the command, a dialog giving information regarding this command is activated. Further views of this bar set can be generated using the 'Add View' commands as required.

5.1.4 Masking a Label

Mask Text

To create a mask for set of selected labels, use this command.

Menu Option Labelling -> Mask Text Command Line cads_rc_mask

Toolbar



Allows the creation of a new Mask object behind the label such that the entities behind label are hidden behind the mask object so that plotting is clear for congested bars.

Mask All

To create mask for all labels in the drawing, use this command.

Menu Option Labelling -> Mask All

Command Line (command "cads_rc_mask" "A" "All" "")


Toolbar 

Un Mask All

To Un mask for all labels in the drawing, use this command.

Menu Option Labelling ->Un Mask All

Command Line (command "cads_rc_mask" "D" "All" "")

Toolbar 

Bar Ref. '08'

Menu Option Labelling -> Bar Ref '08'

Command Line cads_rc_barref

Toolbar 

The Bar Reference command is used to position call offs showing the bar mark of the picked bar/bars. They can be used for calling off bar runs etc. as shown in Figure 5.4.



Figure 5.4 Bar Run with Bar References Added

You can add bar references to individual bars or several at a time. To add bar refs. to an individual bar, select a bar on the initial prompt and then place the bar ref. as required. To add bar refs. to

several bars, press enter on the initial prompt, set the angle and then select the bars to be labelled. Then pick two points to indicate the position and alignment of the bar refs.

These Bar References are linked to the relevant bar set and therefore any change in bar mark automatically updates the bar references. Any Bar Reference can be repositioned using AutoCAD move as required.

The bar references can be selected when prompted to 'Pick a Bar Set' when using the Add View or New Set functions.

5.1.5 Tick & Tag

Menu Option Labelling -> Tick and Tag

Command Line `cads_rc_autotag`

Toolbar



The Tick & Tag command is used to position call offs showing the bar mark of the picked bars beside an arrow indicating the bar ends. Tick & Tag can be used to indicate the bar ends of bars detailed on top of each other with laps etc. as shown in Figure 5.5.



Figure 5.5 Tick and Tag

You can tick & tag all the bars on one face of the structure using the 'crossing' window selection method.

5.1.6 Leader 1 (Leader with Arrow)

Menu Option Labelling -> Leader 1

Command Line `cads_rc_leader1`

Toolbar



This Leader command is not the AutoCAD leader command, it is a command written within RebarCAD and is only available when RebarCAD is loaded. Its advantages over AutoCAD Leader are as follows:

1. Can be configured to underline text or to start at the end of text.
2. Automatically finishes the leader to a picked text item to ensure consistency across the drawing.
3. Can automatically find the correct label for a picked bar set.
4. Can stack leaders for labels in columns.
5. Configuration for layer, arrow length, arrow width and block name.

5.1.7 Leader 2 (Leader with Dot)

Menu Option Labelling -> Leader 2

Command Line `cads_rc_leader2`

Toolbar 

This Leader command is not the AutoCAD Leader command. It is a command written within RebarCAD and is only available when RebarCAD is loaded. Its advantages over AutoCAD Leader are as follows:

1. Can be configured to underline text or to start at the end of text.
2. Automatically finishes the leader to a picked text item to ensure consistency across the drawing.
3. Can automatically find the correct label for a picked bar set.
4. Can stack leaders for labels in columns.
5. Configuration for layer, dot X & Y scale factors and block name.

5.1.8 Leader 3 (Leader with no end block)

Menu Option Labelling -> Leader 3

Command Line `cads_rc_leader3`

Toolbar Not Applicable

This Leader command is not the AutoCAD Leader command. It is a command written within RebarCAD and is only available when RebarCAD is loaded. Its advantages over AutoCAD Leader are as follows:

1. Can be configured to underline text or to start at the end of text.
2. Automatically finishes the leader to a picked text item to ensure consistency across the drawing.

3. Can automatically find the correct label for a picked bar set.
4. Can stack leaders for labels in columns.
5. Configuration for layer, X & Y scale factors and block name.

5.1.9 More....

Activates a sub-menu with the following options:

5.1.10 Tag to Line

Menu Option Labelling -> More -> Tag to Line

Command Line `cads_rc_tag2line`

Toolbar Not Applicable

This command is similar to Tick & Tag but it can be used to align a number of Tick & Tags to a common base line. Tag to Line can be used for sloping sections as shown in Figure 5.6.

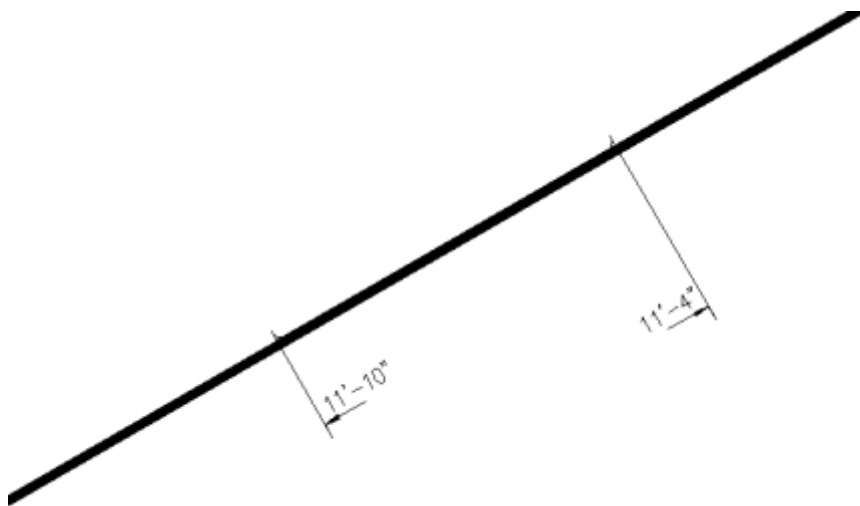


Figure 5.6 Tag to Line

5.1.11 Mult. Arrow Leader 1

Menu Option Labelling -> More -> Mult Arrow Leader 1

Command Line `cads_rc_mleader1`

Toolbar Not Applicable

This leader is very similar to AutoCAD Leader but it allows the positioning of a number of arrowheads along its length, as shown in Figure 5.7 Mult. Arrow Leader 1.

To use, pick the first arrowhead position, then pick the position of the end of the leader and finally, pick the positions of the additional arrowheads.



Figure 5.7 Mult. Arrow Leader 1

5.1.12 Mult. Arrow Leader 2

Menu Option Labelling -> More -> Mult Arrow Leader 2

Command Line `cads_rc_mleader2`

Toolbar Not Applicable

This leader is very similar to AutoCAD Leader but it allows the positioning of a number of dots along its length.

5.1.13 Next Bar Mark

Menu Option Labelling -> More -> Next Bar Mark

Command Line `cads_rc_nbmark`

Toolbar



The Next Bar Mark command will display the next available bar mark for use calculated from the highest bar mark in use for the last bar size detailed. For example, if bar mark 1087 was in use but bar mark 1042 was not in use, the Next Bar Mark command will prompt bar mark 1088, as it assumes 1087 and below are in use. This command does not search for all bar marks not in use and therefore will not prompt bar mark 1042.

5.1.14 Set Release Code by Entity

Menu Option Labelling -> More -> Set Release Code by Entity

Command Line `cads_rc_entset_title`

Toolbar



This will set the current Release Code to that of a bar set picked by the user. It can be useful on large drawings with a number of Release Codes in use.

5.1.15 Tools & Symbols

Menu Option Labelling -> More -> Tools and Symbols

Command Line `cads_rc_tools`

Toolbar



This activates a dialog where a number of useful tools to aid general drafting can be picked. The options are as shown in Figure 5.8.

1. Grid Generator
2. Grid Balloons
3. Line Breaks
4. Pipe Ends
5. Section Markers and Section Marker Config.
6. Arrow Tip
7. Level and Elevation symbols
8. Standard Text
9. Standard Hatch Patterns
10. Elevation Symbol

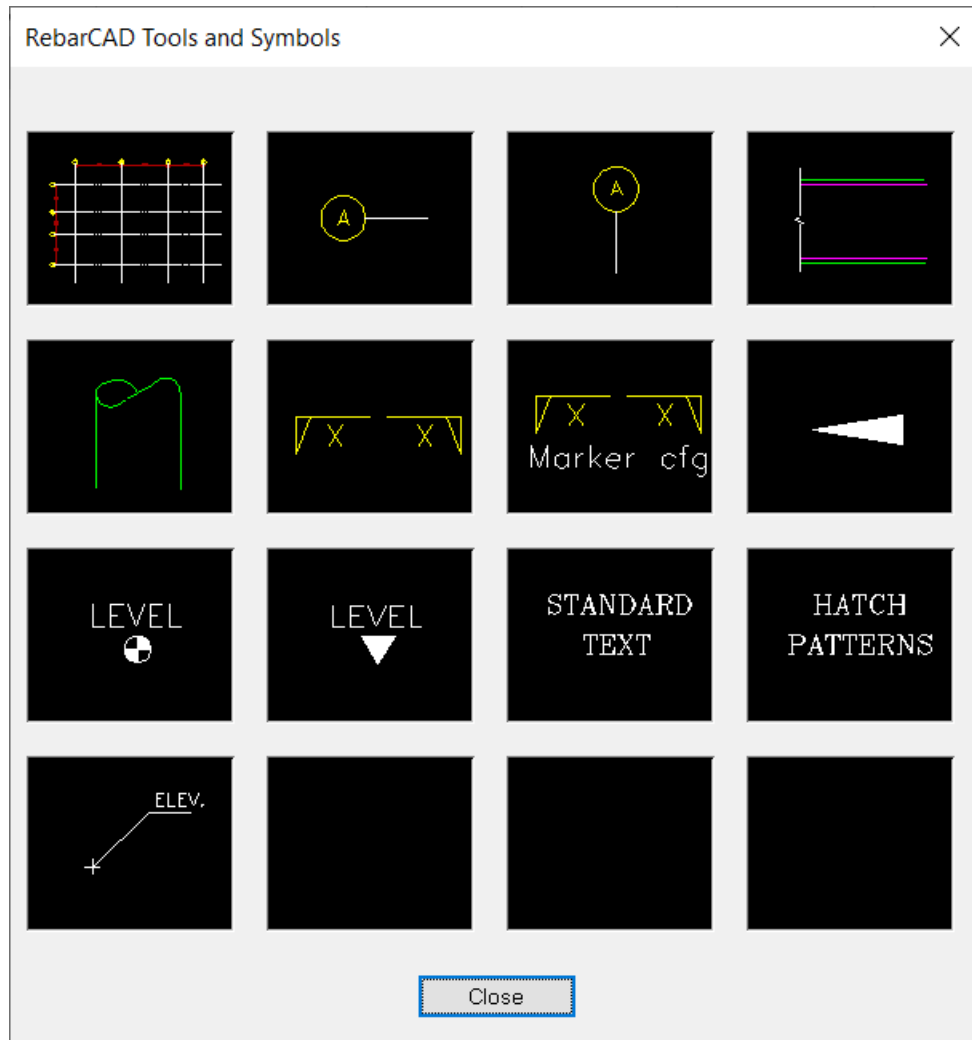


Figure 5.8 Tools and Symbols Dialog

6 Bar Editing

Chapter Objectives

This chapter describes the EDITING section of RebarCAD, which is primarily concerned with the editing of reinforcement.

The tools for EDITING are to be found off the RebarCAD pull down menu EDITING menu bar, where there are the following options:

6.1 Stretch Edit

Menu Option Editing -> Stretch Edit

Command Line `cads_rc_stretch`

Toolbar 

The Stretch Edit command allows bar views to be stretched in a similar fashion to AutoCAD stretch. Any bar view can be stretched, including ranges and runs, with all relevant views being updated automatically. If AutoCAD stretch is used on a bar, it will have no effect (if the entire bar view was in the stretch window, it will be moved as any entity would) but non RebarCAD entities will stretch as normal.

RebarCAD is arranged so that you are asked by default if you would like to allocate new bar marks to any bar sets which are stretched where other sets of the same bar mark exist outside of the stretch.

If Yes is entered, then new bar marks will be allocated to the stretched bar sets.

If No is entered, then all bar sets of that bar mark will be updated to the new stretched dimensions.

There are some limitations to the use of the Stretch Edit command on certain range/run types and these are listed as follows:

6.1.1 Radial Range Types

The Stretch Edit command does not support Radial range types. If the included angle of a Radial range needs to be altered, then the existing range has to be deleted and a new range drawn in its place to the new parameters.

6.1.2 Varying and Trapezoidal Tapered Ranges

The Stretch Edit command does not support Varying and Trapezoidal Tapered range types. If the area covered by either of these range types alters, then the existing range has to be deleted and a new range drawn in its place to the new parameters.

6.1.3 Run To Path and Alternate Run To Path

The Stretch Edit command does not support the Run To Path or Alternate Run To Path options. If the path along which the bar run is placed alters, then the existing run must be deleted and a new run drawn to the new path.

6.1.4 Linear Tapered Range Types

Although the Stretch Edit command allows stretching of these range types, it must be noted that any step increment applied to the range will be re-set to zero by the stretch. It is then necessary to re-apply the step increment to the range.

NOTE - If a Linear Tapered range with a step increment applied requires stretch editing and the Bar List has been issued, then it is advisable to delete the whole bar set and replace it with a new bar set. This is because the editing will remove the step and therefore increase the number of lines required for that tapered range in the Bar List. This may cause the tapered range to be repositioned in the Bar List onto a new page.

NOTE - The RebarCAD Stretch Edit command also stretches non RebarCAD entities as if stretched using AutoCAD stretch.

NOTE – If you want to stretch the bar lengths in a single indicator linear tapered range you will have to edit the first and last bar dimensions using the bar label edit command, see Chapter 6.3.

6.2 Stretch To Stock

Menu Option Editing -> Stretch To Stock

Command Line `cads_rc_stkstretch`

Toolbar

The Stretch to Stock options allow straight bars (side & plan views) to be stretched with additional bars added where the stretch distance would make the original bar length greater than the maximum stock length entered by the user.

On selecting Stretch to Stock, the command line prompts: -

Check for other sets and re-assign Bar Marks/Stock? <Yes>:

Type S or Stock and press enter, this will display the RebarCAD Stock Length Defaults dialog, as shown in Figure 6.1

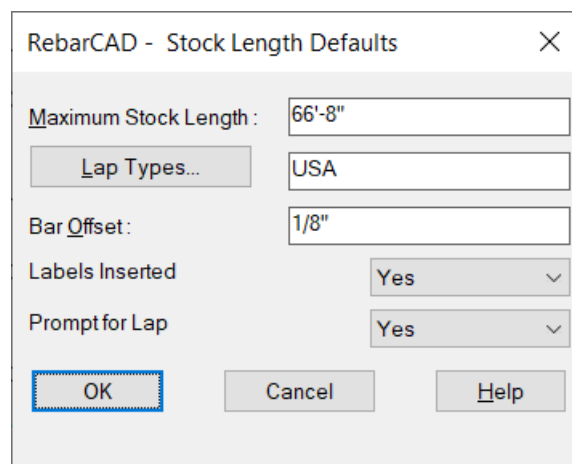


Figure 6.1 Stock Length Defaults Dialog

This dialog allows the creation of default data used by the Stretch To Stock option. The options available are as follows: -

Maximum Stock Length

This value is the maximum bar length for the bars selected for stretching. If the stretched bar length would exceed the maximum bar length, additional straight bars are inserted to complete the stretch.

Lap Types

A lap type (as defined in the configured bar types file) can be selected by picking the Lap Types button. This will determine the default lap length command line prompt. Specific lap lengths can be entered at the command prompt, as required.

Bar Offset

This is the plotted offset distance between lapped bars.

Labels Inserted

When this is set to Yes, you are asked to place the bar labels for any additional lapped bars as they are drawn. The bar to which each label refers is highlighted when the label insertion is asked for.

Prompt for Lap

When this is set to Yes, the default bar lap based upon the Lap Type is offered as default. At this point another lap distance can be entered, if required. When it is set to No, all additional bars are drawn automatically with laps based on the Lap Types setting.

6.3 Bar/Label Edit

Menu Option Editing -> Bar Label Edit


Command Line `cads_rc_dlg_edit`

Toolbar



Left mouse button double – clicking on a RebarCAD entity will also call this command.

Activates the Edit Bar Label Data dialog where all bar details are displayed. All active fields displayed are available for editing.

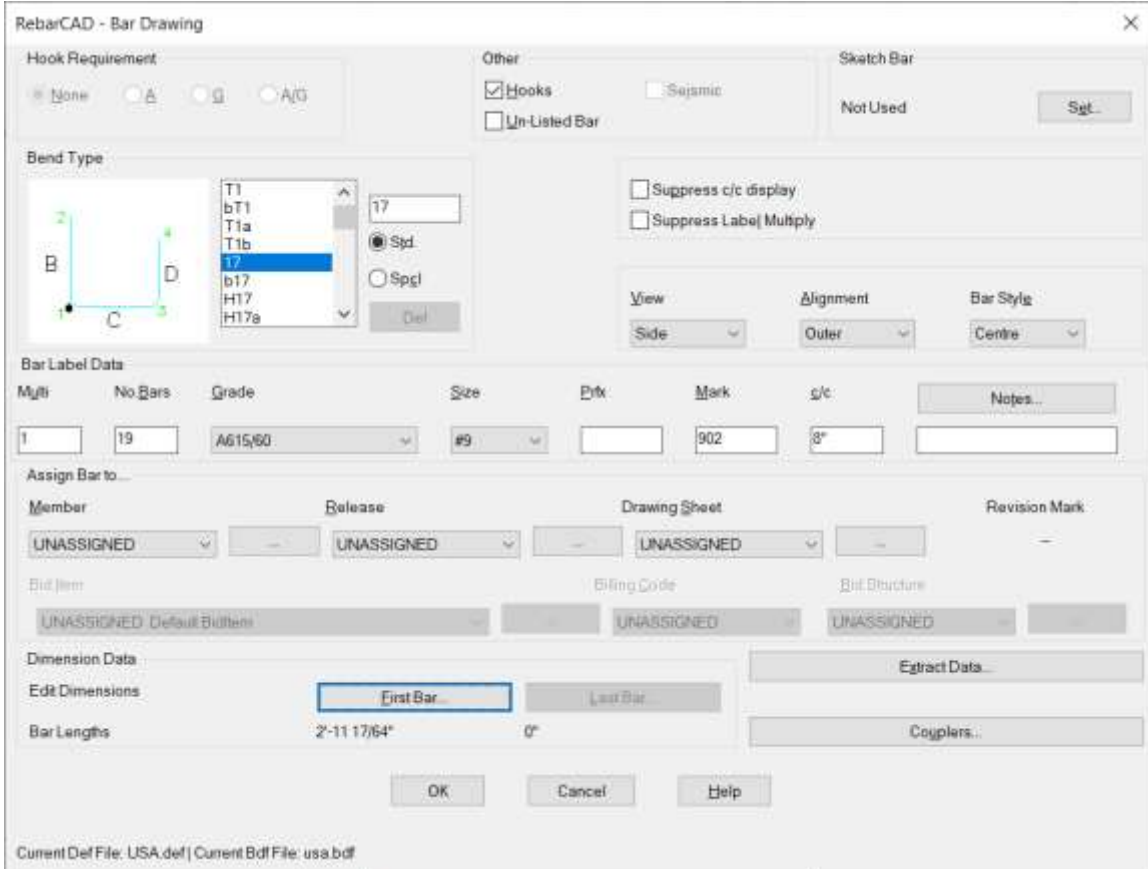

The dialog box is titled "RebarCAD - Bar Drawing". It contains several sections:

- Hook Requirement:** Radio buttons for None, A, G, and A/G.
- Other:** Checkboxes for Hooks (checked), Un-Listed Bar, and Seismic.
- Sketch Bar:** A button labeled "Set..." and the text "Not Used".
- Bend Type:** A diagram showing a bar with bends labeled B, C, and D. A list box shows options: T1, bT1, T1a, T1b, 17 (selected), b17, H17, H17a. An input field shows "17". Radio buttons for Std (selected) and Spcl are present, along with a "Del" button.
- Suppress c/c display** and **Suppress Label Multiply** checkboxes.
- View:** A dropdown menu set to "Side".
- Alignment:** A dropdown menu set to "Outer".
- Bar Style:** A dropdown menu set to "Centre".
- Bar Label Data:** Fields for Multi (1), No Bars (19), Grade (A615/60), Size (#9), Pkts (), Mark (902), s/c (8"), and a "Notes..." button.
- Assign Bar to:**
 - Member:** UNASSIGNED
 - Release:** UNASSIGNED
 - Drawing Sheet:** UNASSIGNED
 - Revision Mark:** (empty)
- Bar Item:** UNASSIGNED Default Buttons
- Billing Code:** UNASSIGNED
- Bar Structure:** UNASSIGNED
- Dimension Data:**
 - Edit Dimensions:** Buttons for "First Bar" and "Last Bar".
 - Bar Lengths:** 2'-11 17/64" and 0".
- Buttons:** Extract Data..., Couplers..., OK, Cancel, Help.
- Footer:** Current Def File: USA.def | Current Bdf File: usa.bdf

Figure 6.2 Edit Bar Label Data Dialog

The 'Edit Bar Label' data dialog allows the user to change or add data to an existing bar set. The options available within the dialog are as follows:

6.3.1 Bend Type

A slide of the current bend type is displayed, the bend type can be changed by selecting another from the scrolling list or entering the required bend type in the input field. Changing this will cause all views of that bar to be updated. The orientation of existing bar views may be drawn differently from the original, so some use of rotate in AutoCAD may be required.

6.3.2 View, Alignment & Bar Style

These options are greyed out and so cannot be changed from within the dialog. They only show the picked bars View, Alignment and Bar style. You can edit these settings for a particular view by using the Change Bar Style and Change Bar View commands described later in this chapter.

6.3.3 Bar Label Data

This consists of 8 fields which, amongst other things, assist in calculating the No. of bars required and pass data to the Bar List. The fields are as follows (See also 'Chapter 3 - Bar Drawing').

Multi.

This is a label multiplier.

If a value of 1 is input then the label will show for example 10 601, giving a No. of bars of 10 in the Bar List.

If a value of 3 is entered in the Multi. field, the label will show 3x10 601, giving a No. of bars of 30 in the Bar List. (See also 'Suppress Label Multiply' later in this section)

The label multiplier also allows invisible multipliers in the bar label. Its objective is to multiply the no. of bars in the bar label for scheduling purposes. This is achieved by entering multipliers in the form 1*2. The outcome of applying multipliers in this format is shown in Figure 6.3.

Multi Input	Bar Drawing dialog No. Bars	No. bars in bar label with suppress label multi NO	No. bars in bar label with suppress label multi Yes	No. bars in the Bar List
1	10	10 601	10 601	10
1*2	10	10 601	10 601	20
2	10	2x10 601	20 601	20
2*2	10	2x10 601	20 601	40

Figure 6.3 Label Multiplier Affects

(See also the chapter “Bar Drawing”)

No. Bars

The number of bars required can be input in this field.

If it is left at 0, this will be calculated when a range view is drawn.

If the number of bars has not yet been determined, the label will be shown in the form? 601.

If the number of bars has already been calculated by specifying the c/c on a range, editing the number of bars will force the c/c value to display the average c/c. (See also “Suppress c/c Display” in this section).

Type

This specifies the grade of reinforcement for the bar, the required grade is selected from the pop-down list. All views of the bar are re-drawn to the new grade. The Bar List is updated and, where necessary, bending data set to minimum values if the change in grade means existing values are too small. (See also Chapter 8 - Enquiry).

Size

The required bar size is selected from the options available in the pop-down list. All views of the bar are re-drawn to the new size. The Bar List is updated and, where necessary, bending data is set to minimum values if the size is increased and if existing values are too small for the new size. (See also Chapter 8 - Enquiry).

Prfx

This input can be used to add/edit an alphanumeric bar mark prefix. If, for instance, bar mark 603 was to be edited by entering AA in the Prfx. Field, a new bar mark of AA603 would be allocated to the bar.

Mark

The bar mark can be altered by picking on the bar mark field and typing in the new bar mark.

If the entered bar mark is not in use, the set is allocated the new mark and the bar label, bar refs., ticks, tags and Bar List are updated accordingly.

If the entered bar mark is in use, a warning is given along with an option to change this set to the entered bar mark.

If NO is entered, the dialog is displayed again and another bar mark can be entered or the cancel button picked to exit with no change.

If YES is entered to the change to at the entered bar mark prompt, a further warning may be given if there is a change in bend type. Continuing will update this set to the entered bar mark. The orientation of existing bar views may be drawn differently from the original, so some use of rotate in AutoCAD may be required. (See also Chapter 8 - Enquiry).

NOTE

Although RebarCAD allows bar marks to consist of up to 30 characters, certain output file formats only support up to 6 character bar marks.

c/c

This is the bar centres used in range views to calculate the number of bars required. The bar centres can be altered by picking on the c/c field and typing in the required c/c. If the bar has a range view, the no. of bars will be recalculated to the new c/c's. (See also Suppress c/c display' later in this section).

Notes

Notes can be added to the label by picking on the Notes field and typing in the required note or by picking on the Notes Button and selecting a note from the list provided. (This list can be added to by the user - see also Chapter 8 - Enquiry).

By picking on the Notes Button you are also offered four extra notes fields, all with a standard notes option, that appear below the standard notes.

6.3.4 Suppress c/c Display

If toggled by picking the box to display an X, a label which previously displayed 12 601-8" will then display 12 601 and vice versa.

If the bar c/c are suppressed, then the no. of bars value will remain constant and the c/c value adjusted to maintain the no. of bars for any alteration to range length via stretch bars.

If the c/c are not suppressed then the c/c will remain constant with the no. of bars altered to suit any change in range length via stretch bars.

6.3.5 Suppress Label Multiply

If activated by picking the box to display an X, a label which previously displayed 3x10 601 will then display 30 601 and vice versa. (See also 5.3.3 Multi.)

6.3.6 First Bar

Picking on the first bar button accesses the 'Dimension Entry' dialog. Here, existing dimensions of the bar can be altered or missing dimensions added. The scaled diagram will be updated to indicate any alterations. Upon leaving the dialog via the OK button and leaving the 'Edit Bar Label' Data dialog via the OK button, the Bar List and all the bar views will be updated to the new dimensions.

If there is more than one set of this bar mark, upon leaving the 'Edit Bar Label' Data dialog an option to create a new bar mark for this set is offered.

If YES is replied, then this set can be given a new bar mark,

If NO is replied, then all sets of this bar mark are updated to the new dimensions entered.

6.3.7 Last Bar

This is only available if the set is a tapered bar set. It offers the same features as the 'First Bar' option.


6.3.8 Release Code

The release code that this bar is allocated to is displayed. The bar can be allocated to a different release code by activating the pop-down list and then picking the required release code from the list which shows all the release codes created on this drawing.

6.4 Range Edit

Menu Option Editing -> Range Edit

Command Line `cads_rc_reedit`

Toolbar 

Left mouse button double – clicking on a RebarCAD entity will also call this command.

Activates the Edit Range dialog where all the range data for that bar set can be accessed.

NOTE - To access the range data, the range line or bar run of the bar set must be picked. If a bar view or label is picked, then the command will display the Edit Bar Label Data dialog as if the Bar Label Edit command had been picked.

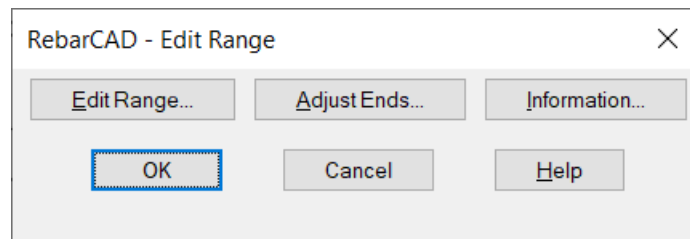


Figure 6.4 Edit Range Dialog

The Edit Range dialog allows you to edit the range data of a bar set. It also allows the bar dimensions of tapered bar ranges to be edited. The options available within the dialog are as follows:

6.4.1 Information

This displays the RebarCAD Entity Information dialog which shows the range type, bar marks, grade and size etc. of the bar set picked.

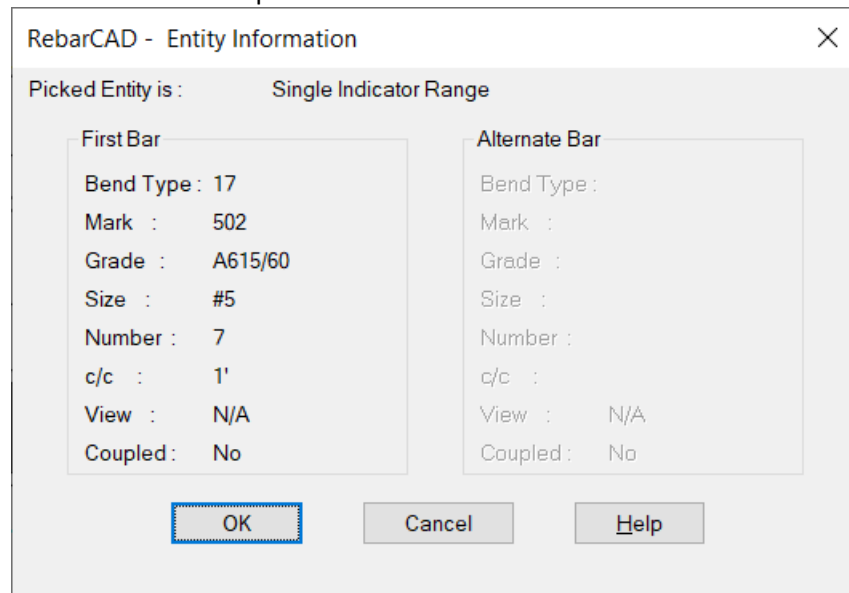


Figure 6.5 Entity Information Dialog

6.4.2 Adjust Ends


This option allows ranges to be skewed so that the number of bars is calculated along the skewed range length rather than the drawn range line length. The skew option is activated by picking the Adjust Ends option. You will then be asked to pick angles to which the range end markers will be re-drawn. An example of skewing a bar range can be found in Appendix B, along with a method for skewing the range end markers whilst maintaining the drawn range line length as the length from which the number of bars are calculated.

6.4.3 Edit Range

This option will display the RebarCAD Range Edit or the RebarCAD Multiple Range Edit dialog, depending upon the range type picked for editing.

6.4.4 RebarCAD Range Edit

The RebarCAD Range Edit dialog is displayed for range types, except multiple ranges, which display the RebarCAD Multiple Range Edit dialog described later in this section.

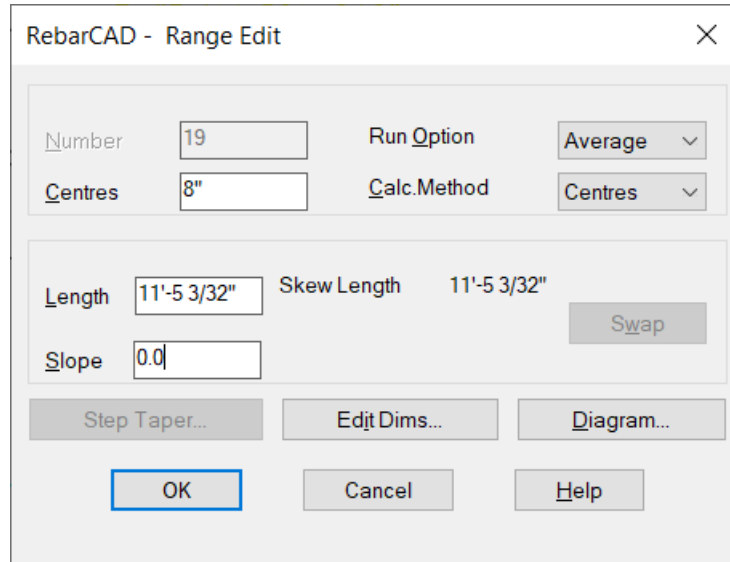

The dialog box is titled "RebarCAD - Range Edit" and contains the following fields and buttons:

- Number:** A text box containing the value "19".
- Run Option:** A dropdown menu set to "Average".
- Centres:** A text box containing the value "8".
- Calc. Method:** A dropdown menu set to "Centres".
- Length:** A text box containing the value "11'-5 3/32\"".
- Skew Length:** A text box containing the value "11'-5 3/32\"".
- Slope:** A text box containing the value "0.0".
- Buttons:** "Step Taper...", "Edit Dims...", "Diagram...", "OK", "Cancel", and "Help".
- Swap Button:** A button located between the Length and Skew Length fields.

Figure 6.6 Range Edit Dialog

The Range Edit dialog has the following options available:

Number

This is the number of bars in the range. The display is greyed out if the Calc. Method is set to Centres, which means that the number of bars is automatically calculated from the Centres and Length values. If you wish to manually adjust the number of bars, then the Calc. Method must be set to Number first.

Centres

This is the maximum bar c/c's upon which the number of bars calculation is being based upon. Editing this value will re-calculate the number of bars required in the range.

Run Option

This controls how any bar run views of the bar range are to be drawn. If set to Average, then any bar runs will be drawn with the bars at average c/c spacing. If set to Runout, then any bar runs will be shown with the bars drawn at the specified c/c spacing with the last spacing being the runout c/c value.

Calc. Method

This controls how the number of bars required in the range is being calculated. If set to Centres, then the number of bars is being calculated from the Centres value. If set to Number, then the

number of bars can be entered with the Centres being adjusted to suit the number of bars over the range length.

Length

This is the length of the drawn range line and it is used in calculating the number of bars in the range. If the Skew Length beside it differs from the Length, then the Skew Length is used to calculate the number of bars in the range.

Skew Length

If a bar range has had the end markers adjusted to produce a skew range, then the skew length is shown here. If the Skew Length is reported as being the same as the Length, then the range has not been skewed.

Slope

If the range picked was drawn as a foreshortened view, then the slope angle it represents will be reported as a value other than zero. Entering a slope value of 0.1 will always set the Skew Length to that of the Length. This allows ranges to have the end markers skewed but the bar number calculation still based on the drawn range line length.

Step Taper

This option is available if the range picked was a Linear Tapered range. It accesses the Step Taper dialog where a step increment can be applied to rationalise the number of bar suffixes in the range. An example of applying a step increment to a bar range can be found in Appendix B.

Edit Dims

This option allows you to edit the bending data of a bar in the range. If the range picked was a tapered range, then all the bar data is shown in the form of a mini Bar List. To edit a particular bar's bending data, the line for that bar can be double clicked. Its data will then be displayed to allow editing with no effect on the other bars' dimensions.

Diagram

This will display help diagrams indicating the calculation process of sloping and skewed bar ranges.

6.4.5 RebarCAD Multiple Range Edit - Group List

The RebarCAD Multiple Range Edit - Group List dialog is displayed if the range picked was a multiple range type.

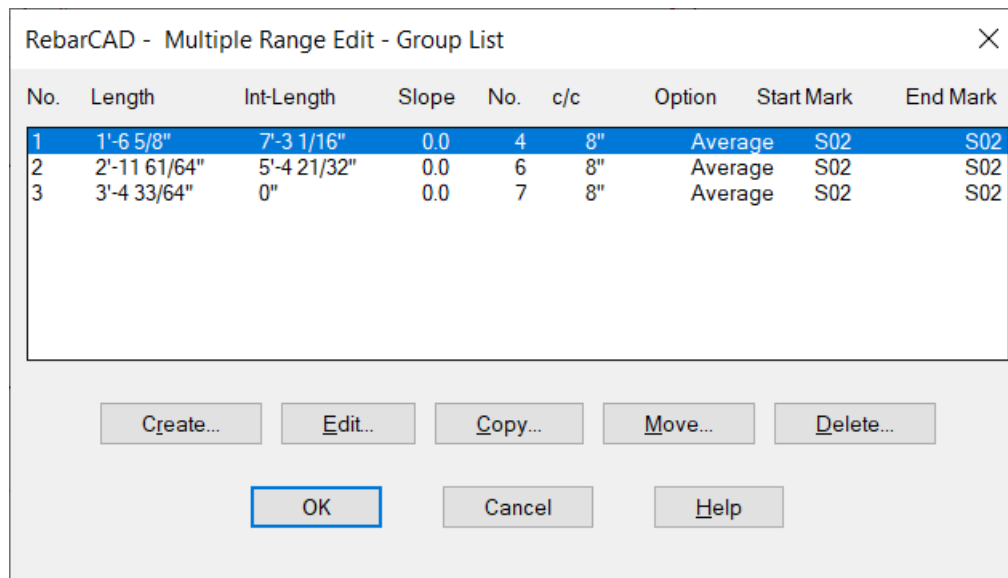


Figure 6.7 Multiple Range Edit - Group List Dialog

The Multiple Range Edit - Group List dialog displays the range information of each range group in the picked range in the form of a spreadsheet.


The Multiple Range Edit - Group List dialog has the following options:

Create

This option allows a new group to be created in the range. A blank Multiple Range Edit dialog will be displayed where the required group data can be entered. On exiting the dialog, you will be asked to allocate this new group a group number so that it can be added to the range.

Edit

This option will display the Multiple Range Edit dialog for the group highlighted in the group list.

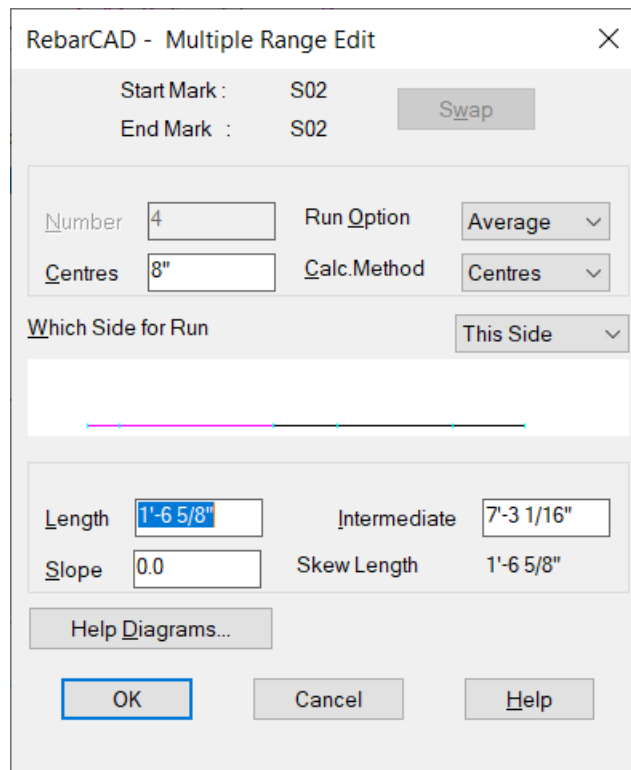

RebarCAD - Multiple Range Edit

Start Mark : S02 End Mark : S02

Number Run Option ▾

Centres Calc. Method ▾

Which Side for Run ▾

Length Intermediate

Slope Skew Length

Figure 6.8 Multiple Range Edit Dialog

The Multiple Range Edit dialog has the following options:

Start Mark - End Mark

This option refers to Alternate range types. Using the Swap button you can change the bar mark of the first bar in the group.

Number

This is the number of bars in the range. The display is greyed out if the Calc. Method is set to Centres, which means that the number of bars is automatically calculated from the Centres and Length values. If you wish to manually adjust the number of bars, then the Calc. Method must be set to Number first.

Centres

This is the maximum bar c/c's upon which the number of bars calculation is being based. Editing this value will re-calculate the number of bars required in the range group.

Run Option

This controls how any bar run views of the range group are to be drawn. If set to Average, then any bar runs will be drawn with the bars at average c/c spacing. If set to Runout, then any bar runs will be shown with the bars drawn at the specified c/c spacing with the last spacing being the runout c/c value.

Calc. Method

This controls how the number of bars required in the range group is being calculated. If set to Centres, then the number of bars is being calculated from the Centres value. If set to Number, then the number of bars can be entered with the Centres being adjusted to suit the number of bars over the range length.

Which Side for Run

This allows any bar run views of the range to be re-drawn on the other side of the line drawn to specify the bar run.

Length

This is the length of the drawn range line for the group and it is used in calculating the number of bars in the range. If the Skew Length beside it differs from the Length, then the Skew Length is used to calculate the number of bars in the range.

Intermediate

This is the distance from the end of the current range group to the start point of the next range group.

Skew Length

If range group has had the end markers adjusted to produce a skew range, then the skew length is shown here. If the Skew Length is reported as being the same as the Length, then the range group has not been skewed.

Slope

If the range picked was drawn as a foreshortened view, then the slope angle the group represents will be reported as a value other than zero. Entering a slope value of 0.1 will always set the Skew Length to that of the Length. This allows ranges to have the end markers skewed but the bar number calculation still based on the drawn range line length.

Help Diagrams

This will display help diagrams indicating the calculation process of sloping and skewed bar ranges.

Copy

This option will copy the currently highlighted group in the group list to a group number you specify.

Move

This option will move the currently highlighted group in the group list to a group number you specify.

Delete

This option will delete the currently highlighted group in the group list.

6.5 Strike Out Set

Menu Option Editing -> Strike Out SET

Command Line `cads_rc_sbarset`

Toolbar 

This command is used when you wish to erase a bar set from the drawing and draw a line through the set in the Bar List. Picking one bar view from the drawing will select all views of that bar set automatically and on confirmation erase all bar views and draw a line through the line in the Bar List for this bar set. This can be useful for revisions.

6.6 Change Release Code

Menu Option Editing -> Change Release Code

Command Line `cads_rc_cmember`

Toolbar 

This command can be used to change the Release Code to which one or more selected bars are allocated. If this command is used and the Bar List has already been formatted, the bars will be re-sorted by release code.

6.7 View / Set Toggles

Activates a sub-menu with the following options:

6.7.1 Change SET to View

Menu Option Editing->View/SET Toggles->Change SET To View

Command Line cads_rc_SET2view

Toolbar 


This command will change a Bar Set to a Bar View of another set. The line in the Bar List for the set to be changed to a bar view will be erased, along with its bar label, if present.

NOTE - Both sets must be of the same bar mark.

6.7.2 Change View to SET

Menu Option Editing->View/SET Toggles->Change View To SET

Command Line cads_rc_view2SET

Toolbar 

This command will change a Bar View to Bar Set. This will add a new line to the Bar List for the New Set and allow a label to be placed on the drawing for the New Set.

6.8 More.....

Activates a sub-menu with the following options:

6.9 Change Bar Style

Menu Option Editing->More->Change Bar Style

Command Line cads_rc_cbstyle

Toolbar 

This command is used to toggle bars from centre line to profile and vice versa. More than one bar view can be selected at a time and any selection can consist of a mixture of centre and profile.

6.10 Change Bar View

Menu Option Editing->More->Change Bar View

Command Line `cads_rc_cview`

Toolbar



This command is used to change the view of a picked bar. For instance, it can be used to change a side view of a bar to a plan view etc.

NOTE - If the required view is not drawn, it means that not all of the bar bending data required to draw the view has been input.

6.11 Add Entity To View

Menu Option Editing->More->Add Entity to View

Command Line `cads_rc_addview`

Toolbar



This command can be used to link non-RebarCAD entities to views. It could be used, for example, to create custom range lines to attach to a bar view.

6.12 Add Text To View

Menu Option Editing->More->Add Text to View

Command Line `cads_rc_addtext`

Toolbar



This command can be used to attach text to a picked bar or label. The text automatically inherits the 'bar label' layer, height, font etc. and when entered, the bar label placement tools are available to align vertically, horizontally or stacked.

6.13 Redraw RC EntMore->Redraw RC entity

Command Line `cads_rc_redraw`

Toolbar



This command is used to force RebarCAD to re-draw the picked items as if newly created. If you have changed the RebarCAD configuration this command can be used to redraw the RebarCAD entities with the new settings.

7 Group Layering Option (GLO)

Chapter Objectives

This chapter describes the Group Layering Option, which can be used to differentiate between reinforcement in the top or bottom of a slab or either face of a wall by easily placing bars, ranges and bar labels etc. on various associated AutoCAD layers.

The benefit of the GLO is that the drawing can be readily presented to show only the top bars or even just the bars in the T2 layer. For example, if you set up the GLO in the appropriate manner, you also have the opportunity of using alternative line styles. If your normal practice is to use broken lines for top bars and solid for bottom, then this can be easily achieved.

7.1 Setting Up the Layers

A full description of this procedure is given later in this section but a brief outline is shown here for the sake of clarity. There are two steps to defining the layer groups. One is to name the layers and define their line type and colour attributes and the other is to name the groups and assign the layers to each RebarCAD entity. A description of each RebarCAD entity is also given later in this section.

The layers are named in a file called RC-LAY.TXT, which is used to set up all the RebarCAD layers and is normally kept in the ??\CADS-RC\PARAMS directory. The groups are defined in a special file called RCGRPLAY.GLO also in the ??\CADS-RC\PARAMS directory. Both of these files are default files supplied with RebarCAD. If you intend to change them to suit your own requirements, then you are strongly advised to copy them first to another directory and modify the new files rather than the default files. RebarCAD can be pointed to the new files by altering the Group Layer File and Layer Define File settings in the Miscellaneous configuration options. This will avoid the new files being overwritten by any updates to RebarCAD you install subsequently. Also, by using alternative paths or filenames for these two files, you can set up different GLO arrangements for different projects. The configuration can then be changed to point to the appropriate files depending on the project.

To make any changes act as defaults for subsequent drawings, set the Write Prototype Settings option to YES in the Miscellaneous Configuration, so that a new configuration file is written to the hard disk.

7.2 Using the Group Layering Option

By default, RebarCAD uses the standard layers as set up in the Configuration options. To use the Group Layering Option, you must set the GROUP LAYERING OPTION to YES in the Miscellaneous

configuration. Once that is done, you will be prompted to 'Pick required group layer or to Ignore' near the start of each function, from the screen menu, which draws a RebarCAD entity.

The layer groups defined are listed on the side menu with three standard options at the bottom of the menu. We advise you to maintain these options on any GLO files you create.

These standard options are: Ignore, All and None. Ignore can be selected in response to the 'Pick required group layer or I to Ignore' prompt, and will place the entities drawn on the standard layers as if the GLO was not in use. The All and None prompts are for use with the GLO control facilities described later.

After the first GLO selection of an editing session, a similar prompt appears in subsequent RC entity functions, this time with the previous layer group offered as a default. The layer groups are defined using a code number which appears in the default brackets rather than the group name. If you want to use a different group, then select the group name from the side menu, although you can type in the appropriate group number if you prefer.

The Ignore option places the entities on the standard default layers. Not those specified in the GLO. This option has to be selected each time you wish to use the default layers. Consequently, if you wish to draw a number of RC entities on the default layers, you are advised to turn the Group Layering Option OFF in the Miscellaneous configuration.

The tools for GROUP LAYERING CONTROL are to be found off the RebarCAD pull down menu GROUP LAYERING menu bar where there are the following options:

7.2.1 Show Group

Menu Option Group Layering -> Show Group

Command Line `cads_rc_show_glo`

Toolbar 

This command allows you to turn on a group by picking it from the side menu. You can use this command to turn on as many groups as you wish.

7.2.2 Show Group ONLY

Menu Option Group Layering -> Show Group ONLY

Command Line `cads_rc_show_one_glo`

Toolbar



This command will show only the group picked from the side menu. Any other groups will be turned off. This is useful for preparing a drawing for plotting where you only require the picked layer to be plotted.

7.2.3 Show All Groups

Menu Option Group Layering -> Show All Groups

Command Line `cads_rc_show_glo A`

Toolbar



This command turns on all the group layers.

7.2.4 Suppress Group

Menu Option Group Layering -> Suppress Group

Command Line `cads_rc_!show_glo`

Toolbar



This command turns off the group picked from the side menu.

7.2.5 Suppress Group ONLY

Menu Option Group Layering -> Suppress Group ONLY

Command Line `cads_rc_!show_one_glo`

Toolbar



This command turns off the group picked from the side menu and turns all other groups on.

7.2.6 Suppress All Groups

Menu Option Group Layering -> Suppress All Groups

Command Line `cads_rc_show_glo N`

Toolbar



This command turns all the groups off.

7.2.7 Change to Other Group

Menu Option Group Layering -> Change to other Group

Command Line `cads_rc_change_glo`

Toolbar



This command allows you to change RC entities on one group layer to another group layer. It simply requires you to select the RC entities you wish to change and then pick the group you wish to change them to from the side menu. RebarCAD will redraw the selected items on their new group layer.

7.3 Group Layering and Non - RC Entities

The GLO facilities are designed to work specifically with bar views and their associated components. However, there is no reason why any object cannot be drawn on one of the group layers so that it can be turned on or off with the group. At present, other RebarCAD objects such as outlines are drawn according to their configured layers and the GLO does not over-ride these settings. If you want such objects on one of the group layers, then you will need to change the object's layer.

7.4 Group Layering Option

The Group Layering Option (GLO) allows bars and other RC entities to be assigned to groups of layers so that it is easy to manipulate details showing reinforcement in various locations such as top or bottom faces of a slab.

The method of using the GLO is described earlier in this manual. The following sections tell you how to set the layers and groups and also define each RebarCAD entity. To help you by illustrating the principles, an example is included later in this chapter.

7.5 RC Entities

RebarCAD entities are drawing objects which relate in some manner to the bar sets RebarCAD uses to display its details. Most of them are linked to the bar database.

Once the group layering option is activated, whenever a RebarCAD entity has to be drawn, you must assign it to one of the defined group layers. If several entities are to be drawn within the one command, you will only be asked once and all the entities will be assigned as appropriate.

The following entities are recognised by RebarCAD and are used in its layer assignment and GLO set up files.

Rebars	-	the reinforcing bar plot line
Bar run	-	the bars (bar dots) drawn in section
Ticks	-	the tick marker indicating the end of a bar
Label	-	the text label describing the bar set
Range line	-	the line between end markers in a range
Range intermid	-	the range line between groups in a multiple range
RC leader	-	the line from the range or bar to the label
End marker	-	the symbol marking the limits of a range group
Bar ref	-	the bar mark text normally used with runs
Range refs	-	the range text used with multiple range groups
Range dots	-	the range/bar line intersection markers
Tags	-	the symbols pointing to the mark text at bar ends
Tag text	-	the bar mark text used at bar ends
Tension symbol	-	coupler tension symbol
Compression symbol	-	compression symbol coupler
Thread symbol	-	coupler thread symbol
Coupler TXT	-	coupler label text

Rebars can also have a colour assigned to allow alternative pen thicknesses when drawing its plot line or its profile.

Profile colour - the colour for the correct profile pen.

Centre colour - the colour for the correct centre plot line pen.

7.6 Naming the layers

rclay.txt. This file is installed in the ??\CADS-RC\PARAMS directory and is updated each time a later version of the program is installed. Because of this, you are advised to make a copy, unless you are happy with the defaults and either rename it or place it in another directory. If you do this, you should alter the path to the new file in the Miscellaneous Configuration. This can be found from the Miscellaneous Configuration option on the Enquiry menu and it is changed by entering the full path and name for the new file in the dialog entry labelled Layer definition path.

If you then set the Write prototype setting to YES, this will become the default layer file for all subsequent drawings.

The structure of the file is very simple and requires you to enter the data on three consecutive lines for each layer. Comments can also be added by preceding them with a ';' (semi-colon).

The first of the lines gives the layer name. Any valid name may be used.

The second line contains the linetype assigned to that layer.

The third line contains the colour or colour number assigned to that layer, e.g.:

```
Thickbars      ; this is a comment
CONTINUOUS
CYAN
```

There is nothing to prevent you from using the existing default layers, but when layer groups are turned off, other details using the layers will be turned off also. It is, therefore, better to assign layers specifically for the RebarCAD entities. You don't need a layer for each entity, as most of them can share a layer. It really depends on whether their linetype and pen thickness (colour) is the same.

Rebars are handled slightly differently in that there is an option to show them as a plot line or profile. This does not rely on layers but the line colour and the group definition file has keywords

to handle this independently. It is recommended that you set the layer definition to that required for the centre line.

7.7 Defining the Layer Groups

The layer groups are defined in a file called rcgrplay.glo also in the ??\CADS-RC\PARAMS directory. The order in which this file is laid out determines the order of the groups in the side menu which appears when RebarCAD needs to know which group to assign entities to. As supplied, you can define up to 19 groups, although if you need more and your display can accommodate them, the Group Layering Option section of the cads.mnu menu file can be edited to suit.

The syntax of the GLO file is quite simple:

Anything following a ';' is a comment

```
                ; this is a comment
```

Menu items appear between [square brackets] and must be the only item on the line apart from a subsequent comment.

```
[menu item]    ; optional comment
```

Each group name is a menu item and is immediately followed by the entity assignments (list of entities and their layers). The entity assignments contain the entity name followed by an = sign and then the layer name as defined in the layer definition file described above. The names are not case sensitive, but must match the names defined in the layer definition file.

```
Rebars = 0-70 ; optional comment
```

The example in the next section shows typical entries. You do not have to assign all the RC entities as any not assigned will be placed on their default layers.

The GLO works by mapping the menu items it finds in this file to a template within the cads.mnu file, which need not be edited unless you want more than 19 groups. This template allocates a number to each line of the side menu which matches the order of the menu items in the GLO file. The first menu item should not be altered, as this provides the standard 'Cancel' facility.

As the program reads the GLO file it creates the menu items and allocates them to the 'line no.' in the cads.mnu. If the menu items are followed by an entity name then the item is recognised as a group name. Empty brackets show as a blank line on the side menu.

This process is repeated until the end of the file is reached. In the GLO file supplied the last three menu items on lines 21, 22 and 23 are:

[Ignore]

[All]

[None]

These have corresponding actions in the cads.mnu and if you wish to remove them or add more group option lines, then you can edit the cads.mnu accordingly. The AutoCAD Reference Manual gives details of .mnu files but you are advised not to edit them unless you are reasonably familiar with them.

7.8 Group Layering Option Definition Example

The earlier explanations are necessarily rather technical, so this simple example is offered as a guide to setting up your own GLO. In this example it is assumed that you wish to have additional groups for starters and nibs/upstands.

Load the rc-lay.txt file into a text editor such as WordPad or EDIT, which is supplied with recent versions of DOS. Be careful if you are using a word processor as these sometimes add invisible control characters which can cause problems.

You are advised not to edit the original file, so immediately save it under a new name such as my-lay.txt. You may also wish to specify a new directory at the same time. Most editors have a 'save as' facility which will rename the current document so that you can no longer accidentally overwrite the original.

To keep things simple, each group will use one layer for the bar type entities and another for the text and range line types. It does not matter what layer names they are given, provided they are not duplicated, but it is wise to use sensible ones.

In this example, the bar layer for the starters group will be called BarStr and the text layer TxtStr and for the nibs group BarNib and TxtNib respectively.

In both cases the bars will be continuous line types of cyan colour. By default, in RebarCAD, cyan maps to a 0.7mm pen. The text layers will be continuous, white, which has a default mapping to a 0.25mm pen.

To set this up, you should add the new layer names and attributes to the bottom of the file thus:

BarStr

CONTINUOUS

CYAN

TxtStr

CONTINUOUS

WHITE

BarNib

CONTINUOUS

CYAN

TxtNib

CONTINUOUS

WHITE

You should now save this file.

The next step is to define the layer groups. The easiest way to do this is to load the supplied rcgrplay.glo file and save it under a new name, say myglo.glo, in whichever directory you choose. So that you can easily check that you are using the correct GLO file in future, you are advised to delete most of the original comments and substitute your own, e.g.:

; extra starter and nib layer groups for project xyz.

Assuming that you do not wish to alter the existing layer groups, go to the end of the file and find the first empty [] after the existing layer definitions. In the file supplied there will be a line number commented beside the bracket, e.g.:

[] ; 17

Leave the [Ignore], [Add] and [None] items at the bottom, as these will be retained. Inside the brackets add the group name you want to appear on the side menu for the starter bars group and a comment, if you wish e.g.:

[Starters] ; 17 special group layer for starter bars

Insert a line for the entity definitions, which must follow this name. To save a lot of typing, copy the preceding group definition (from the Rebars = BarGen entity, just below the group name [General], to the last entity Coupler TXT=TXTCEN)

to the inserted line. You now only need to alter the layer names i.e. change each instance of BarGen to BarStr and TxtGen to TxtStr.

Repeat this procedure for the bar nib group. In this case the name could be

[Nibs] (note leading spaces are used to adjust the text laterally in the side menu) and the layers should be changed to BarNib and TxtNib respectively.

You might like to add a separator to the next menu item [] to finish off the list. The end of the GLO file should now look something like that shown in Figure 7.1 - GLO File.

If you need to add more groups, before extending the menu, you could remove the various prompt items at the top of the list and separators, all of which do nothing other than aid clarity.

You should now save this file.

Now the file editing is complete you will need to alter the RebarCAD configuration to read the new files you have created. This can be done by starting AutoCAD, either with a new or existing drawing, and loading RebarCAD. Once it is loaded, select the Miscellaneous configuration option Enquiry menu. This will display a dialog which has entries for both the layer and GLO definition files. Change the entries to give the full path, including file name and extension for both files. The example below shows the default settings.

Group layering path ??\CADS-RC\PARAMS\rcgrplay.glo

Layer definition path ??\CADS-RC\PARAMS\rc-lay.txt

RebarCAD will now be able to find the files when it needs them. Before leaving the dialog you should set the Group Layering Option to ON in order to invoke it, otherwise the normal default layering will be used. If you want to keep these settings for subsequent drawings, then set the Write configuration setting entry to YES before selecting OK to exit from the dialog. This will write the configuration to disk to be loaded into RebarCAD on subsequent occasions.

If you now return to the drawing and select one of the options to draw a new bar or range, the first prompt will be 'Pick required Group Layer or 'I' to Ignore' : and the side menu will show you the new groups.

Selecting the group will then assign all the entities to the appropriate layers. For instance, if you pick Starters, then the bars will go on layer BarStr and the labels on layer TxtStr. Subsequently the group you pick will be the default until you choose another.

This all there is to setting up the Group Layering Option. If you have any difficulties contact our CADS Technical Support Department.

```
[ G.L.O]                ; 1 top line Ctrl-C's out of command
[-----]              ; 2 remember side menus only have 8 characters, usually.
[ T1/N1]                ; 3 group name
Rebars      = BarT1      ; Bars T1 layer
Centre colour = Cyan     ; Bar plot line colour
Profile colour = White   ; Bar profile colour
Bar run     = BarT1      ; "
Bar section = BarT1
Ticks       = BarT1
Label       = TxtT1      ; labels T1 layer
Range Line  = TxtT1
End Marker  = TxtT1
Bar Refs    = TxtT1
Range Refs  = TxtT1
Range Dots  = TxtT1
Range Interid = TxtT1 ; Lines between range lines in mutiple ranges
RC Leader   = TxtT1
Tags        = TxtT1
Tags Text   = TxtT1
Tension Symbol=BarT1
Compression Symbol=BarT1
Thread Symbol=BarT1
Coupler Txt =TxtT1
Unscheduledbar= BarT1
[ T2/N2]                ; 4 group name
Rebars      = BarT2      ; Bars T2 layer
Centre colour = Cyan     ; Bar plot line colour
Profile colour = White   ; Bar profile colour
Bar run     = BarT2      ; "
Bar section = BarT2
Ticks       = BarT2
Label       = TxtT2      ; labels T2 layer
Range Line  = TxtT2
End Marker  = TxtT2
Bar Refs    = TxtT2
Range Refs  = TxtT2
Range Dots  = TxtT2
Range Interid = TxtT2 ; Lines between range lines in mutiple ranges
RC Leader   = TxtT2
~
```

Figure 7.1 GLO File

8 Outlines

Chapter Objectives

The RebarCAD Outline tools, which supply a range of parametric shapes to automatically provide cover lines, correct line types and dimensions, are described in this chapter.

8.1 General Description

The RebarCAD Outline tools provide a range of parametric shapes which automatically provide cover lines, correct line types and also dimensions, if required. Also provided is a Freehand Outline option which allows a line to be drawn with a cover line beside it to a defined cover dimension.

Although RebarCAD provides tools to assist in the production of outlines for reinforcement details, there is no requirement for the outlines to be produced within the CADS environment.

RebarCAD can be used on outline drawings produced within or imported into AutoCAD. Where no cover lines exist, reinforcement can be placed relative to outlines using a range of extra snaps provided within RebarCAD (See chapter 3 section 3.5.1).

The Outlines menu also allows access to any RebarCAD Detailers, if installed.

The tools for Outlines are to be found in the RebarCAD pull-down menu in the Outlines menu bar.

8.1.1 Beam Sect/Elev

Menu Option Outlines -> Beam Sect/Elev.

Command Line `cads_rc_sections`, press enter, B, press enter

8.1.2 Column Sect/Elev

Menu Option Outlines -> Column Sect/Elev..

Command Line `cads_rc_sections`, press enter, C, press enter

Toolbar

Accesses a dialog where the required column section/elevation outline can be selected from the options displayed.

8.1.3 Slab Sections

Menu Option Outlines -> Slab Sections

Command Line `cads_rc_sections`, press enter, S, press enter

Accesses a dialog where the required slab section outline can be selected from the options displayed.

8.1.4 Miscellaneous

Menu Option Outlines -> Miscellaneous

Command Line `cads_rc_sections`, press enter, O, press enter

Accesses a dialog where the following outline options are available: -

1. Pad Base in plan and elevation
2. Staircase in plan and elevation
3. Retaining Wall in section
4. Beam intersection

NOTE - Some of these options display subsequent dialogs where a number of orientations may be displayed. Once the final selection has been made, prompts for dimensions will be displayed. In some cases, the outlines have quite a few dimension inputs which it can be impossible to remember from the previous slides. Picking VSLIDE from the side menu or the toolbar, displays the relevant slide so that dimension entry is easier.

8.2 Freehand Outline

Menu Option Outlines -> Freehand Outline

Command Line `cads_rc_wall`

Toolbar

Useful though the above outline shapes may be, there will be many instances when they are not appropriate. This is where the Freehand Outline option on the Outlines menu comes into its own. It enables you to draw an outline and parallel cover line in one operation.

You use it exactly like the normal AutoCAD LINE command, by picking point to point and then pressing ENTER to finish or C to close the line. The difference comes at the beginning of the command where the function needs to know the cover offset. If you draw the line from left to right, then a positive cover places the cover line below the outline. Conversely, a negative value places the cover line above.

As the outline may be drawn by reference to some existing construction, you can toggle the first line so that, the outline, the cover line or mid-way point between 8-2

them lies along the selected points. To do this, you move the cursor to the appropriate edge of the screen, or the centre, at the Toggle alignment prompt. You will see the pair of lines move according to the cursor position and you can press the pick button when the required alignment is shown.

You can then continue picking points to form the line which will maintain the same relative alignment for the remaining segments. As stated above, ENTER or Close will terminate the line.

8.3 Detailers

Menu Option Outlines -> Detailers

Command Line `cads_rc_macros`

Toolbar



Detailers are a series of additional programs that allow complete parametric reinforcement details of structural elements to be created.

The Detailers option from the Outlines menu enables you to access them. It displays a list of installed Detailers.

From then on what you do depends on the Detailer in question. Each Detailer is described in the Productivity Tools Manual. The manual covers each detailer's scope, how to use it, and the details it produces. When it has finished its task, you will be returned to your drawing. If you choose to

have the Detailer draw a detail immediately, then you may need to place the detail on the drawing before proceeding further.

All details produced are fully compatible with the RebarCAD bar database and bar editing functions.

9 Enquiry

Chapter Objectives

This chapter describes the Enquiry section of RebarCAD which contains tools to Find Bars along with Program Configuration. The Enquiry tools can be found off the RebarCAD pull down menu ENQUIRY menu bar.

The ENQUIRY menu bar has the following options:

9.1 Bar Tooltips

This option is automatic. Moving the cross-hairs over a RebarCAD entity will cause the Bar Tooltips to be displayed. The information bar tooltips displays are: - Bar Mark

Bar size and grade,

Multiplier

Bend type Quantity

C/c spacing.


Bar tooltips can be toggled on/off feature using the menu option: -

Enquiry -> Tooltips Toggle

9.2 Show Bars

Menu Option Enquiry -> Show Bars

Command Line `cads_rc_highlight`

Toolbar 

9.3 Select Bars

Activates the PICK GROUP TO HIGHLIGHT dialog where options are available to highlight bars by view, set, mark, release code or all RebarCAD entities. There is an option to leave the selected items highlighted or not.

Menu Option Enquiry -> Select Bars

Command Line `cads_rc_select`

Toolbar



The Select Bars command will place items into AutoCAD's 'previous selection set'. This allows, for example, all occurrences of a particular bar mark to be selected and moved using AutoCAD move 'previous' so that they can be looked at easily.

On picking Select Bars, the PICK GROUP TO SELECT dialog is activated where options are available to select bars by view, set, mark, release code or all RebarCAD entities.

9.4 Configuration

Menu Option Enquiry -> Configuration

Command Line `cads_rc_config`

Toolbar



Accesses the RebarCAD Configuration Centre dialog as shown in Figure 9.1.

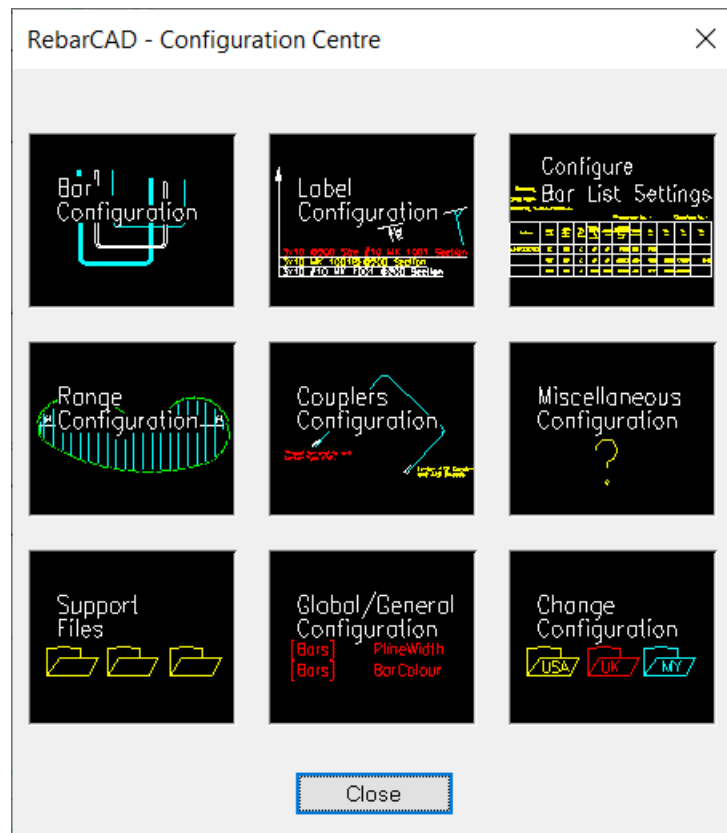


Figure 9.1 RebarCAD Configuration Centre Dialog.

From the RebarCAD Configuration Centre dialog the following configuration options are available.

9.5 Bar Configuration

The 'Bar Configuration' dialog contains the configuration for the reinforcing bars and part of the ranges.

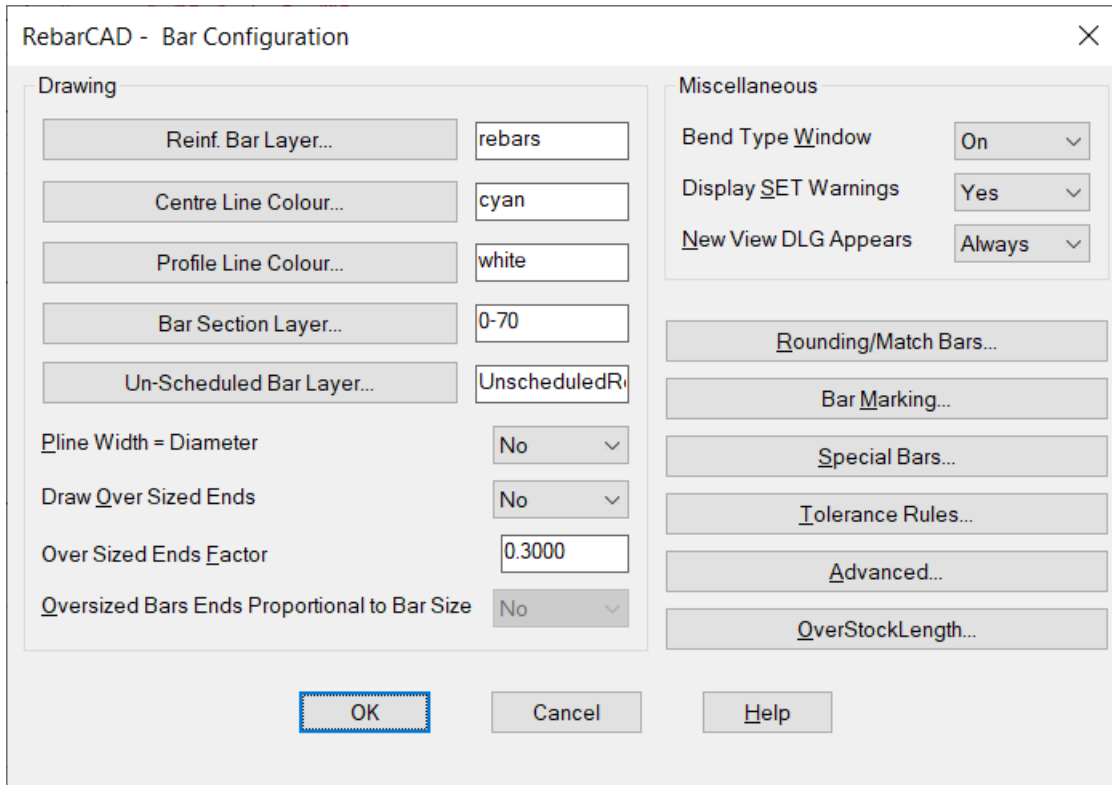


Figure 9.2 Bar Configuration Dialog

The options shown in the dialog are as follows: -

9.5.1 Reinf. Bar Layer

This is the colour the bar will be drawn if set to centre line mode when the Group Layering Option is OFF. The required colour can be typed into the field or the Centre Line Colour Button can be picked to invoke the standard AutoCAD colour selection dialog where the required colour can be picked from the colour palette.

9.5.2 Profile Line Colour

This is the colour the bar will be drawn if set to profile mode when the Group Layering Option is OFF. The required colour can be typed into the field or the Profile Line Colour Button can be picked to invoke the standard AutoCAD colour selection dialog where the required colour can be picked from the colour palette.

9.5.3 Bar Section Layer

This is the layer on which bar runs are placed when the Group Layering Option is

OFF. The required layer can be typed into the field or the Bar Section Layer Button can be picked to invoke a layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

9.5.4 Pline Width = Diameter

If set to 'Yes', then bars will be drawn as plines with a width equal to the bar diameter.

9.5.5 Draw Over Sized Ends & Over Sized End Factor

If draw Over Sized Ends is set to NO, the donuts drawn at the end of bars to indicate the presence of another bar leg are drawn to the exact bar diameter. When set to Yes the donuts are scaled up by the factor defined in the Over Sized Ends Factor field.

9.5.6 Bend type Window

Set to 'On' if the bend type diagram is required when picking the insertion/dimensions of a bar.

9.5.7 Display SET Warnings


This option not required in this version.

9.5.8 New View DLG Appears

If you require the 'Bar Drawing' dialog to appear every time a new bar view is picked, then set to 'Always'; otherwise set to 'Never'.

9.5.9 Rounding / Match Bars

Accesses the Rounding/Match Bars Config as shown in Figure 9.3.

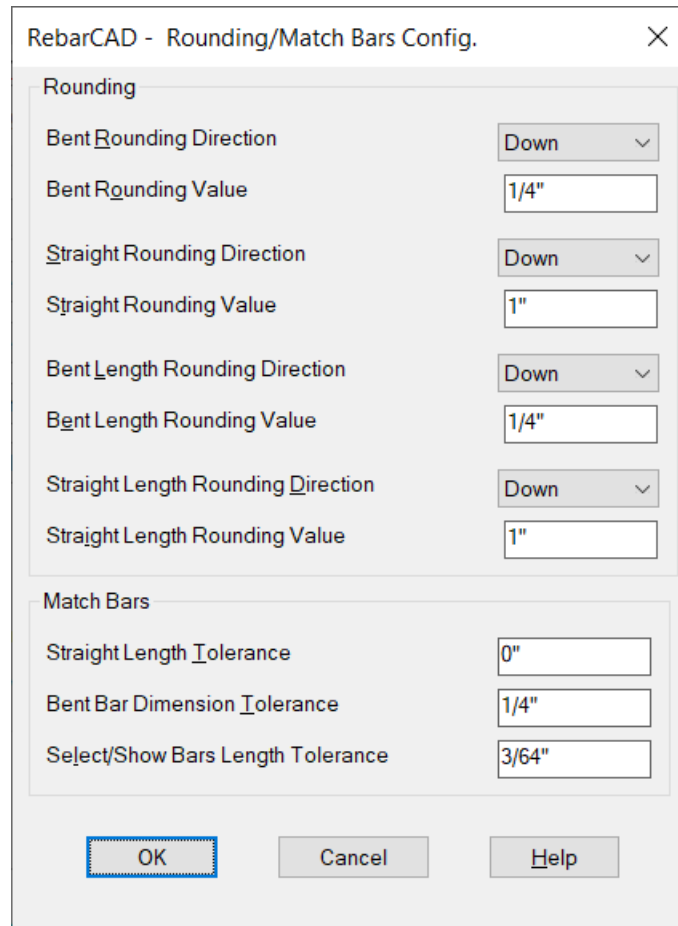

The dialog box is titled "RebarCAD - Rounding/Match Bars Config." and contains two main sections: "Rounding" and "Match Bars".

Rounding Section:

- Bent Rounding Direction: Down (dropdown menu)
- Bent Rounding Value: 1/4" (text input)
- Straight Rounding Direction: Down (dropdown menu)
- Straight Rounding Value: 1" (text input)
- Bent Length Rounding Direction: Down (dropdown menu)
- Bent Length Rounding Value: 1/4" (text input)
- Straight Length Rounding Direction: Down (dropdown menu)
- Straight Length Rounding Value: 1" (text input)

Match Bars Section:

- Straight Length Tolerance: 0" (text input)
- Bent Bar Dimension Tolerance: 1/4" (text input)
- Select/Show Bars Length Tolerance: 3/64" (text input)

At the bottom are three buttons: OK, Cancel, and Help.

Figure 9.3 Rounding/Match Bars Config Dialog

The options shown in the dialog are as follows: -

Bent Rounding Direction

Defines the Bar List rounding direction (Up, Down or Nearest) applied to the bending dimensions of all bent bars and special bars.

Bent Rounding Value

Defines the Bar List numerical rounding value applied to the bending dimensions of all bent bars and special bars.

Straight Rounding Direction

Defines the Bar List rounding direction (Up, Down or Nearest) applied to the bending dimensions of all straight bars.

Straight Rounding Value

Defines the Bar List numerical rounding value applied to the bending dimensions of all straight bars.

Bent Length Rounding Direction

Defines the Bar List rounding direction (Up, Down or Nearest) applied to the bar length of all bent bars and special bars.

Bent Length Rounding Value

Defines the Bar List numerical rounding value applied to the bar length of all bent bars and special bars.

Straight Length Rounding Direction

Defines the Bar List rounding direction (Up, Down or Nearest) applied to the bar length of all straight bars.

Straight Length Rounding Value

Defines the Bar List numerical rounding value applied to the bar length of all straight bars.

Straight Length Tolerance


A tolerance value which will be used by the Match Bars function when processing straight bars may be entered. Straight bars with a difference in bar length less than or equal to the entered Straight Length Tolerance will be offered for bar mark matching.

Select/Show bars Length Tolerance

A tolerance value which will be used by the Select/Show Bars function when processing bars may be entered. Bars whose difference in bar length is less than or equal to the entered Select/Show Tolerance will be offered for bar mark matching.

9.5.10 Bar Marking

Accesses the Bar Marking Configuration dialog as shown in Figure 9.4.

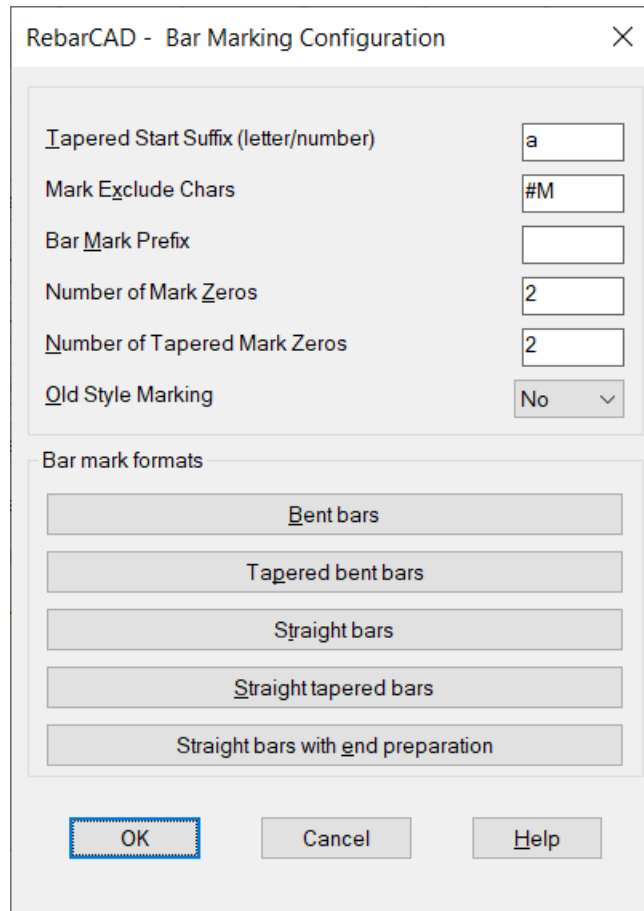

RebarCAD - Bar Marking Configuration

Tapered Start Suffix (letter/number)

Mark Exclude Chars

Bar Mark Prefix

Number of Mark Zeros

Number of Tapered Mark Zeros

Old Style Marking

Bar mark formats

Figure 9.4 Bar Marking Configuration Dialog

The options shown in the dialog are as follows: -

Tapered Start Suffix

Enter the alpha or numerical suffix to be applied to the first bar in a tapered range.

Mark Exclude Characters

Enter any characters which may be present in any of the variables used in bar mark formats which are not to be included in the actual bar mark, e.g. If a bar mark format included prefixing with the bar size and the bar sizes were in the form 10M, 12M, 16M etc., bar marks would be in the form 10M01, 10M02 etc. Entering M in the Mark Exclude Chars would give bar marks 1001, 1002 etc. by excluding M from the bar mark system.

Bar Mark Prefix

Enter any prefix which is to be automatically applied to all bar marks.

Number of Mark Zeros

Entering 2 will give two digit bar marks such as 01, 02 etc., entering 3 will give three digit bar marks such as 001, 002 etc. and so on.

Number of Tapered Mark Zeros

Entering 2 will give tapered bar ranges two digit bar marks such as 01a, 02b etc., entering 3 will give three digit bar marks such as 001a, 002b etc. and so on.

Old Style Marking

This option is used when bar mark formats are set to prefix the bar mark with the bar size. When Old Style Marking is set to No and the bar mark format includes prefix with bar size, the bar marks are in the form 1001, 1002, 1201, 1003, 1202 e.g. each size begins with mark 01. When set to Yes and the bar mark format includes prefix with bar size, the bar marks are in the form 1001, 1002, 1203, 1004, 1205 e.g. bar marks are concurrent across bar sizes.

Bent, Tapered Bent, Straight and Straight Tapered Bar Mark Formats

Different Bar Mark Formats can be defined for these four bar type categories. Each format is defined via a Text Formatting dialog as shown in Figure 9.5.

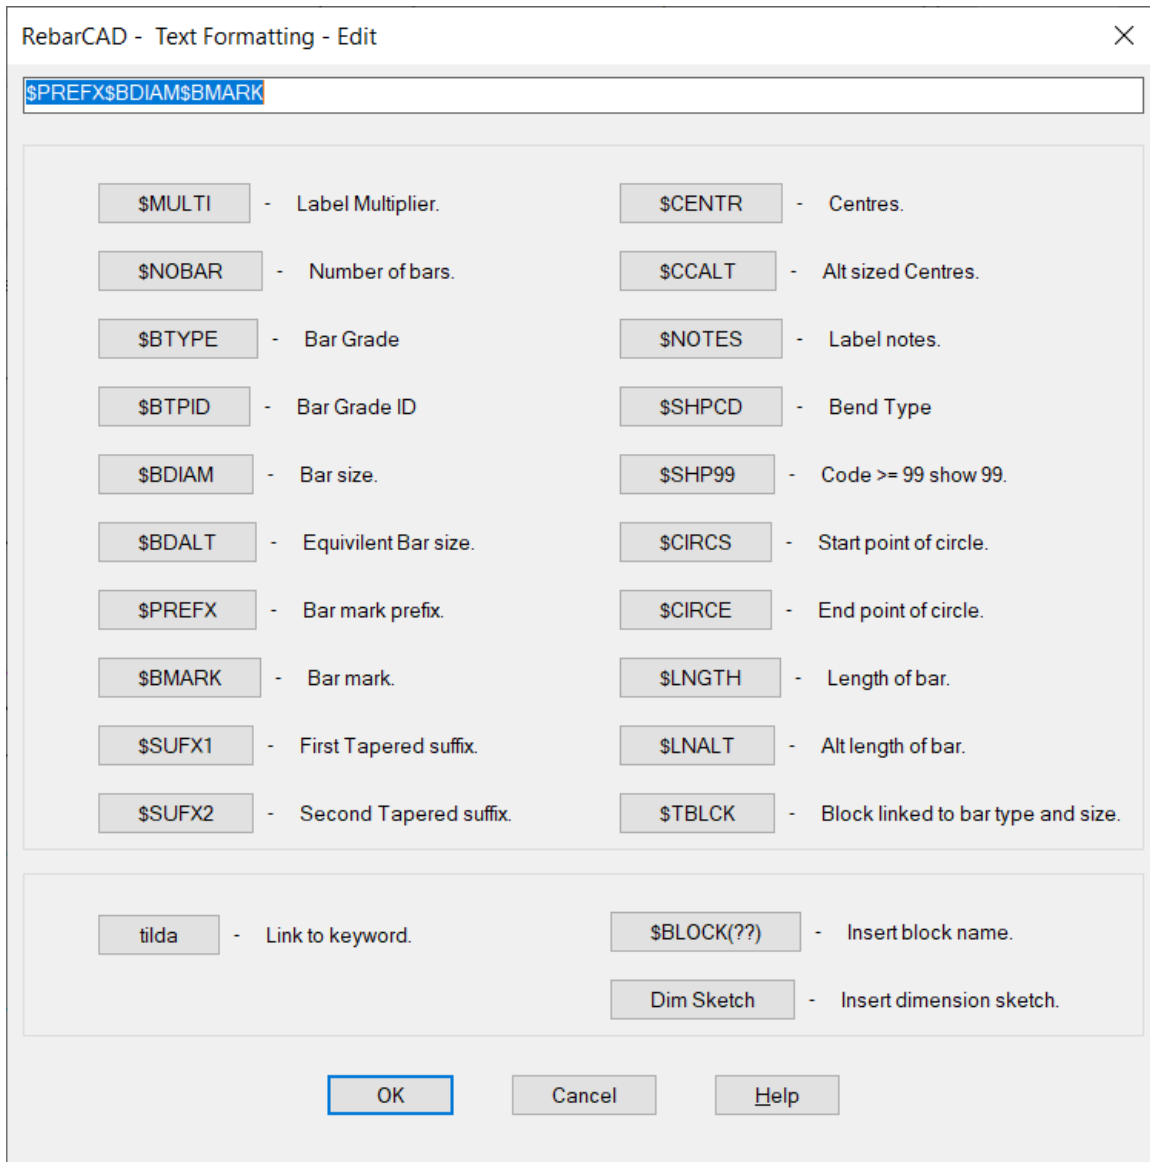


Figure 9.5 Bar Mark Format Dialog

For more information on setting up specific bar mark formats, please contact CADS Technical Support Department.

9.5.11 Special Bars

Accesses the RebarCAD Special Bar Configuration Dialog as shown in Figure 9.6.

RebarCAD - Special Bar Configuration
 ✕

Special Bar File

Use Special Bar File

No

Special Bar File and Path

specials.spl

Read Special's from Drawing

Yes

Read Over Existing Special's

No

Use Special Bar Display Shape

No

Special Bar Display Shape

Calculations

Default Description Code

{Description = "Special Bar";}

Default Slide Code

{Slide = "special.sld";}

Default VarSetup Code

{BC="";NoBarMarkPrompt = 0;SpecialBar = 1;}

Default ScheduleData Code

{if(barsize == "#3" || barsize == "10M")Category = "Light";}

Default Length Calculation

{length=A+B+C+D+E+F+G;}

Default Rounding Calculation

{StdRounding(0);lengthRounded=ARounded+BRounded;}

OK

Cancel

Help

Figure 9.6 Special Bar Configuration Dialog


For information on how to define the Special Bar Configuration items, please contact CADS Technical Support Department.

Tolerance Rules

Not Applicable to this version.

9.5.14. Advanced Bar Configuration Options

Accesses the Advanced Bar Configuration Dialog as shown in Figure 9.8.

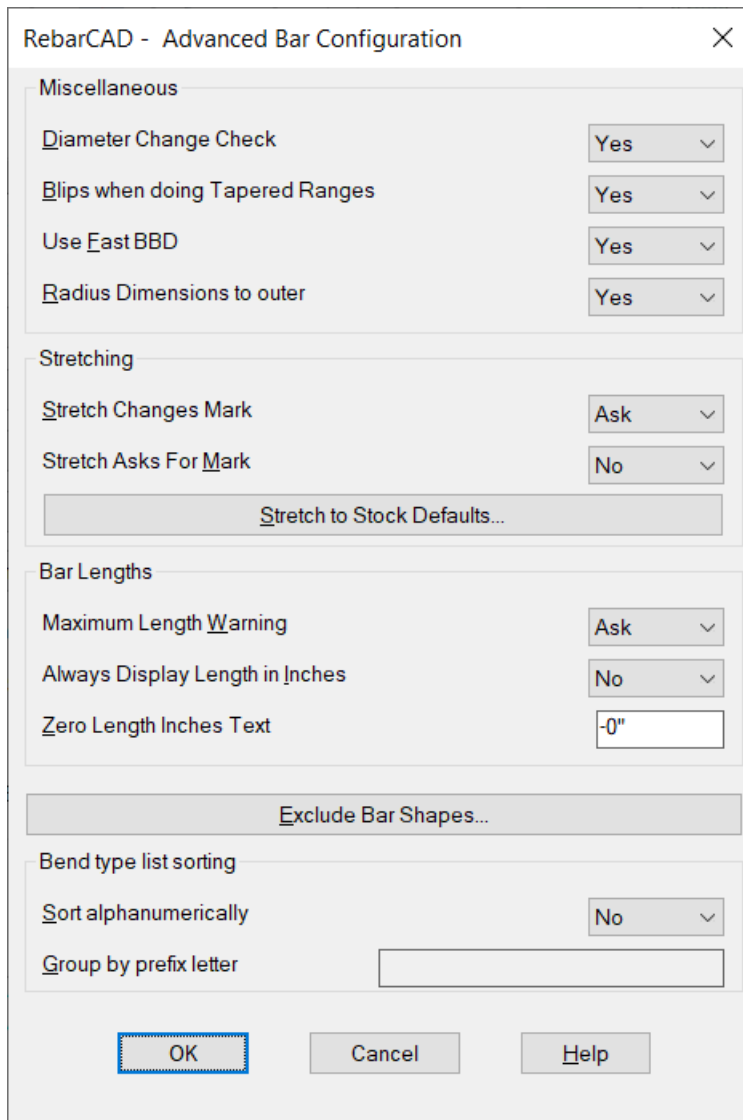

The dialog box is titled "RebarCAD - Advanced Bar Configuration" and contains several sections of settings:

- Miscellaneous:**
 - Diameter Change Check: Yes
 - Blips when doing Tapered Ranges: Yes
 - Use Fast BBD: Yes
 - Radius Dimensions to outer: Yes
- Stretching:**
 - Stretch Changes Mark: Ask
 - Stretch Asks For Mark: No
 - Stretch to Stock Defaults... (button)
- Bar Lengths:**
 - Maximum Length Warning: Ask
 - Always Display Length in Inches: No
 - Zero Length Inches Text: -0"
- Exclude Bar Shapes...** (button)
- Bend type list sorting:**
 - Sort alphanumerically: No
 - Group by prefix letter: (empty text box)

At the bottom are three buttons: OK, Cancel, and Help.

Figure 9.7 RebarCAD Advanced Bar Configuration Dialog

The options shown in the dialog are as follows: -

Diameter Change Check

When an existing bar is edited and the bar diameter or bar type is changed, if Diameter Change Check is set to Yes, a dialog warning is displayed as a reminder to check that current lap lengths are adequate for the new bar diameter/type.

Blips when doing Tapered Ranges

When set to Yes, the endpoints of all bars within a Varying Taper Range are indicated by AutoCAD Blips.

Use Fast BBD

The Bar Bending Data (BBD) file is processed many times and for this reason it has been built into RebarCAD as compiled code rather than Interpreted code (file). RebarCAD checks the size of the Bar Bending Data (BBD) configured. If the file is the same size as the size that is recorded in the executable, then the internal compiled BBD is run. If the file size is different, then the configured BBD

File is interpreted. The user can force the BBD File to be interpreted by configuring 'Use Fast BBD' to No in the Bar configuration. The default is YES for speed.

Radius Dimensions To Outer

Standard bend types with radius dimensions can be Bar Listed with the radius to the inside or outside face of the bar. When set to No, the radius dimension is that to the inside face of the bar.

Stretch Changes Mark

This option controls how the Stretch Edit function reacts if there are other sets of a bar which are undergoing a stretch. The options are: -

- Yes - If other sets exist, the bar undergoing the stretch is automatically assigned a new bar mark, leaving the existing sets un-altered.
- No - If other sets exist, they will be updated to the new dimensions of the bar undergoing the stretch.
- Ask - If other sets exist, the program will ask if the bar undergoing the stretch is to be assigned a new bar mark.

Stretch Asks For Mark

This option works in conjunction with the Stretch Changes Mark option above and relates to the allocation of new bar marks. The options are: -

- Yes - When new bar marks are being allocated, the user is asked to confirm each new bar mark.
- No - New bar marks are automatically assigned using the next available bar mark in the sequence.

Stretch to Stock Defaults

Accesses the RebarCAD Stretch to Stock Defaults dialog as shown in Figure 9.8. These are the default settings used by the Stretch to Stock function.

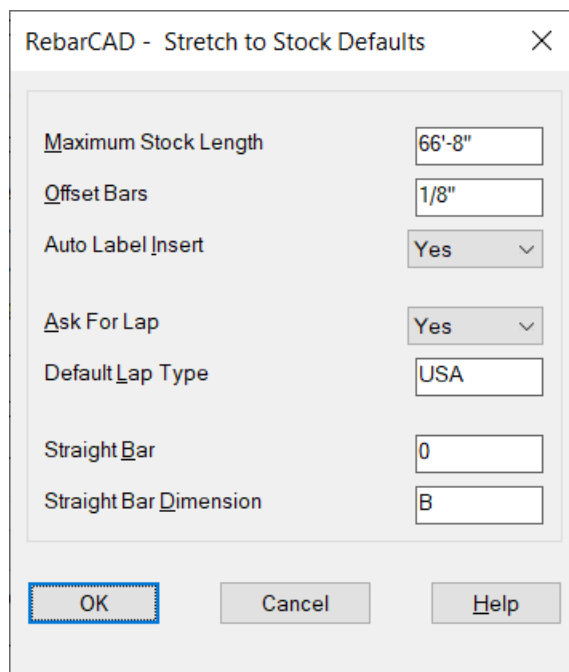


Figure 9.8 Stretch to Stock Defaults Dialog

The options shown in the dialog are as follows: -

Maximum Stock Length

This is the maximum bar length to be used, when the stretched bar would exceed this length additional bars are added with laps to complete the reinforcement detail.

Offset Bars

This is the plotted distance which lapping bars are offset to make the lap visible on the drawing.

Auto Label Insert

When set to Yes, as each additional lapped bar is detailed placement of the associated bar label is offered. The bar to which the label relates is highlighted to assist in correct placement of the bar label.

Ask For Lap

When set to Yes, the user is asked to confirm/enter the required lap length to be used. When set to No, the default lap value is used.

Default Lap Type

Enter the required default lap type.

Straight Bar

Enter the bend type defined in the bdf file for straight bars.

Straight Bar Dimension Enter the straight bar dimension.

Maximum Length Warning

RebarCAD allows a maximum bar length to be set. If this length is exceeded, the outcome is controlled by the Maximum Length Warning setting. The options are as follows: -

1. Ask - If the maximum bar length is exceeded, a dialog is displayed allowing the user to either detail the bar as drawn or abort the bar drawing operation.
2. Print- If the maximum bar length is exceeded, a warning is printed on the command line.
3. Abort - If the maximum bar length is exceeded, the bar drawing operation is aborted.

Always Display Length Inches

This option is only relevant when detailing in feet and inch units. When set to Yes, bar dimensions which are exact feet values will display the inch value of 0. When set to No, the inch value will not be shown.

Zero Length Inches Text

Used when Always Display Length Inches is set to Yes. The text entered will be used for zero inch values, e.g. 0" would give 5'0" whereas -0" would give 5'-0".

Exclude Bar Shapes

Accesses the RebarCAD Select Bar Shapes to be Excluded dialog as shown in Figure 9.10.

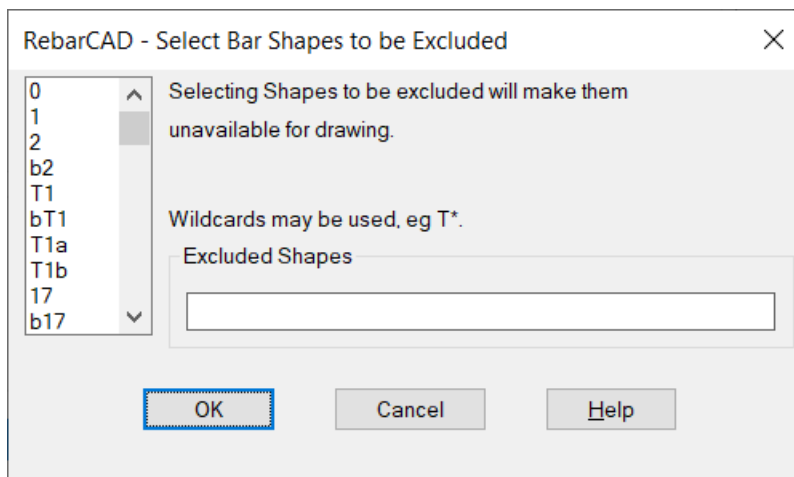


Figure 9.9 Select Bar Shapes to be Excluded Dialog

Selecting with a double click a bend type from the bend type list will add that shape to the Exclude Shapes field and remove those bend types from the bar drawing and bar editing dialog. If a bend

type is deleted from the Exclude shapes field, it will become available for use in the Bar Drawing and Bar Editing dialog.

9.6 Label Configuration

The 'Label Configuration' dialog contains the configurations for all labelling and annotation options.

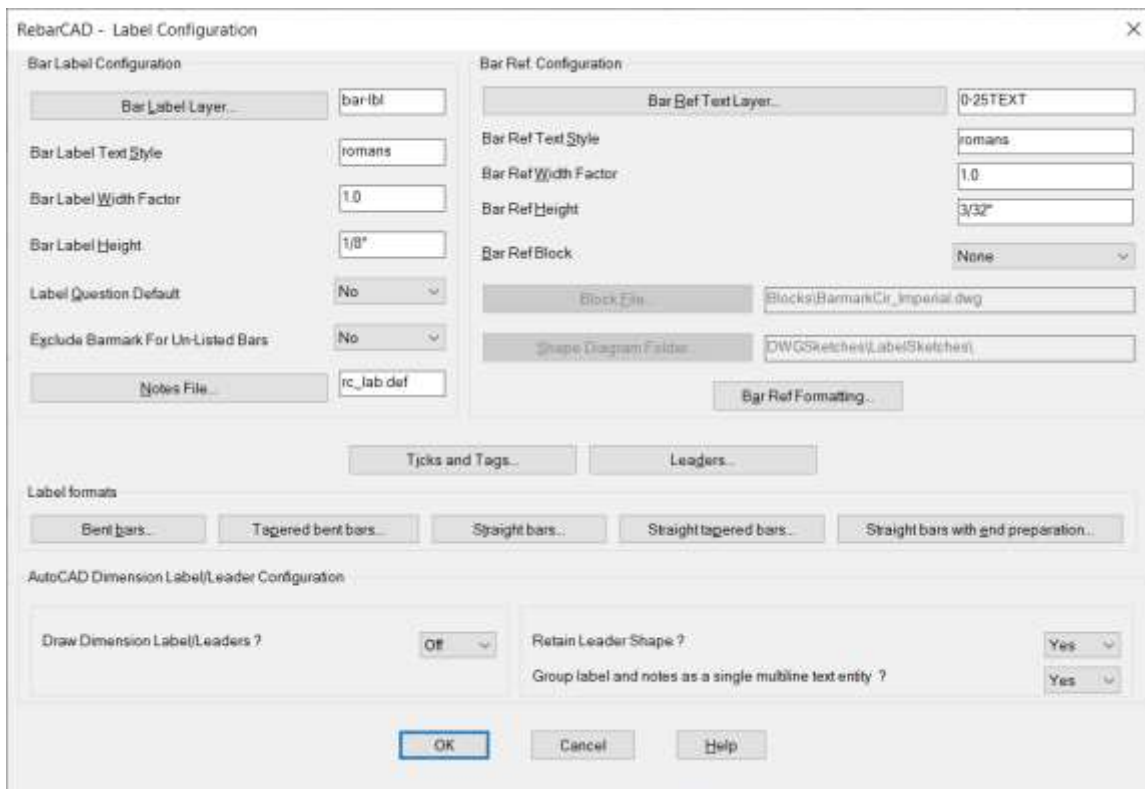


Figure 9.11 Label Configuration Dialog

The options shown in the dialog are as follows: -

9.6.1 Bar Label Layer

This is the layer on which the Bar Labels are drawn when the Group Laying

Option is OFF. The required layer can be typed into the field or the Bar Label Layer button can be picked to invoke a standard layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

9.6.2 Bar Label Text Style

This is the text style used for Bar Labels.

9.6.3 Bar Label Width Factor

This is the width factor applied to Bar Label text.

9.6.4 Bar Label Height

This is the height of the Bar Label text in plotted mm/inches.

9.6.5 Label Question Default

This is the default offered at the 'Label Bar' prompt. The options are as follows:

'Yes' - The prompt will display 'Label Bar <Yes>'

'No' - The prompt will display 'Label Bar <No>'

'None' - The bar must be labelled to complete the bar / range drawing function.

9.6.6 Notes File

This is the standard notes File Name and Path. The file name and path can be typed into the field or the Notes File button picked and the required file selected from a standard file selection dialog.

A default notes file ??\CADS_RC\PARAMS\RC_LAB.DEF is supplied, this file can be copied and used to create your own notes file.

9.6.7 Bent, Straight and Tapered Label Formats

The Label Format options allows you to control the layout and contents of Bent, Straight and Tapered Bar Labels. It is accessed by picking the Label Format button. The current label format is displayed inside the RebarCAD Text Formatting - Edit dialog as shown in Figure 9.11.

RebarCAD - Bar Label Formatting - Edit
 ✕

`$MULTI~x$NOBAR $BDIAM MK $BMARK (~$SUFx1~-$SUFx2~)@~$CENTR ~$NOTES`

\$MULTI - Label Multiplier.	\$NOTES - Label notes.
\$NOBAR - Number of bars.	\$NOTE1 - Extra label notes 1.
\$BTYPE - Bar Grade	\$NOTE2 - Extra label notes 2.
\$BTPID - Bar Grade ID	\$NOTE3 - Extra label notes 3.
\$BDIAM - Bar size.	\$NOTE4 - Extra label notes 4.
\$BDALT - Equivalent Bar size.	\$SHPCD - Bend Type
\$PREFIX - Bar mark prefix.	\$SHP99 - Code >= 99 show 99.
\$BMARK - Bar mark.	\$CIRCS - Start point of circle.
\$SUFx1 - First Tapered suffix.	\$CIRCE - End point of circle.
\$SUFx2 - Second Tapered suffix.	\$LNGTH - Length of bar.
\$CENTR - Centres.	\$LNALT - Alt length of bar.
\$CCALT - Alt sized Centres.	\$TBLCK - Block linked to bar type and size.

tilda - Link to keyword.	\$BLOCK(??) - Insert block name.
	Dim Sketch - Insert dimension sketch.

OK
 Cancel
 Help

Figure 9.11 Label Format Dialog

For more information on setting up specific bar label formats, please contact CADs Technical Support Department.

9.6.8 Bar Reference Text Layer

This is the layer on which the Bar Ref's are drawn when the Group Laying Option is OFF. The required layer can be typed into the field or the Bar Ref. Layer button can be picked to invoke a standard layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

9.6.9 Bar Ref. Text Style

This is the text style used for Bar Ref's.

9.6.10 Bar Ref. Width Factor

This is the width factor applied to Bar Ref. text.

9.6.11 Bar Ref. Height

This is the height of the Bar Ref. text in plotted mm/inches.

9.6.12 Bar Ref. Formatting

The Bar Ref. Formatting options allow you to control the layout and contents of Bar Ref's. Accessed by picking the Bar Ref. Formatting button the current format is displayed inside the RebarCAD Text Formatting - Edit dialog as shown in Figure 9.12.

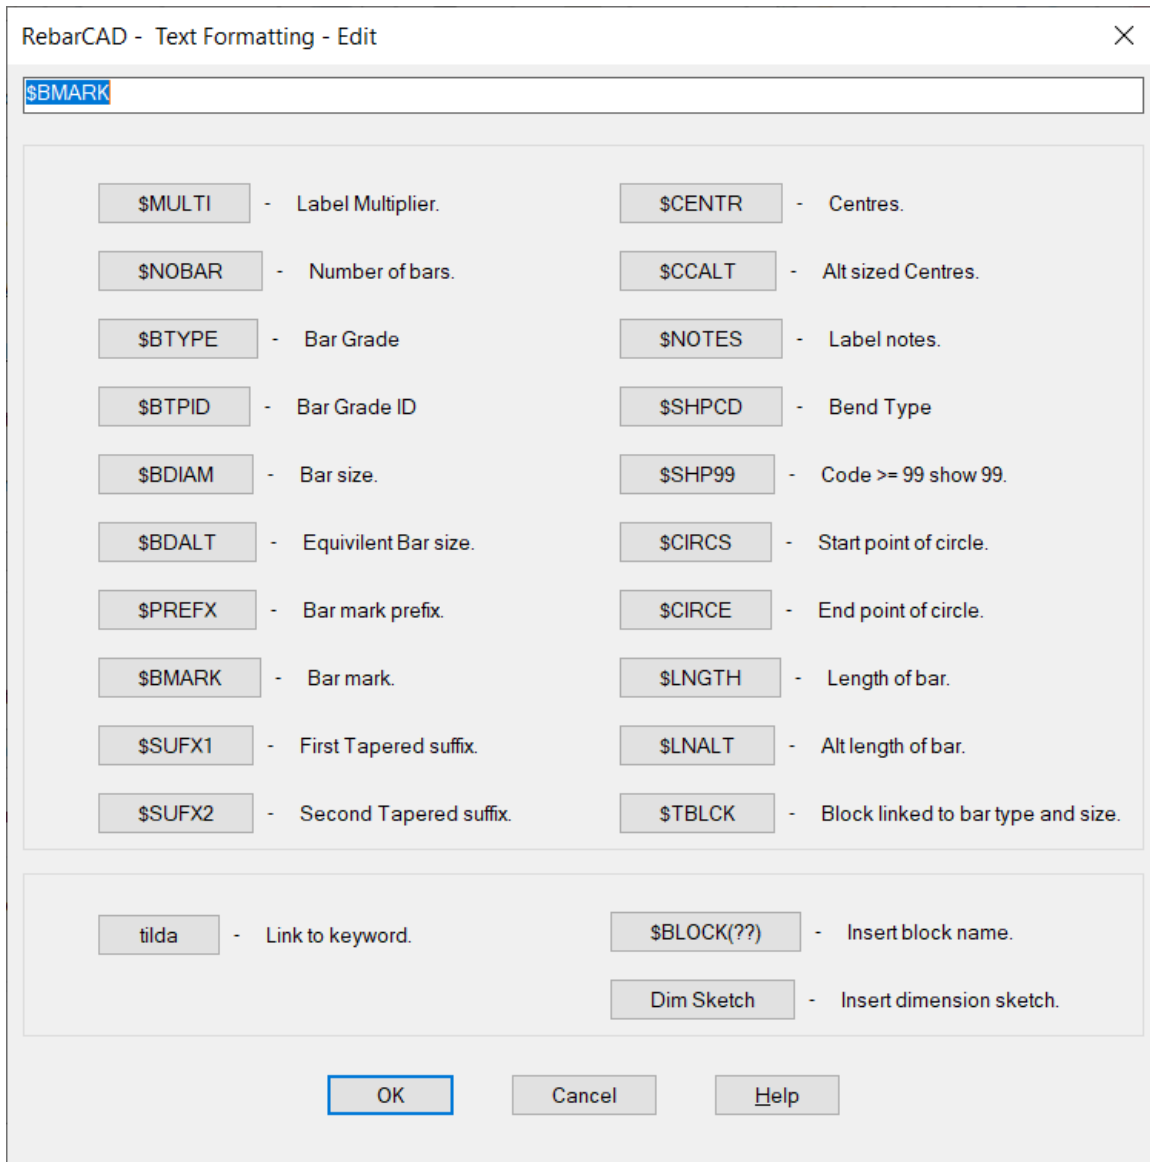


Figure 9.12 Bar Reference Format Dialog

For more information on setting up specific bar reference formats please contact CADS Technical Support Department.

9.6.13 Tick & Tag Configuration

The Tick & Tag configuration is available by picking the Ticks and Tags button inside the RebarCAD Label Configuration dialog. This accesses the RebarCAD Tick & Tag Configuration dialog, as shown in Figure 9.13.

Clicking on a slide will display a description of that configuration item in the top left corner of the dialog. The configuration items are as follows:

Offset from bar end to tail start

Enter required distance in plotted mm/inches. A negative value forces the tail past the bar end the entered distance. A positive distance will stop the tail the entered distance short of the bar.

Offset from bar end to tail top

Enter required distance in plotted mm/inches.

Offset from bar end to arrow tip

Enter required distance in plotted mm/inches.

Width of arrow head

Enter required width in plotted mm/inches.

Length of arrow head

Enter required length in plotted mm/inches.

Length of arrow tail

Enter required length in plotted mm/inches.

Height of Bar Mark text

Enter required height in plotted mm/inches.

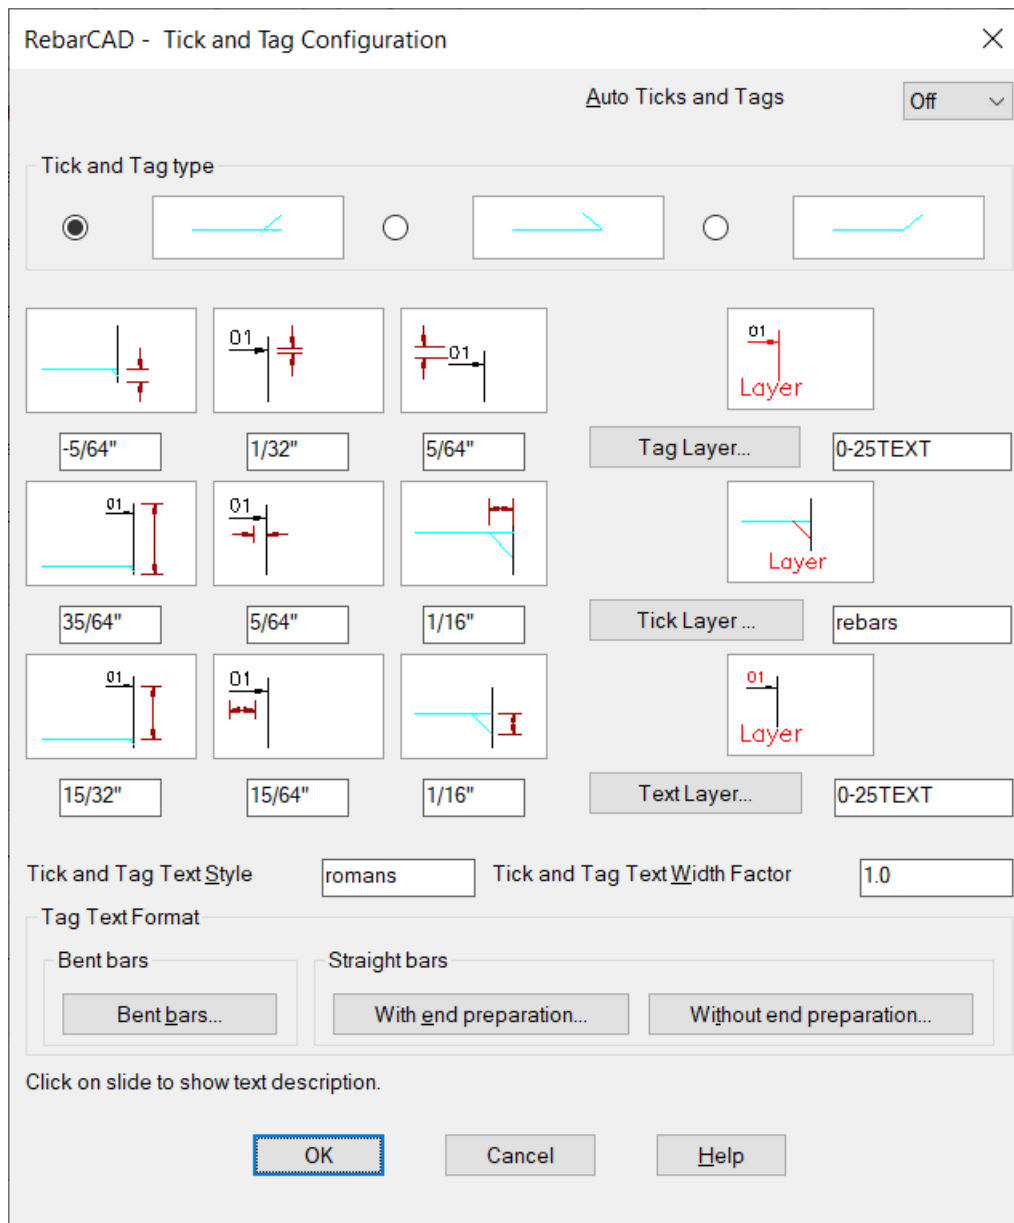


Figure 9.13 Tick & Tag Configuration Dialog

Length of tick

Enter required length in plotted mm/inches.

Height of tick

Enter required height in plotted mm/inches.

Tag Layer

This is the layer on which the Tags are drawn when the Group Layering Option is OFF. The required layer can be typed into the field or the Tag Layer button can be picked to invoke a standard layer

selection dialog where the required layer can be selected from a list displaying the current drawing layers.

Tick Layer

This is the layer on which the Ticks are drawn when the Group Layering Option is OFF. The required layer can be typed into the field or the Tick Layer button can be picked to invoke a standard layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

Text Layer

This is the layer on which the Text is drawn when the Group Layering Option is OFF. The required layer can be typed into the field or the Text Layer button can be picked to invoke a standard layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

Auto Ticks & Tags

If set to ON, then as each bar view is drawn you are prompted to attached Ticks & Tags. If set to OFF, then no prompt is offered for Tick & Tag attachment.

Tag Text Format

The Tag Text Formatting options allow you to control the layout and contents of the Tag text. They are accessed by picking the Tag Text Format button. The current format is displayed inside the RebarCAD Text Formatting - Edit dialog, as shown in Figure 9.14.


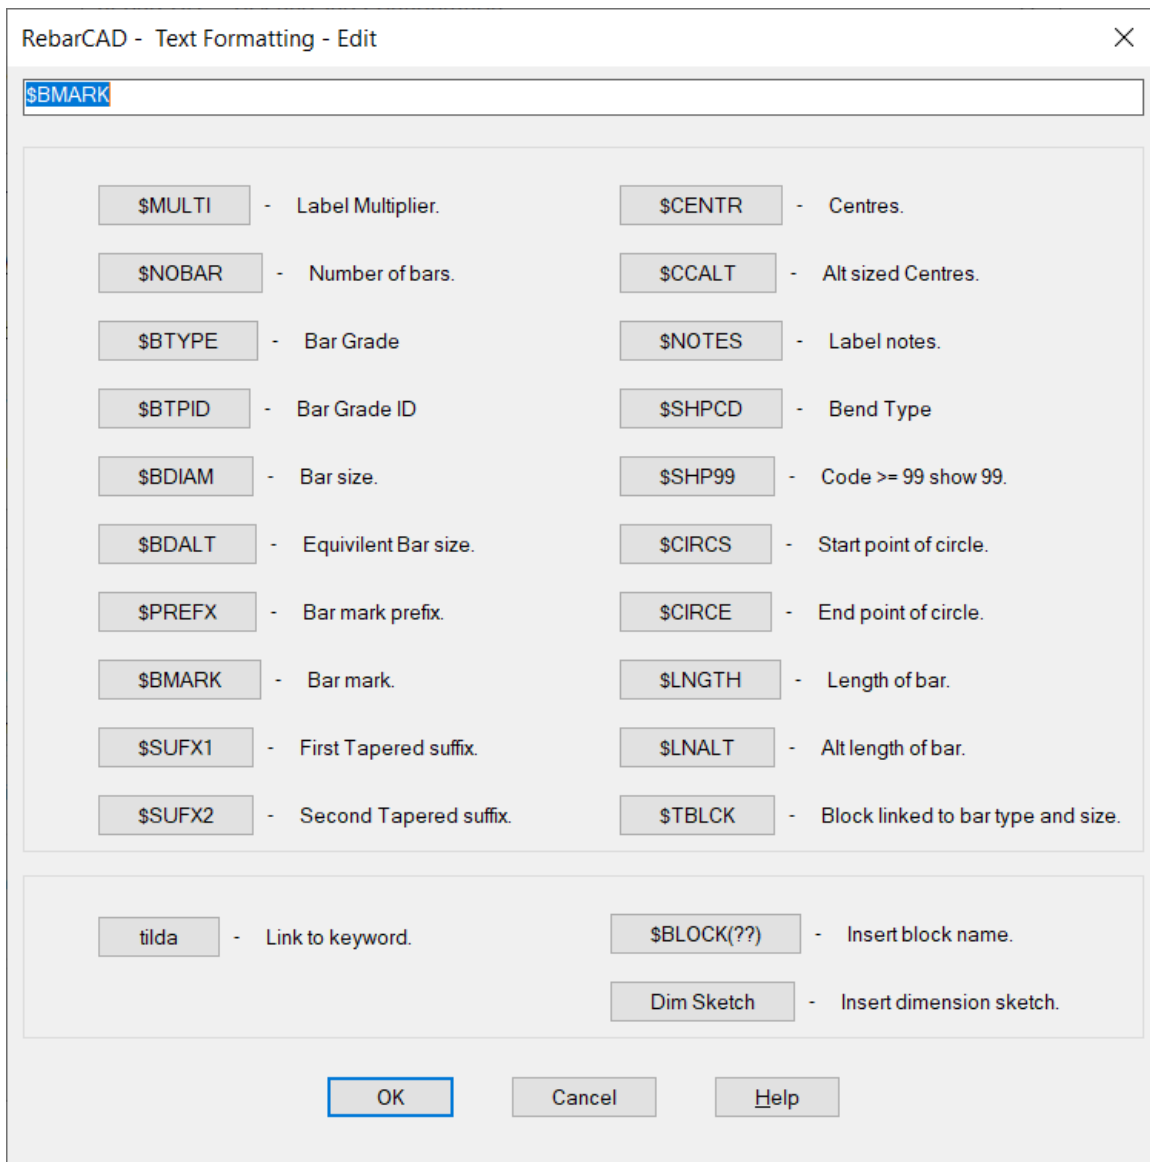


Figure 9.14 Text Formatting - Edit Dialog

For more information on setting up specific bar reference formats, please contact CADS Technical Support Department.

9.6.14 Leader Configuration

The Leader configuration is available by picking the Leaders button inside the RebarCAD Label Configuration dialog. This accesses the RebarCAD Leader Configuration dialog, as shown in Figure 9.15.

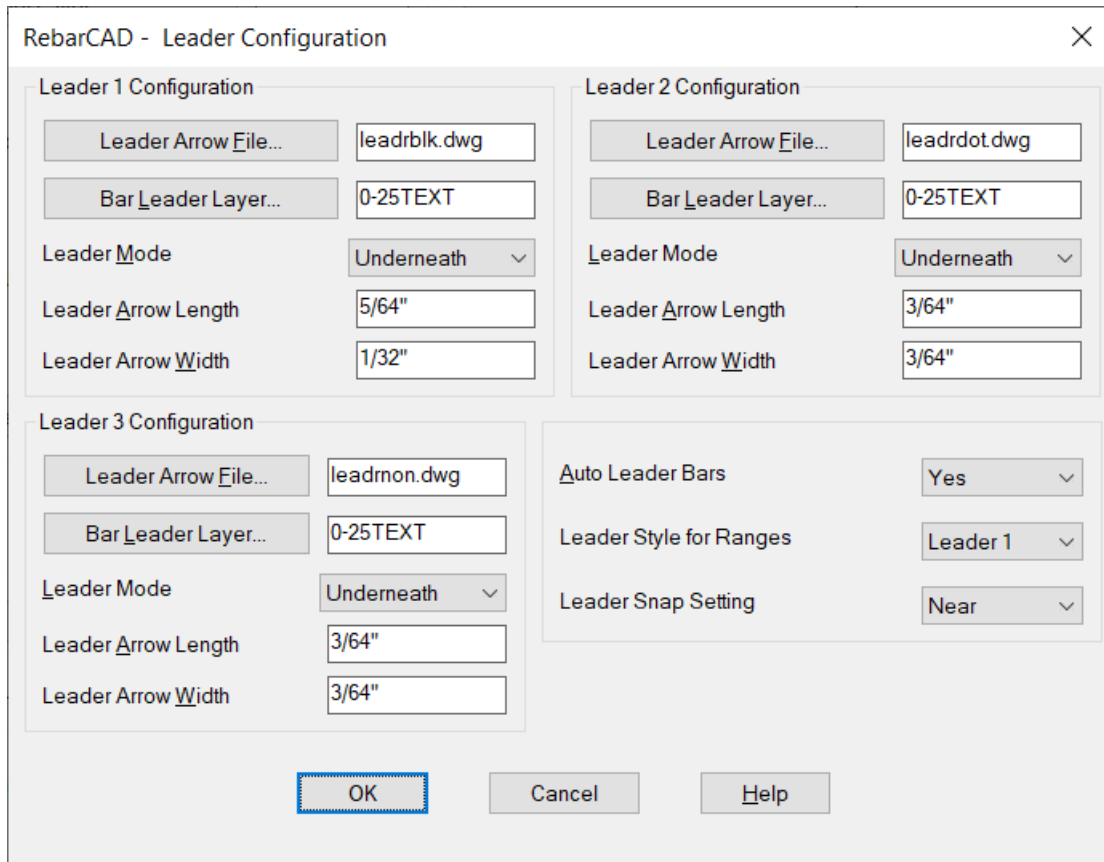

The dialog box is titled "RebarCAD - Leader Configuration" and contains three main sections for configuring Leader 1, Leader 2, and Leader 3. Each section includes fields for the Leader Arrow File, Bar Leader Layer, Leader Mode, Leader Arrow Length, and Leader Arrow Width. Leader 2 also includes a section for Auto Leader Bars, Leader Style for Ranges, and Leader Snap Setting. At the bottom are OK, Cancel, and Help buttons.

Section	Property	Value
Leader 1 Configuration	Leader Arrow File...	leadrbk.dwg
	Bar Leader Layer...	0-25TEXT
	Leader Mode	Underneath
	Leader Arrow Length	5/64"
	Leader Arrow Width	1/32"
Leader 2 Configuration	Leader Arrow File...	leadrdot.dwg
	Bar Leader Layer...	0-25TEXT
	Leader Mode	Underneath
	Leader Arrow Length	3/64"
	Leader Arrow Width	3/64"
Leader 3 Configuration	Leader Arrow File...	leadnon.dwg
	Bar Leader Layer...	0-25TEXT
	Leader Mode	Underneath
	Leader Arrow Length	3/64"
	Leader Arrow Width	3/64"
Global Settings	Auto Leader Bars	Yes
	Leader Style for Ranges	Leader 1
	Leader Snap Setting	Near

Figure 9.15 Leader Configuration Dialog

This configuration controls the Leader 1, Leader 2 & Leader 3 options available from the Labelling options. This does not affect the standard AutoCAD Leader. Three Leader types are available, namely Leader 1, Leader 2 and Leader 3. The

RebarCAD Leader Configuration dialog has identical options for Leader 1, Leader 2 and Leader 3, so the configuration options listed below apply to all types.

Leader Arrow File

This is the leader block File Name and Path. The file name and path can be typed into the field or the Leader Arrow File Button picked and the required file selected from a standard file selection dialog. This block is inserted on the end of the leader to form the arrow or donut as required in Leader 1 or 2.

Bar Leader Layer

This is the layer on which the Leader is drawn when the Group Laying Option is OFF. The required layer can be typed into the field or the Bar Leader Layer button can be picked to invoke a standard layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

Leader Mode

If set to Underneath, then the leader will be drawn underlining the bar label. If set to Centre, then the leader will be drawn from the end of the bar label.

Leader Arrow Length

This is the length of the leader arrowhead in drawn mm/inches for Leader 1 and the donut diameter in Leader 2.

Leader Arrow Width

This is the width of the leader arrowhead in drawn mm/inches for Leader 1 and the donut diameter in Leader 2.

Auto Leader Bars

Setting to Yes will automatically call the leader command if after drawing a bar view the associated label is immediately placed by entering Yes at the label bar prompt.

9.7 Range Configuration

The Range Configuration dialog contains the configuration of the ranges.

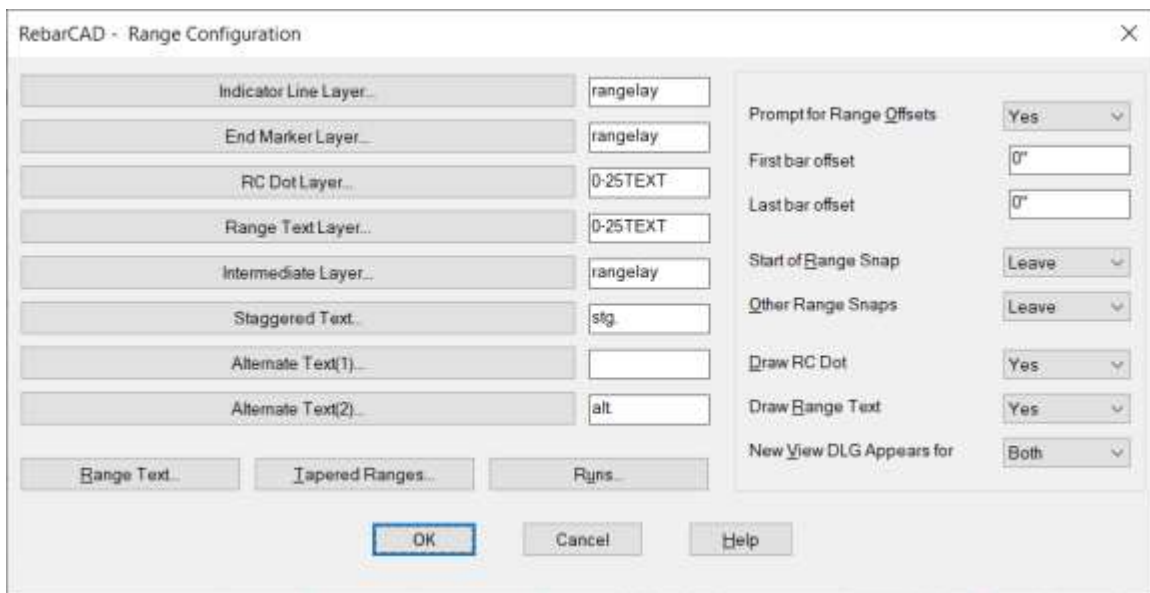


Figure 9.16 Range Configuration Dialog

The options shown in the dialog are as follows: -

9.7.1 Indicator Line Layer

This is the layer on which the Range line is placed when the Group Layering

Option is OFF. The required layer can be typed into the field or the Indicator Line Layer Button can be picked to invoke a layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

9.7.2 End Marker Layer

This is the layer on which the Range Line End Markers are placed on when the Group Layering Option is OFF. The required layer can be typed into the field or the End Marker Layer Button can be picked to invoke a layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

9.7.3 RC Dot Layer

The RC dot is a block which is inserted at the intersection point of the range line and the bar drawn. The RC Dot Layer is the layer which the RC dot is placed on when the Group Layering Option is OFF. The required layer can be typed into the field or the RC Dot Layer Button can be picked to invoke a layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

9.7.4 Range Text Layer

This is the layer that any range text is placed on when the Group Layering Option is OFF. Range Text is text associated with a range type, i.e. on multiple ranges text is displayed to show group c/c in the form (17+16) @8".

The required layer can be typed into the field or the Range Text Layer Button can be picked to invoke a layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

9.7.5 Intermediate Layer

This is the layer which the multiple range intermediate lines are placed on when the Group Layering Option is OFF. The intermediate lines are the lines between groups of bars in multiple group ranges. The required layer can be typed into the field or the Intermediate Layer Button can be picked to invoke a layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

9.7.6 Staggered Text

This is the text that is copied into a Staggered Range Bar Label. The required text can be typed into the field or the Staggered Text Button can be picked to invoke the Standard Note dialog where the required note can be selected from the displayed list.

9.7.7 Alternate Text (1)

This is the text that is copied into the label of the first bar drawn in an Alternate Range. The required text can be typed into the field or the Alternate Text (1) Button can be picked to invoke the Standard Note dialog where the required note can be selected from the displayed list.

9.7.8 Alternate Text (2)

This is the text that is copied into the label of the second bar drawn in an Alternate Range. The required text can be typed into the field or the Alternate Text (2) Button can be picked to invoke the Standard Note dialog where the required note can be selected from the displayed list.

9.7.9 First Bar Offset

When drawing a bar range, a prompt 'first bar offset' is given when the start of the range has been picked to allow the start point to be offset from the picked point. The value entered in this field will be offered as a default at the 'first bar offset' prompt.

9.7.10 Last Bar Offset

When drawing a bar range, a prompt 'last bar offset' is given when the end of the range has been picked to allow the end point to be offset from the picked point. The value entered in this field will be offered as a default at the 'last bar offset' prompt.

9.7.11 Start of Range Snap

When drawing a bar range it is quite common to use AutoCAD snaps to pick the start point of the bar range. This option allows the user to configure different snaps from those currently configured when picking the start point of a range.

The options are as follows: -

Leave - Keep current OSNAP setting.

None - No OSNAP End - Endpoint etc.

9.7.12 Other Range Snaps

When drawing a bar range, it is quite common to use AutoCAD snaps to pick the end point of the bar range (or the start point of intermediate groups in multiple ranges). This option allows the user to configure different snaps from those currently configured when picking the end or the start point of intermediate groups in multiple ranges.

The options are as follows: -

Leave - Keep current OSNAP setting.

None - No OSNAP End - Endpoint etc.

9.7.13 Draw RC Dots

Set to 'Yes' if RC Dots are required. See also 'RC Dot Layer'.

9.7.14 Draw Range Text

Set to 'Yes' if range text is required. See also 'Range Text Layer'.

9.7.15 New View DLG Appears

The user may not want to look at the 'Bar Drawing' dialog every time a new view is being carried out for a range or run.

The options are as follows:-

Both - DLG appears for both new view Range or Run

Range - DLG appears for range only

Run - DLG appears for run only

Neither - DLG doesn't appear for either range or run

9.7.16. Tapered Ranges

The 'Tapered Ranges Config.' dialog contains the automatic range stepping configuration as shown in Figure 9.17.

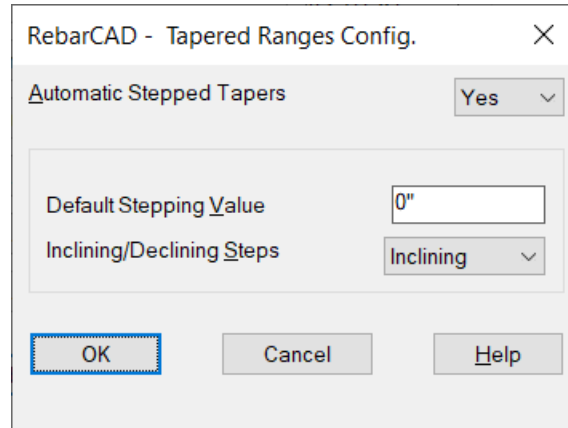


Figure 9.17 Tapered Ranges Config. Dialog

The options shown in the dialog are as follows: -

Automatic Stepped Tapers

When set to Yes, linear tapered ranges will automatically have a step taper applied to the default value.

Default Stepping Value

This is the default step/grouping value.

Inclining/Declining Steps

When set to Inclining, the step/grouping will be applied starting from the shortest bar.

When set to Declining, the step/grouping will be applied starting from the longest bar.

9.7.16 Runs

The 'Runs' dialog contains the bar run sizing configuration, as shown in Figure 9.18.

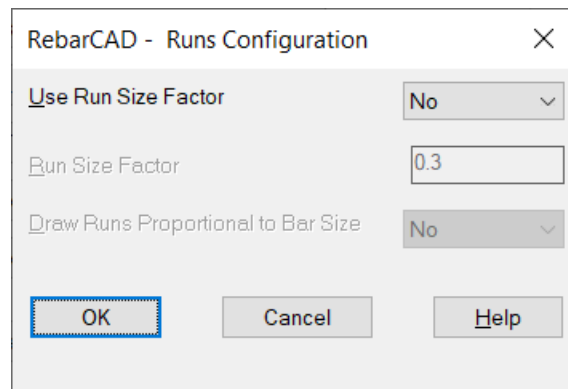


Figure 9.18 Runs Configuration Dialog

The options shown in the dialog are as follows: -

Use Run Size Factor

When set to Yes, bar runs are drawn to the plotted size entered in the Bar Size Factor option.


When set to No, bar runs are drawn to the exact bar diameter.

Bar Size Factor

Enter the plotted size for all bar runs regardless of diameter or drawing scale.

9.8 Coupler Configuration

The 'Coupler Configuration' dialog contains the configuration for coupler settings and annotation on both the drawing and Bar List.

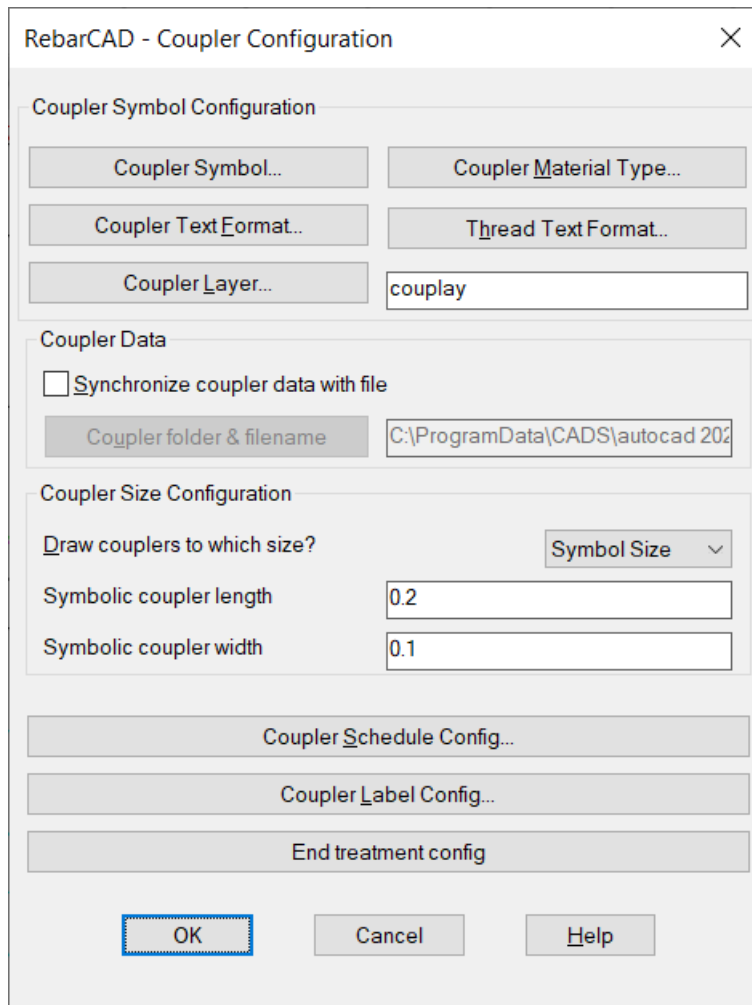

The dialog box is titled "RebarCAD - Coupler Configuration" and contains the following sections and controls:

- Coupler Symbol Configuration:**
 - Coupler Symbol...
 - Coupler Material Type...
 - Coupler Text Format...
 - Thread Text Format...
 - Coupler Layer...
 - couplay (text input)
- Coupler Data:**
 - ☐ Synchronize coupler data with file
 - Coupler folder & filename: C:\ProgramData\CADS\autocad 202...
- Coupler Size Configuration:**
 - Draw couplers to which size? (Symbol Size dropdown)
 - Symbolic coupler length: 0.2
 - Symbolic coupler width: 0.1
- Buttons:**
 - Coupler Schedule Config...
 - Coupler Label Config...
 - End treatment config
 - OK, Cancel, Help

Figure 9.19 Coupler Configuration Dialog

The options shown in the dialog are as follows: -

9.8.1 Lenton Coupler Configuration

Accesses the Lenton Coupler Configuration dialog, as shown in Figure 9.20. The dialog contains configuration for the symbols and labels used to indicate Lenton coupled bars. Configuration is also available for the indication of cutting tolerances on the Bar List slides shown with Lenton coupled bars.

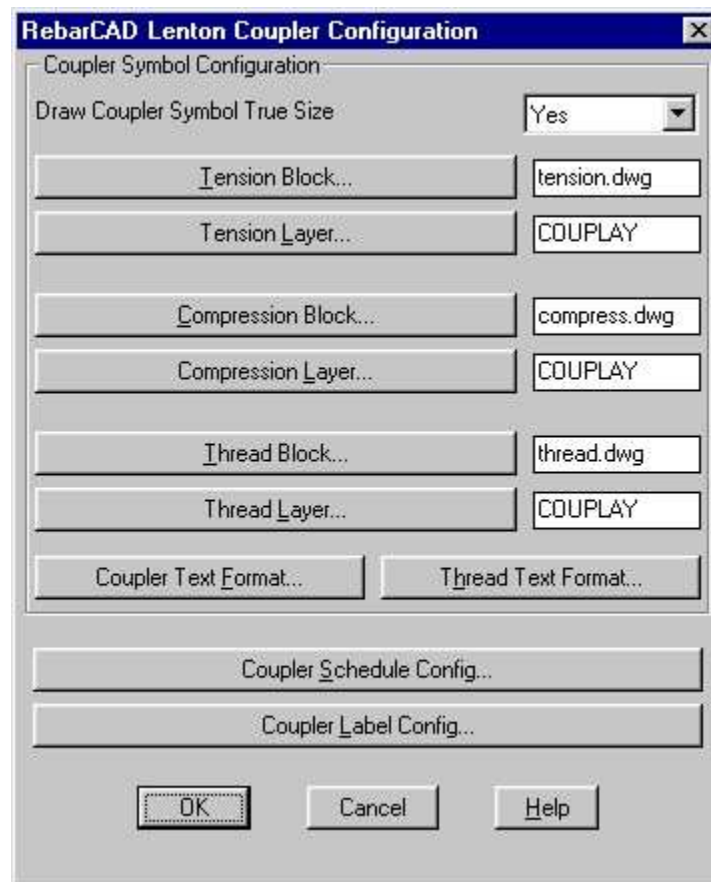


Figure 9.20 Lenton Coupler Configuration Dialog

Draw Coupler Symbol True Size

If set to YES, the coupler symbol placed on the bar end is drawn true size.

If set to NO, the symbol is only indicative of the coupler size.

Tension Block

The Tension Block is the block used to create the Tension Symbol which can be attached to the end of a coupled bar leg. The block name and path can be typed into the field or the Tension Block button picked and the required block selected from a standard file selection dialog.

Tension Layer

This is the layer on which the Tension Block is drawn when the Group Layering

Option is OFF. The required layer can be typed into the field or the Tension Layer button can be picked to invoke a standard layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

Compression Block

The Compression Block is the block used to create the Compression Symbol which can be attached to the end of a coupled bar leg. The block name and path can be typed into the field or the Compression Block button picked and the required block selected from a standard file selection dialog.

Compression Layer

This is the layer on which the Compression Block is drawn when the Group

Layering Option is OFF. The required layer can be typed into the field or the Compression Layer button can be picked to invoke a standard layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

Thread Block

The Thread Block is the block used to create the Thread Symbol which can be attached to the end of a coupled bar leg. The block name and path can be typed into the field or the Thread Block button picked and the required block selected from a standard file selection dialog.

Thread Layer

This is the layer on which the Thread Block is drawn when the Group Layering Option is OFF. The required layer can be typed into the field or the Thread Layer button can be picked to invoke a standard layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

Coupler Text Format

The Coupler Text Formatting options (Figure 9.21) allows the user to control the layout and contents of the Coupler Labels. They are accessed by picking the Coupler Text Format button.

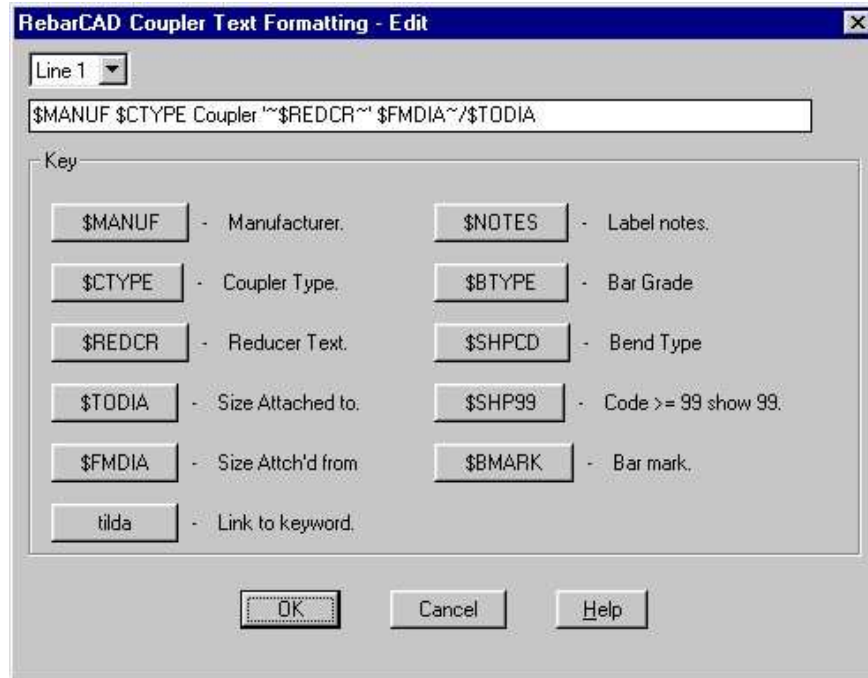


Figure 9.21 Coupler Text Formatting Dialog

For more information on setting up specific coupler text formats, please contact CADS Technical Support Department.

Thread Text Format

The Thread Text Formatting options (Figure 9.22) allow the user to control the layout and contents of the Thread Labels. They are accessed by picking the Thread Text Format button.

For more information on setting up specific thread text formats, please contact CADS Technical Support Department.

Coupler Bar List Configuration



Figure 9.23 Coupler Label Configuration Dialog

Label Layer

This is the layer on which the Coupler Labels are drawn when the Group Layering Option is OFF. The required layer can be typed into the field or the Label Layer button can be picked to invoke a standard layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

Label Text Style

This is the text style used for Coupler and Coupler Thread labels.

Label Height

This is the height of Coupler and Coupler Thread label text in plotted mm.

Distance Between

This is the distance in plotted mm between lines of text making up the Coupler and Coupler Thread labels. The distance is that required between the bottom of a line of text and the top of the text of the line below.

Label Width Factor

This is the width factor applied to Coupler and Coupler Thread label text.

9.8.2 MacAlloy Coupler Configuration

This accesses the MacAlloy Coupler Configuration dialog, as shown in Figure 9.24. The dialog contains configuration for the symbols and labels used to indicate MacAlloy coupled bars. Configuration is also available for the indication of cutting tolerances on the bar list slides shown with MacAlloy coupled bars.

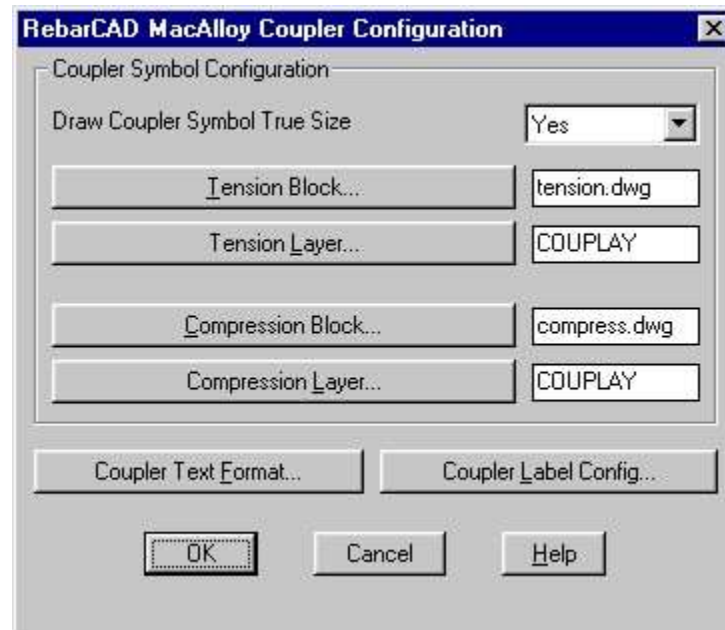


Figure 9.25 MacAlloy Coupler Configuration Dialog

Draw Coupler Symbol True Size

If set to YES, the coupler symbol placed on the bar end is drawn true size. If set to NO, the symbol is only indicative of the coupler size.

Tension Block

The Tension Block is the block used to create the Tension Symbol which can be attached to the end of a coupled bar leg. The block name and path can be typed into the field or the Tension Block button picked and the required block selected from a standard file selection dialog.

Tension Layer

This is the layer on which the Tension Block is drawn when the Group Layering

Option is OFF. The required layer can be typed into the field or the Tension Layer button can be picked to invoke a standard layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

Compression Block

The Compression Block is the block used to create the Compression Symbol which can be attached to the end of a coupled bar leg. The block name and path can be typed into the field or the Compression Block button picked and the required block selected from a standard file selection dialog.

Compression Layer

This is the layer on which the Compression Block is drawn when the Group

Layering Option is OFF. The required layer can be typed into the field or the Compression Layer button can be picked to invoke a standard layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

Coupler Text Format

The Coupler Text Formatting options (Figure 9.25) allows the user to control the layout and contents of the Coupler Labels. They are accessed by picking the Coupler Text Format button.

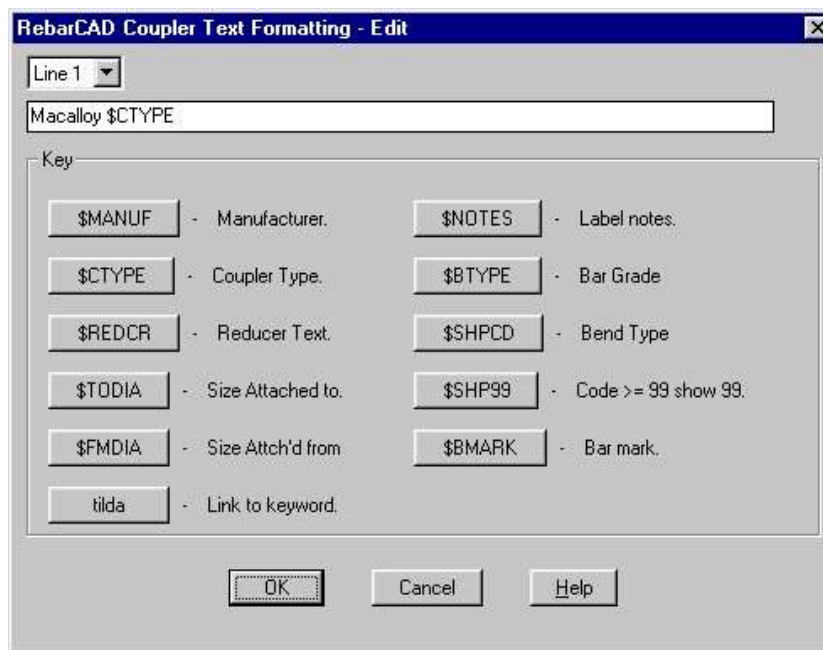


Figure 9.25 Coupler Text Formatting Dialog

For more information on setting up specific coupler text formats, please contact CADS Technical Support Department.

Coupler Label Configuration

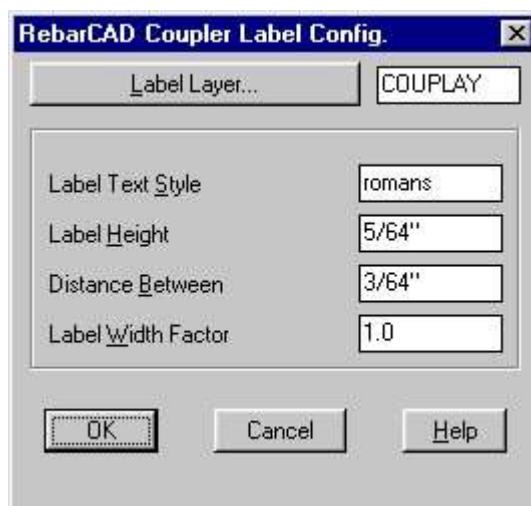


Figure 9.26 Coupler Label Configuration Dialog

Label Layer

This is the layer on which the Coupler Labels are drawn when the Group Layering Option is OFF. The required layer can be typed into the field or the Label Layer button can be picked to invoke a standard layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

Label Text Style

This is the text style used for Coupler and Coupler Thread labels.

Label Height

This is the height of Coupler and Coupler Thread label text in plotted mm.

Distance Between

This is the distance in plotted mm between lines of text making up the Coupler and Coupler Thread labels. The distance is that required between the bottom of a line of text and the top of the text of the line below.

Label Width Factor

This is the width factor applied to Coupler and Coupler Thread label text.

9.9 Miscellaneous Configuration

The 'Miscellaneous Configuration' dialog contains general configuration options.

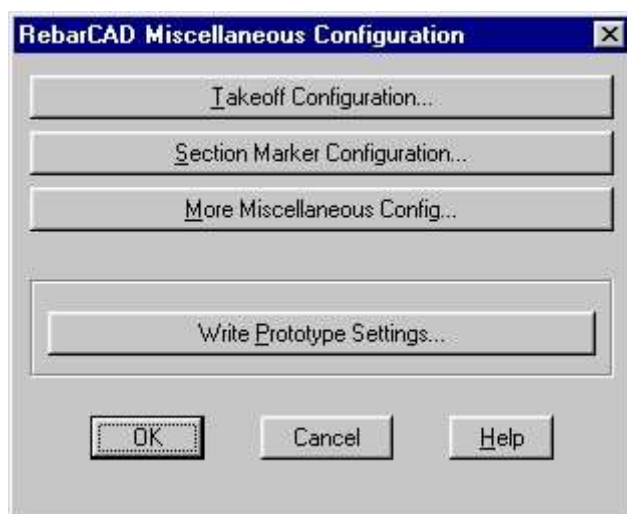


Figure 9.27 Miscellaneous Configuration Dialog

The options shown in the dialog are as follows:-

9.9.1 Section Marker Configuration

Accesses the Section Marker Configuration dialog shown in Figure 9.29.

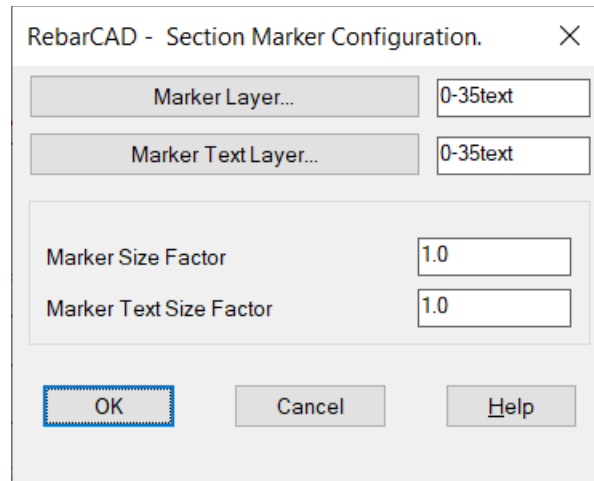


Figure 9.29 Section Marker Configuration Dialog

This configuration controls the size and layers used for the Section Markers available from the Tools & Symbols option.

Marker Layer

This is the layer the section marker symbol is placed on. The required layer can be typed into the field or the Marker Layer button can be picked to invoke a standard layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

Marker Text Layer

This is the layer the section marker text is placed on. The required layer can be typed into the field or the Marker Text Layer button can be picked to invoke a standard layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

Marker Size Factor

This is a size factor, which controls the drawn size of the section markers.

Marker Text Size Factor

This is a size factor, which controls the drawn size of the section marker text.

9.9.2 More Miscellaneous Configuration

Accesses the Miscellaneous Configuration dialog shown in Figure 9.30.

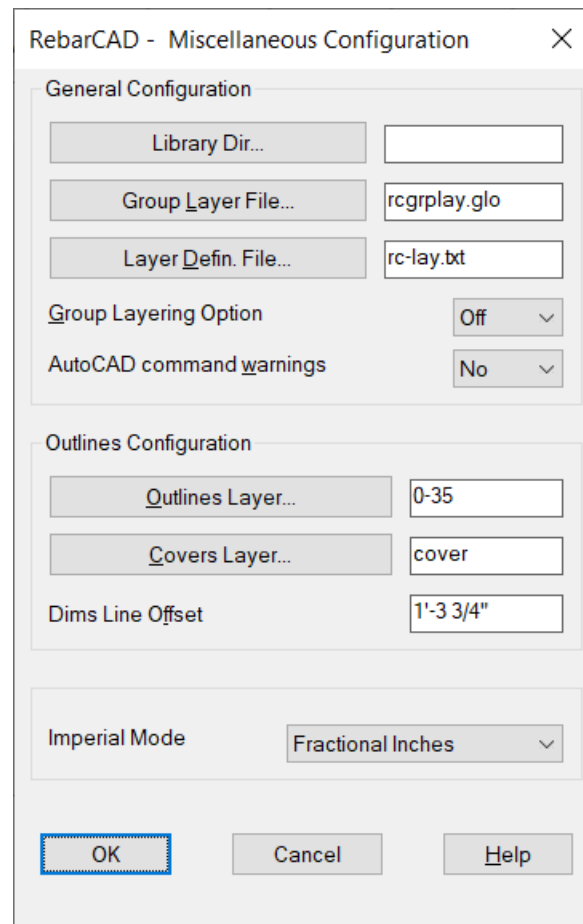


Figure 9.30 Miscellaneous Configuration Dialog

This configuration controls a number of general configuration options.

Library Dir.

This is the default path to where the Rebar Library reads or writes particular details. The required path can be typed into the field or by picking the Library Dir. Button the required path can be selected using a standard path selection dialog.

Group Layer File

This is the file which describes layer groups to appear on the side menu. The required file can be typed into the field or by picking the Group Layer File Button the required file can be selected using a standard file selection dialog. This file is only used if the Group Layering Option is ON.

For more information on the Group Layering Option, see Chapter 6.

Layer Define File

The 'Layer Definition File' describes how layers are created. This file requires editing when the GLO file has been changed. The required file can be typed into the field or by picking the Layer Define. File Button the required file can be selected using a standard file selection dialog.

For more information on the Group Layering Option, see Chapter 6.

Group Layering Option

Set to 'On' if the Group Layering Options are required.

AutoCAD command warnings

Not required in this version.

Outlines Layer

This is the layer on which the outlines of any RebarCAD Outlines are placed. The required layer can be typed into the field or the Outlines Layer Button can be picked to invoke a layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

Cover Layer

This is the layer on which the cover lines of any RebarCAD Outlines are placed. The required layer can be typed into the field or the Cover Layer Button can be picked to invoke a layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

Dims Line Offset

The distance that the dimensions are drawn away from the outline of any RebarCAD Outline. This value is in DRAWING UNITS.

Imperial Mode

This configuration option is available when feet/inch units are in use and it determines whether fractional or decimal inches are to be used.

9.9.4. Write Prototype Settings

This allows you to write out a new .ini file to the hard disk, which will contain any changes made to the configuration. This will mean that any new drawings started

subsequently using the comparable .def file will have the new .ini file configuration as default settings.

9.10 Support Files

RebarCAD uses 5 support files to determine the bend types, bar types, bar bending rules etc. to be used. Support files can be configured via the RebarCAD Support File dialog, as shown in Figure 9.31.

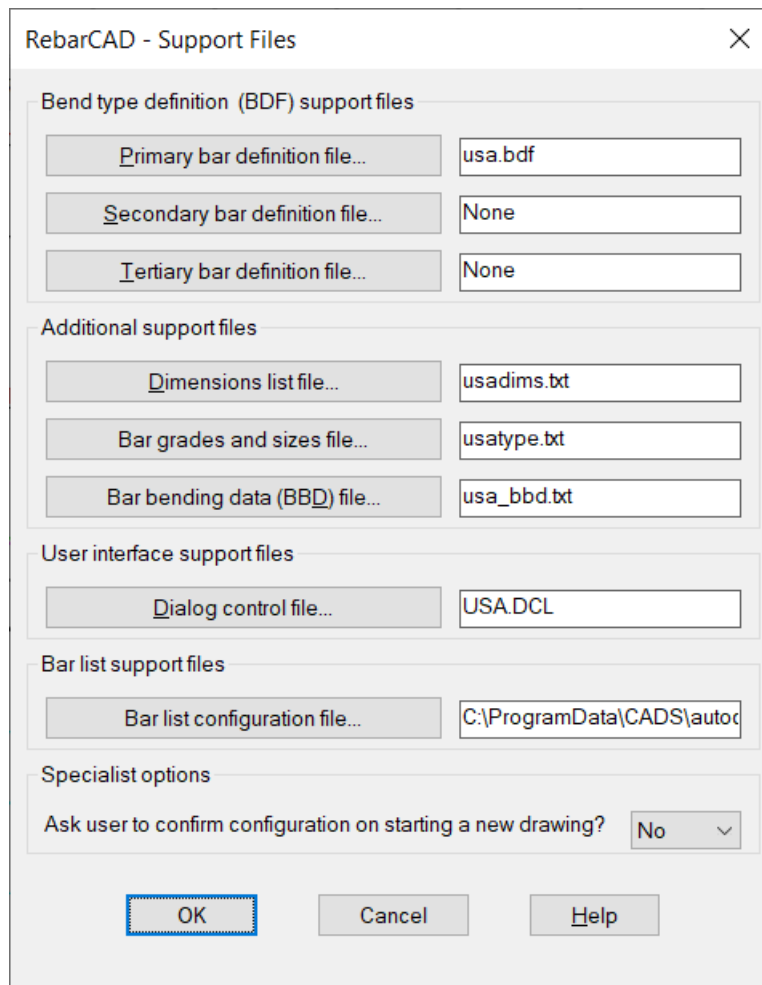


Figure 9.31 Support File Dialog

9.10.1 Bar Dims Txt Files

This is the file which specifies the dimension names that are to be used within RebarCAD.

RebarCAD can handle up to 25 dimensions, each with different names of any length.

Dimension names can be anything, e.g. A, B, C etc. or A1, A2, A3 etc. or Peter, Piper, Pecked etc. Basically, anything that is required.

The total number of lines in the file depicts the total number of dimensions that are used within RebarCAD. Again, 25 is the limit.

It is advised not to change this file, as it is the base file from which all other support files work. Changing this file would require changing the Configured Def file, the Bar Bending Data File (BBD) and also the Bar Description File (BDF).

9.10.2 9.10.2. Bar Types File

This file describes the different Bar Steel Types available to RebarCAD.

There is no limit to the number of different bar types available to RebarCAD. Bar Types are specified by declaring the '***' keyword before the actual name of the Bar Steel Type. e.g.:

```
***T
{
}
```

This will declare a new Bar Steel Type of type 'T'.

RebarCAD uses many variables that are declared in each Bar Steel Type, these are as follows:

Description	-	This is a written description of the Bar Steel Type
bartype_id	-	This is used when a Bar Steel Type is the same, in data, as another Bar Steel Type. For instance, in the UK types T and R control the rules for bending, all types other than R use type T's bending rules.
ProdGrade	-	This is used in the USA/Canada and is the Production Grade for the Production File Output.
Sizes	-	A string containing a comma separated list of available sizes.
AltSizes	-	A string containing a comma-separated list of Alternate sizes. This is used when, for instance, a drawing has been drawn in Imperial and needs to be output as Metric. The string must be in the same order as the Sizes list.
DrawnDia	-	The Drawn Diameter of the bar. This is again a comma- separated list which must be in the same order as the Sizes.
NominalDia	-	The Nominal Diameter of the bar. This is again a comma- separated list which must be in the same order as the Sizes.
Weight	-	Cross Sectional Weight of the Bar. This is again a commaseparated list which must be in the same order as the Sizes.
LAPDATA\$???	-	A string containing a comma-separated list of available laps. The user may add as many LAPDATA's as is required. The '???' specifies the name of a specific Lap. Again, this is a comma-separated list which must be in the same order as the Sizes.
LengthMax	-	A string containing the maximum length for a particular size of bar. This is again a comma-separated list which must be in the same order as the Sizes.

BlockName - This variable specifies the block which can be inserted onto a label using the \$TBLCK keyword in the label format configuration. If only a block name is specified e.g.
"c:\tmp\block", then this will be inserted for every size. If a comma-separated list is supplied, then in the order in which the Sizes are specified, the blocks will be inserted for each size.

The user may also add additional variables which can be referenced in other support files.

9.10.3 Bar Bending Data File

This file sets up the different Bending rules for a bar. The file is processed many times and for this reason it has been built into RebarCAD as compiled code rather than interpreted code (file).

RebarCAD checks the size of the Bar Bending Data (BBD) configured, if the file is the same size as the size that is recorded in the executable, then the internal compiled BBD is run. If the file size is different, then the configured BBD File is interpreted. The user can force the BBD File to be interpreted by configuring 'Use Fast BBD' to No in the Bar configuration.

If the user does see a need to change the BBD File, then for speed, the code must be written as efficiently as possible.

9.10.4 Bar Bend Types File

This file describes the different Bar Bend Types available to RebarCAD.

There is no limit to the number of different Bar Bend Types available to RebarCAD.

There is no limit to the number of different Views of a particular Bar Bend Type. Bar Shapes are specified by declaring the '**' keyword before the actual name of the Bar Bend Type. e.g.

****20 - Side:**

The Side view is the master view.

The user may create different views of the same shape by defining:

****20 - Left:**

New shapes can be derived from existing shapes to save effort:

****20 - Left:**32 - Right:**34 - Right:**

Deriving new shapes from 'Side' views is not allowed and will cause undesired effects.

Warning - It is a very complex file and only very experienced users should change it. If you require new shapes, then simply use the BarGen program to create them.

9.10.5 Dialog Control File

The Dialog Control file controls the appearance and contents of all dialogs within RebarCAD.

For more information on setting up specific dialog control files, please contact CADS Technical Support Department.

9.11 Global / General Configuration

The Global / General Configuration option allows access to all configuration variables used by RebarCAD via the RebarCAD Global Configuration Centre dialog, as shown in Figure 9.32.

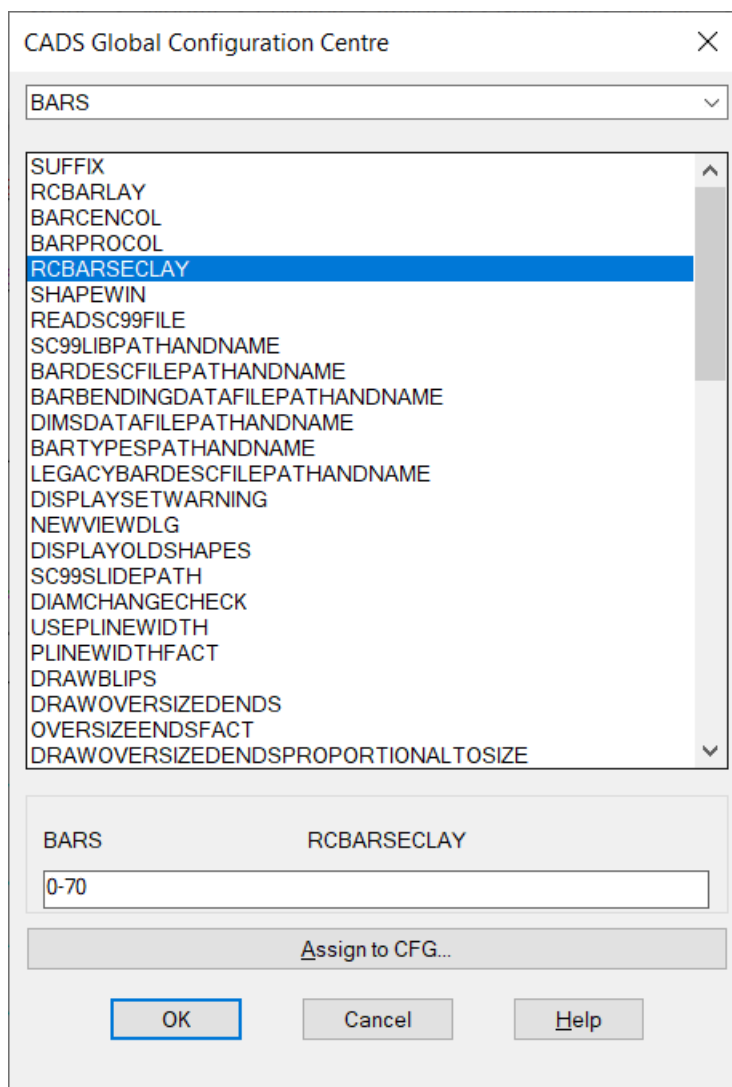


Figure 9.32 Global Configuration Centre Dialog

Individual configuration item values can be viewed by highlighting the configuration item in the scrolling list. The current value is displayed in the input field at the bottom of the dialog. Values can be changed by entering the required value in the input field and then picking the Assign to CFG button. New values will only be assigned if the Assign to CFG button is picked and will only apply to the current drawing. Changes made which are to be permanent changes for all new drawings must be assigned to the .ini file by using the Write Prototype Settings option described earlier in this chapter. A full listing of all RebarCAD configuration items can be found in Appendix F.

9.12 Change Configuration

Menu Option Change CFG File

Command Line `cads_rc_cconfig`

Toolbar



RebarCAD configuration files (.def file extension) can be selected from the Configuration File Selection dialog, as shown in Figure 9.33.

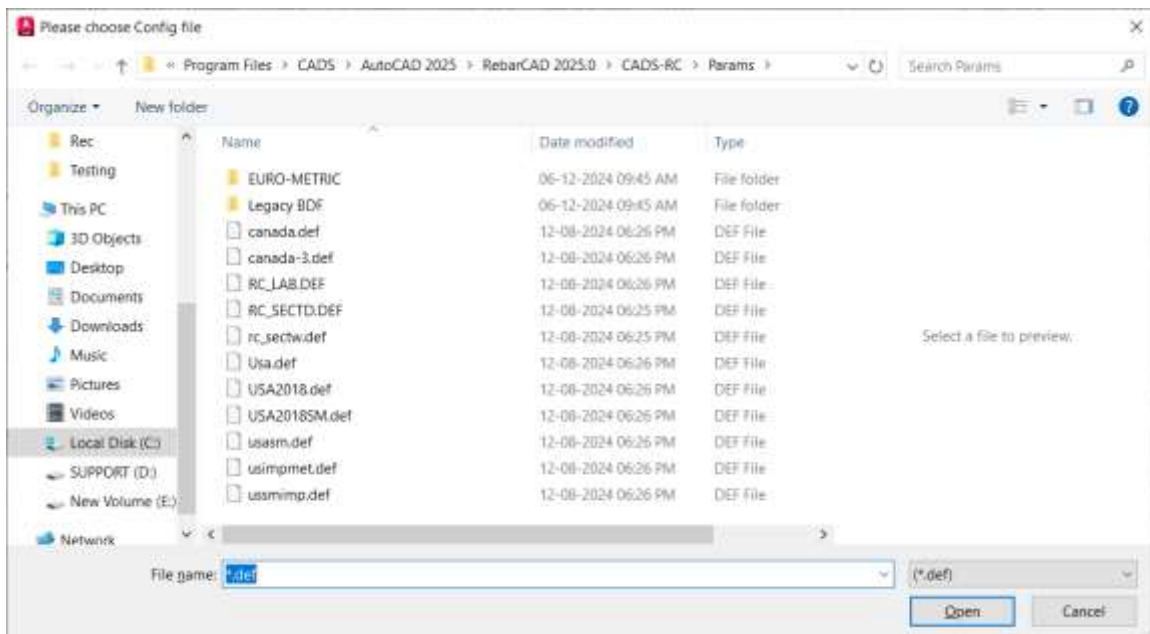


Figure 9.33 RebarCAD Configuration File Selection Dialog.

For more information on RebarCAD configuration files, refer to Appendix F.

9.13 Bar List Configuration

The Bar List Configuration dialog contains Bar List On Drawing, Bent Bar List (North America only) & General Bar List Configuration.

9.13.1 Bar List on Drawing Configuration

The bar list on drawing blocks have attribute tags defined inside them. You can create your own custom layout of these blocks, provided that you use the same tag names. Any text manually entered into the bar list will be automatically inserted into the bar list on drawing.

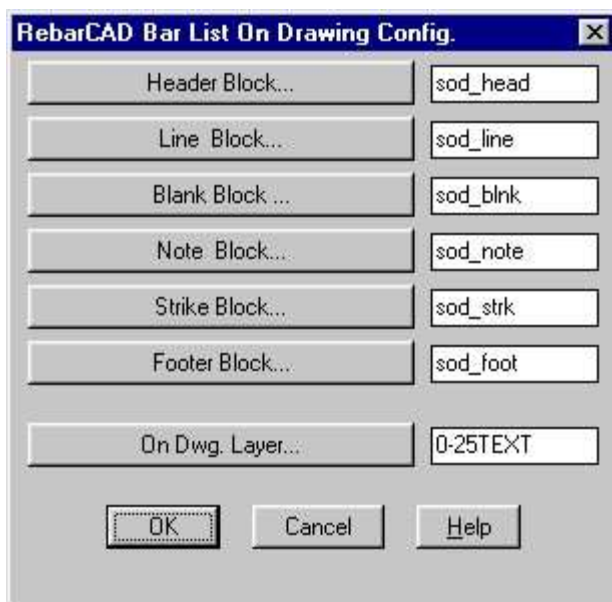


Figure 9.34 RebarCAD Bar List On Drawing Configuration Dialog.

Header Block Name

This is the block that is inserted at the header of the Bar List when it is inserted into the drawing using the Bar List On Drawing option. The user may change this block to meet individual requirements. The required file can be typed into the field or, by picking the Header Block Name Button, the required file can be selected using a standard file selection dialog.

Line Block Name

This is the block that is inserted as the line of the Bar List when it is inserted into the drawing using the Bar List On Drawing option. The user may change this block to meet individual requirements. The required file can be typed into the field or, by picking the Line Block Name Button, the required file can be selected using a standard file selection dialog.

Blank Block Name

This is the block that is inserted for blank lines on the Bar List when it is inserted into the drawing using the Bar List On Drawing option. The user may change this block to meet individual requirements. The required file can be typed into the field or, by picking the Blank Block Name Button, the required file can be selected using a standard file selection dialog.

Note Block Name

This is the block that is inserted for text entry lines on the Bar List when it is inserted into the drawing using the Bar List On Drawing option. The user may change this block to meet individual requirements. The required file can be typed into the field or, by picking the Note Block Name Button, the required file can be selected using a standard file selection dialog.

Strike Block Name

This is the block that is inserted for struck out lines on the Bar List when it is inserted into the drawing using the Bar List On Drawing option. The user may change this block to meet individual requirements. The required file can be typed into the field or, by picking the Strike Block Name Button, the required file can be selected using a standard file selection dialog.

Footer Block Name

This is the block that is inserted at the foot of the Bar List when it is inserted into the drawing using the Bar List On Drawing option. The user may change this block to meet individual requirements. The required file can be typed into the field or, by picking the Footer Block Name Button, the required file can be selected using a standard file selection dialog.

On Drawing Layer

This is the layer on which the Schedules On Drawing are placed on. The required layer can be typed into the field or the On Drawing Layer Button can be picked to invoke a layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

9.13.2 Bent Bar List on Drawing Configuration

The Bent Bar List on drawing option is primarily used on reinforcement drawings to North American standards. The standard normally requires the fabricator to produce a listing on the drawing of all bent bars. This assists in the checking and placing activities.

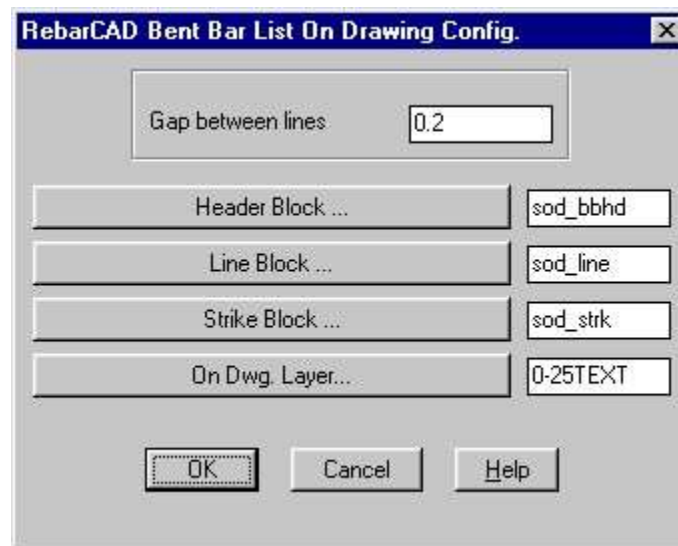


Figure 9.35 RebarCAD Bent Bar List On Drawing Configuration Dialog

The Bent Bar List on drawing blocks have attribute tags defined inside them. You can create your own custom layout of these blocks, provided that you use the same tag names. Any text manually entered into the bar list will be automatically inserted into the bar list on drawing.

Gap Between Lines

This value determines the distance between each line. Entering a distance equal to the height of the block used for the data lines will give no gap between data lines.

Header Block Name

This is the block that is inserted at the header of the bar list when it is inserted into the drawing using the Bent Bar List On Drawing option. The user may change this block to meet individual requirements. The required file can be typed into the field or, by picking the Header Block Name Button, the required file can be selected using a standard file selection dialog.

Line Block Name

This is the block that is inserted as the line of the bent bar list when it is inserted into the drawing using the Bent Bar List On Drawing option. The user may change this block to meet individual requirements. The required file can be typed into the field or, by picking the Line Block Name Button, the required file can be selected using a standard file selection dialog.

Strike Block Name

This is the block that is inserted for struck out lines on the bent bar list when it is inserted into the drawing using the Bent Bar List On Drawing option. The user may change this block to meet individual requirements. The required file can be typed into the field or, by picking the Strike Block Name Button, the required file can be selected using a standard file selection dialog.

On Drawing Layer

This is the layer on which the Schedules On Drawing are placed on. The required layer can be typed into the field or the On Drawing Layer Button can be picked to invoke a layer selection dialog where the required layer can be selected from a list displaying the current drawing layers.

9.13.3 Weights Configuration

These items control the precision of the weights when output directly onto the drawing.

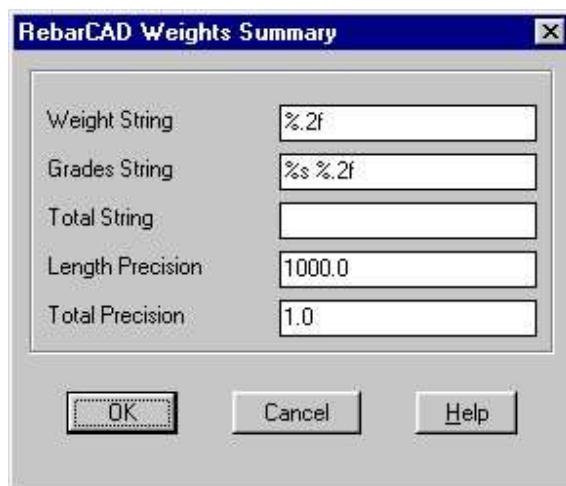


Figure 9.36 RebarCAD Weights Summary Configuration Dialog

For more information on Weights Summary options please contact CADS Technical Support Department.

9.13.4 Miscellaneous Configuration

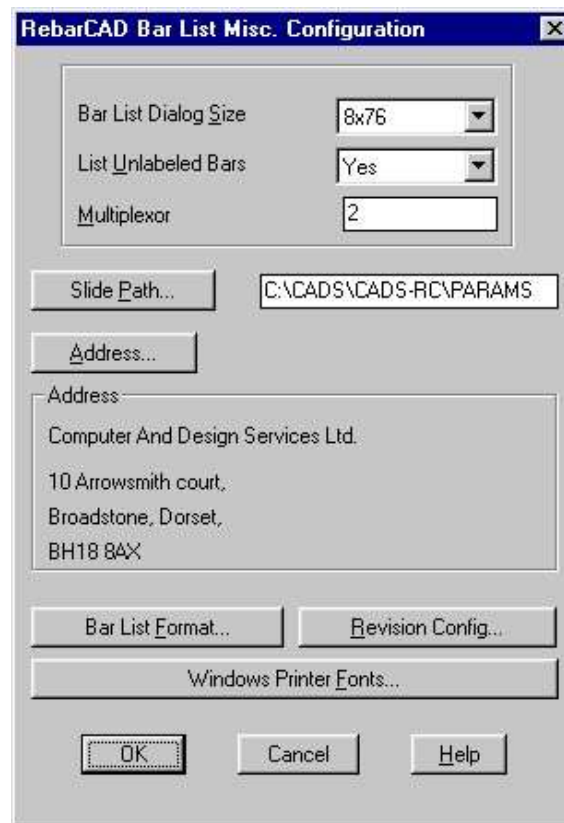


Figure 9.37 RebarCAD Bar List Miscellaneous Configuration Dialog

Bar List Dialog Size

The options are 8 x 76 and 23 x 78. Depending on your screen type and font size, the display can show an 8 or 23 line bar list.

List / Bar List Un-Labelled Bars

If this is set to 'Yes', then the list / bar list will show all bar sets including those which are not labelled. If set to 'No', then any bar sets that are NOT labelled will NOT be displayed in the list / bar list.

Multiplexor

The multiplexor value determines the amount of memory allocated to the bar list database. The default value for the multiplexor is 10, therefore the bar list will reserve: -

'10' x 200 Release Codes

'10' x 200 Bar Marks

'10' x 200 Bar Sets

'10' x 2000 Bar Views

'10' x 200 Bar List Descriptions

Slide Path

The path for the user defined special bar slides. By default, RebarCAD reads the current directory first.

If it fails, it tries to find the slide in the 'Slide Path' directory.

If yet again it fails, it tries to find the slide in the ??\CADS-RC\params directory.

For more information on special bar slides, see the chapter entitled “Bar List Display”.

9.13.5 Revision Config.

This option accesses the RebarCAD Bar List Revision Configuration dialog which controls the revision handling facility within the internal bar list.

The Bar List Revision Configuration dialog displays a list of the revision suffixes which will be applied to bar lines each time they are revised. The revision suffixes are also affected by the Revision System selected. The settings shown in Figure 9.37 will give the following revision process:

1. When the bar list is issued for the first time, no revision suffix will be shown on the bar list header or any bar lines, as the First Issue option is blank.
2. Any alterations made to the bar list by editing bars on the drawing will mark the relevant line with revision A. The bar list header revision field will also be marked A on all pages which contain a revised line. Assume all bar list pages are then issued for the second time.
3. Any alterations made to bar list pages which already have a revision A will mark the relevant line with revision B. The bar list header revision field will also be updated from revision A to revision B. Any alterations made to a bar list page which has not been altered since the original issue will be marked with revision A. The bar list header revision field will also be marked A.

The above process allows bar list pages to be at different revision levels. Each bar list page will step through the revision suffixes as it is revised. This form of revision handling is known in RebarCAD as the Normal Revision System.

Later in this section, the effect of the Petro-Chemical Revision System is explained.

Issuing & revision settings

Issue type	Cloud layer	Callout layer	Revision level	Revision mark
► Draft			► First Issue	0
For Approval			Revision 1	1
Tender			Revision 2	2
Contract			Revision 3	3
Construction			Revision 4	4

Revision cloud start width: 0 Revision cloud end width: 0.0125

☐ Specify revision levels for each issue type

Bar list revision system: Custom

Figure 9.38 Bar List Revision Configuration Dialog

The options available in the Bar List Revision Config dialog are as follows:

Update

This option is used to alter the revision suffix which will be used for a particular revision level. If you wish to alter the Revision 1 revision level suffix from A to 1, then you should proceed as follows:

1. Highlight the Revision 1 line in the list. This will display the revision suffix for this revision level in the field to the left of the Update button.
2. Change the A in the field to the left of the Update button to 1.
3. Pick on the Update button. This will then update the Revision 1 revision level suffix to 1. Once you have updated all the revision level Revision Suffixes, they can be written out to the hard disk to act as the default setting for all new drawings by exiting via the OK buttons and Writing Prototype Settings from the Miscellaneous Configuration dialog.

Add New Revision Level

The bar list configuration has 26 revision levels in place as a default. If you require more revision levels, they can be added one at a time by picking the Add New Revision Level button which will add a new revision level to the end of the list. The suffix for new revision levels can be set by using the Update option described earlier.

Revision System

RebarCAD provides two revision systems for controlling the revision handling of the internal Bar List. You must ensure that you have the required revision system selected before you issue the Bar List, since it cannot be altered once the Bar List has been issued.

1. Normal

The Normal revision system allows Bar List pages to be revised independently. If a revision is made to a bar list page, then the relevant line along with the bar list revision header field will be marked with the current revision suffix. All the revisions made to a bar list page remain beside the revised line so that it is easy to see what each revision relates to. The bar list header field will always display the revision suffix of the latest revision.

2. Petro-chemical

The Petro-chemical revision system revises all Bar List header fields with the current revision level, even if no changes have been made to the page. When a revision is made to a Bar List page, all previous revisions are removed from all the pages. Only lines which have been revised since the Bar List was last issued will be marked with the revision suffix, but all pages will have their revision header field marked with the current revision suffix, therefore the Petro-chemical system only marks the current revisions on the bar list with all previous revisions being deleted. All pages remain at the same revision level, even if the current revisions do not affect the page.

9.13.6 Bar List Format

The bar list format options allow automatic formatting settings to be defined for execution when entering the internal Bar List. At present, these options are only available when using North American set-ups.

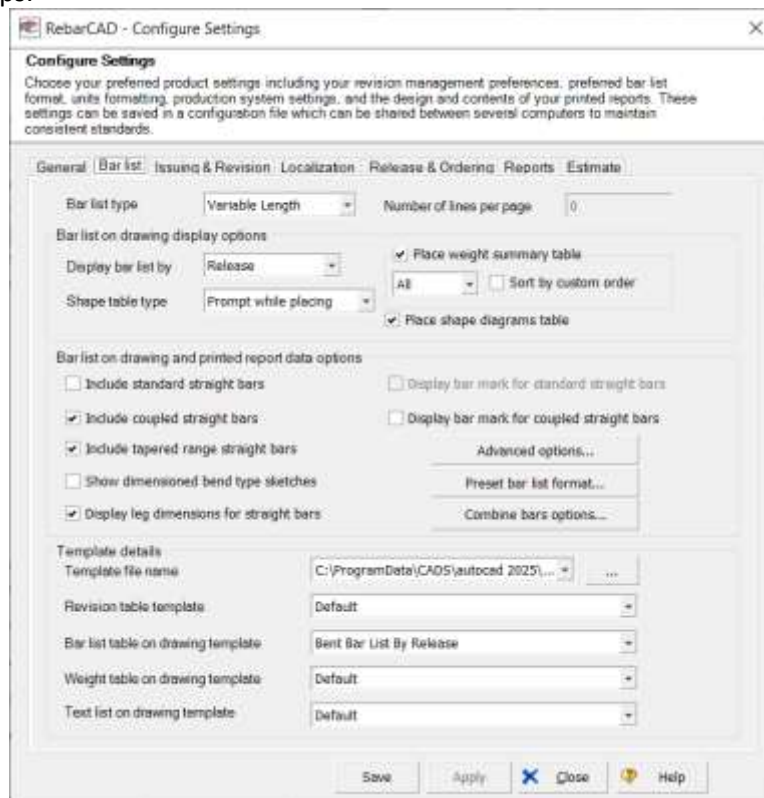


Figure 9.39 Bar List Formatting Configuration Dialog

Number of Lines in Bar List

This defines the number of lines on each Bar List page.

Sort By Diameters On Entering Bar List

When activated, bars will be sorted by bar size in ascending order.

Sort By Shape Categories On Entering Bar List

When activated, bars will be sorted by bend type category.

Do Multi Sort On Entering Bar List

When activated, bars will be sorted by the criteria defined in the Internal Bar List Multi Sort option.

Do Combine On Entering Bar List

When activated, will automatically combine identical bar marks onto a single line of the bar list.

Sort After Combine On Entering Bar List

When activated, bars will be sorted by bar mark if 'Do Combine' above is activated.

Compress Bars On Entering Bar List

When activated, bars will be compacted to remove any blank lines.

10 Utilities

Chapter Objectives

This chapter describes the Utilities section of RebarCAD, which contains Auditing and Bar Matching tools.

The UTILITIES options are to be found off the RebarCAD pull down menu UTILITIES menu bar where there are the following options:

10.1 Auditing

This activates a sub-menu with the following options:

10.1.1 Drawing Audit

Menu Option Utilities -> Auditing -> Drawing Audit

Command Line `cads_rc_audit`

Toolbar



The Drawing Audit command checks the drawing for the following

Incomplete Bar Sets - Bars which have incomplete bending data or bar sets where the number of bars not yet specified will be highlighted. (Bars are highlighted by a change of colour to magenta or by ghosting the entities).

Un-labelled Bar Sets - Bars Sets which have not had their label placed on the drawing will be highlighted. (Bars are highlighted by a change of colour to magenta or by ghosting the entities)

Bar to be Purged from the Bar List - Bars which have had all their views erased will have their bar list entries Purged (erased from the bar list).

10.1.2 Check RC Database

Menu Option Utilities -> Auditing -> Check RC Database

Command Line `cads_rc_audit3`

Toolbar



The Check RC database facility checks every RebarCAD entity on the drawing to see if it is correctly linked to the bar list and if the bar list is correctly linked to it. It also checks the bar list indexes for validity.

When Check RC Database is being run, a percentage complete message is displayed at the top of the dialog to indicate how much checking is left. If it finds any errors while checking, it adds these errors to the scrolling list so that they may be viewed by the user. If any errors are found (see below), then the next operation will be determined by an OK selection or a Cancel selection.

10-1

If OK, then the entities that are not linked to the RebarCAD database are corrected if possible. Any remaining unlinked entities are placed into AutoCAD's 'Previous' selection set. These can be moved off the drawing by typing 'P' for previous selection set when prompted to select objects whilst using the AutoCAD move command.

If Cancel then no highlighting or any corrections are carried out. Any damaged items are put into AutoCAD's 'PREVIOUS' selection set.

When Check RC Database finds an entity which is not linked to the bar list, i.e. it has the relevant data on the entity but the indexes into the bar list are invalid, then this means that the particular entity is definitely lost and must be redrawn. For example, this would occur if RebarCAD was 'killed' before a save or when out of disk space or memory. These entities are known as 'Damaged items'.

When Check RC Database finds an entity which is linked to the bar list correctly but the bar list does not know about it, then the Check Rebar database function will attempt to regenerate the entity using the raw data held within the bar list database. When it does this, it simply adds the entity to the list of view records held within the bar list, thus making it into a new view. Check RC Database can only do this with Bars/Range lines and, if the set is not already labelled, bar labels. These entities are known as 'Non-Linked Rebar entities'.

Prompts

'Bar set <??> already labelled, deleting duplicate' this prompt appears when the Bar Label in question already has a label associated with the set.

'Attempting Repair on non-linked Rebar entity, handle '???' ' this prompt appears when a RebarCAD entity (not a bar label) is linked to the database but the database is not linked to the RebarCAD entity. Repairs can only be carried out on Bars/Bar Labels (if not labelled already) and Range lines. All other RebarCAD entities will not be repaired and require deleting and redrawing.

10.1.3 Match Bars

Menu Option Utilities -> Match Bars

Command Line `cads_rc_audit2`

Toolbar



The Match Bars command searches the drawing for identical bars which are allocated different bar marks. The user is given the option to match bar marks along with the bar mark to retain.

Match Bars can be configured to match straight bars where the difference in bar length is less than or equal to the value entered in 'StraightTolerance' in the Bar > Rounding/Match Bars configuration options. (See also chapter 8 - Enquiry).

10.1.4 Compact Bar Marks

Menu Option Utilities -> Compact Bar Marks

Command Line `cads_rc_compact`

Toolbar



The compact bar marks options re-assigns bar marks so that any gaps found in the bar markings are removed. Using compact bar marks after match bars, ensures that the most efficient use of bar marks is achieved.

10.1.5 Redraw RC Entities

Menu Option Utilities->Redraw RC entity

Command Line cads_rc_redraw

Toolbar



This command is used to force RebarCAD to re-draw the picked items as if newly created.

10.1.6 Sketch Mode

Menu Option Utilities->Sketch Mode

Command Line cads_rc_bset

Toolbar



When Sketch Mode is set to ON, only bar labels are drawn as intelligent RebarCAD entities, all other RebarCAD entities are drawn as normal AutoCAD entities with no link to the bar list database.


11 Bar List and Output Options

Chapter Objectives

This chapter describes the RebarCAD Bar List option, which displays the rebar contents of the current drawing, the Create Partial Take Off option and the available bar list printing / output file options.

The RebarCAD Bar List is a unique feature to RebarCAD in that it is dynamically linked to the rebar information detailed on the AutoCAD drawing. As rebar is added, deleted or edited on the drawing using RebarCAD, the bar list is constantly updated in line with the rebar content of the drawing. This helps to eliminate scheduling errors and improves detailing productivity, as the bar list is produced automatically.

11.1 Bar List Display Overview

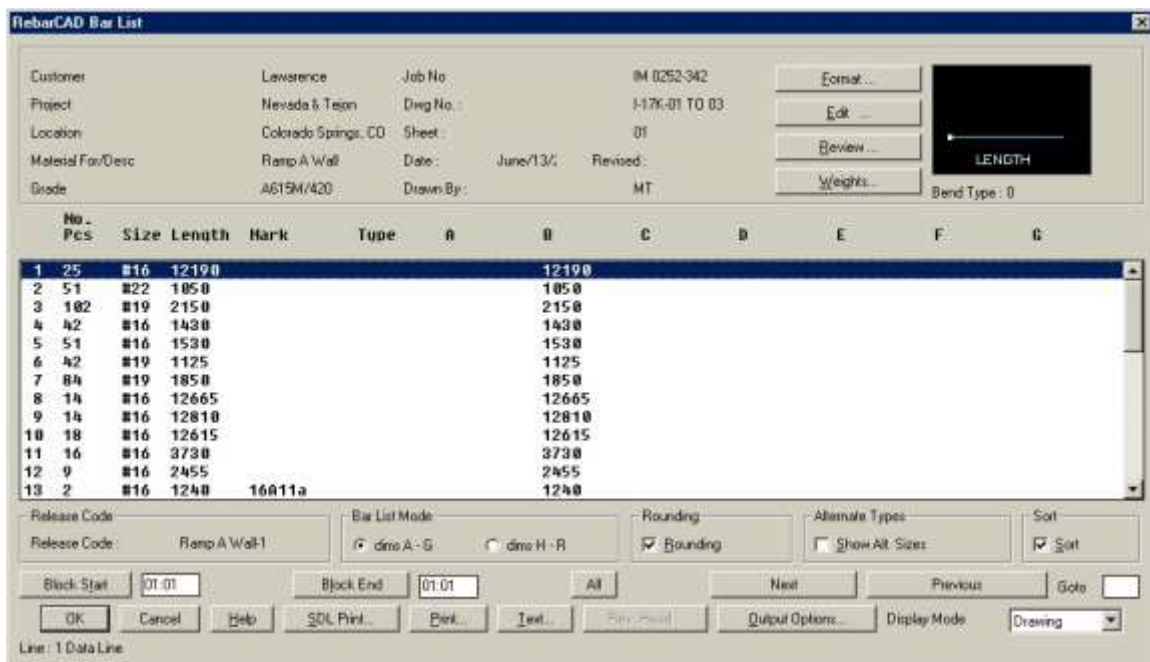

RebarCAD Bar List

Customer: Lawrence Job No: IM 0252-342
 Project: Nevada & Tejon Draw No.: I-17K-01 TO 03
 Location: Colorado Springs, CO Sheet: 01
 Material For/Desc: Ramp A Wall Date: June/13/14 Revised:
 Grade: A615M/420 Drawn By: MT

Buttons: Format..., Edit..., Review..., Weights..., Bend Type: 0

No.	Pos	Size	Length	Mark	Type	A	B	C	D	E	F	G
1	25	#16	12190					12190				
2	51	#22	1050					1050				
3	102	#19	2150					2150				
4	42	#16	1430					1430				
5	51	#16	1530					1530				
6	42	#19	1125					1125				
7	84	#19	1850					1850				
8	14	#16	12665					12665				
9	14	#16	12810					12810				
10	18	#16	12615					12615				
11	16	#16	3730					3730				
12	9	#16	2455					2455				
13	2	#16	1240	16011a				1240				

Release Code: Ramp A Wall-1 Bar List Mode: ☒ dim A - G ☐ dim H - R Rounding: ☒ Rounding Alternate Types: ☐ Show All Sizes Sort: ☒ Sort

Block Start: 01.01 Block End: 01.01 All Next Previous Goto

Buttons: OK, Cancel, Help, SDL Print..., Print..., Text..., Previous, Output Options..., Display Mode: Drawing

Line: 1 Data Line

Figure 12.1 Internal Bar List Display

The Internal Bar List displays and allows access to the following options: -

11.1.1 Sheet

Upon entering the internal bar list, page 01 is displayed as a default. The current page being viewed is displayed in the Sheet field in the header area of the bar list display. If the bar list contains more than one page, then the Next and Previous buttons are available at the bottom of the bar list to enable the user to browse through the bar list. If a particular page is to be viewed,

then the required Page No. can be entered in the Go To field and on pressing Keyboard Return that page will be displayed.

11.1.2 Release Code Field

The Release Code field immediately beneath the rebar content display shows the Release Code to which the currently highlighted data line is allocated.

11.1.3 Site Ref. 1, Site Ref. 2, Date Prep., Prep. By, Date Revised, Revised By, Footnote 1 and Footnote 2.

The above fields display the text entered in their corresponding fields in the Bar List Header Information which is available via the Edit button.

11.1.4 Bar List Mode

To cater for complex special bars where more than 5 dimensions are required, the bar list display can be toggled to show dimensions A - E/R, dimension F - J or the Descriptions applied to the bar list lines.

11.1.5 Dimension Rounding Pick Box

If activated, the bar bending dimensions are shown rounded to the values defined in the bar rounding configuration.

If not activated, the bar bending dimensions shown are as drawn. The precision of the unrounded dimensions if imperial units are in use is to the precision setting defined during the drawing setup routine or those defined in the AutoCAD UNITS setting.

11.1.6 Block Start, Block End & All Buttons

As Bar Sets are added to a drawing they are simultaneously added to the internal bar list. This means that the bar list will require minor formatting, so that entries are grouped correctly before printing or outputting production files. This formatting can be carried out over all or blocks of the bar list. Prior to formatting, the block to be worked on requires selection. Normally, the whole bar list will be formatted and this can be selected by picking the All button at the bottom of the bar list display. If only part of the bar list is to be formatted, then the line at the start of the block is picked to highlight it and then the BLOCK START button selected. The start position will then be confirmed in the field beside. A similar exercise is used to select the BLOCK END.

11.1.7 Format Button

The Format button accesses the Format dialog where the following options are available :-

SORT, MOVE, REPOSITION, COMBINE, COMPACT, USER FORMAT 1 and USER FORMAT 2.

See Chapter 12.2 for a full description of this option.

11.1.8 Edit Button

The Edit button accesses the Edit dialog where the following options are available: -

INSERT, DELETE, HEADER, ATTACH & DETACH.

See Chapter 12.3 for a full description of this option.

11.1.9 Review Button

The Review button accesses the Review dialog where the following options are available: -

ISSUE, VIEW ISSUES, MOVE LINES, BAR LIST STATUS, REVISION CONFIG and UNISSUE.

See Chapter 12.4 for a full description of this option.

11.1.10 Weights Button

The Weights button accesses the Bar Weights dialog where bar weights can be viewed.

See Chapter 12.5 for a full description of this option.

11.1.11 Print Button

The Print button accesses the Print Options dialog where the required output can be selected. This uses an Excel template as a source file and the output will be based on this excel template.

See Chapter 12.6 for a full description of this option.

11.1.12 SDL Print Button

The SDL Print button accesses the Print Options dialog where the required output can be selected. This is based on SDL customisation file.

11.1.13 Text

The text button allows text to be added to the currently highlighted line on the bar list. The line to have text applied must be a soft blank line.

11.1.14 Rev. Head.....

This option is only available on issued bar lists. Picking the Rev. Head button allows the bar list header revision suffix of the currently displayed page to be entered manually.

11.1.15 Output Options

The other output options button accesses the RebarCAD Output options dialog which allows the bar list data to be output in other forms than to a printer.

See Chapter 12.7 for a full description of this option.

11.1.16 Display Mode

Allows the bar list dimensions to be converted from mm to feet/inches and vice versa. Setting to Drawing will display the bar list dimensions in the unit format of the drawing.

11.1.17 OK Button

Exits the bar list and saves any changes made.

11.1.18 Cancel Button

Exits the bar list and forgets any changes made.

11.2 Format Options

11.2.1 Sort Option

This function works on a previously defined block of entries (See Block Start, Block End & All). It can be accessed from the Format Button in the internal bar list. The Sort function has six options.

Bar Mark

The chosen bar marks are arranged in ascending order.

Type + Size

The marked block will be sorted in descending order of bar type and size.

Bend Type

The selected entries are sorted by bend type in numerical ascending order.

Release Code

The entries are grouped by Release Code in the order that the first entries for each Release Code occur in the Release Code list.

Release Code + Type

The entries are grouped by Release Code in the order that the first entries for each Release Code occur in the Release Code list. Each Release Code is then sorted by bar type.

Release Code + Mark

The entries are grouped by Release Code in the order that the first entries for each Release Code occur in the Release Code list. Each Release Code is then sorted by bar mark.

Release Code + Type + Mark

The entries are grouped by Release Code in the order that the first entries for each Release Code occur in the Release Code list. Each Release Code is then sorted by bar type. Each bar type is then sorted by bar mark.

In all cases, the bars are sorted by Release Code first to ensure they are kept together. The Sort Release Code option is provided to allow you to carry out a sort without applying any other conditions. If you wish to arrange Release Codes in a particular order, then you may Sort the entries first then Move them to the required positions. Should you wish to sort the entries regardless of Release Code, then you will need to change all the bar sets on the drawing to one Release Code using the Change Release Code facility from the Editing section.

You cannot sort 'Issued' bar list pages.

11.2.2 Move Option

The Move Option allows you to move a previously defined block of entries (See Block Start, Block End & All) to the current highlighted line in the bar list. The entries are inserted at that position so the current entry and any following ones will be moved down the bar list.

You cannot move entries on 'Issued' bar list pages - see Review Options later in this chapter.

11.2.3 Reposition Option

The Reposition Option allows you to move a previously defined block of entries (See Block Start, Block End & All) to the current highlighted line in the bar list. The entries are inserted at that position so the current entry and any following ones will be moved down the bar list. Reposition, moves the entries completely and does not leave blank lines behind, as does the Move option.

You cannot reposition entries on 'Issued' bar list pages.

11.2.4 Combine Option

The Combine Option will combine all the entries of the same bar mark with the first occurrence of that bar mark in a previously defined block of entries (See Block Start, Block End & All). The number of bars in each combined entry is added to that first one. This function combines and compacts the entries simultaneously. Bars will NOT BE COMBINED if they are allocated to DIFFERENT RELEASE CODES.

You cannot combine 'Issued' bar list pages.

11.2.5 Compact Option

The Compact Option removes blank lines created by deletion or moving entries. All blank lines within the previously defined block of entries (See Block Start, Block End & All) will be removed.

You cannot compact 'Issued' bar list pages.

11.2.6 User Format 1

The User Format 1 option allows a number of typical format options to be performed under one operation. The following formats can be selected: -

- ▶ Compact Bars;
- ▶ Combine Bars;
- ▶ Sort By Type + Release code;
- ▶ Segregate Release Codes - This will force each release code to start on a new bar list page, each bar type used for a particular release code will also start on a new bar list page;
- ▶ Sort By Bend Type Category - Bars will be sorted by straight, bent and link shape categories. 6. Sort By Bar Mark .

11.2.7 User Format 2

Not applicable.

11.3 Edit Options

11.3.1 Insert Option

Left to its own devices, RebarCAD adds bar set details to the bar list on successive lines. This can make reading the bar list difficult, so apart from the Sorting, Combining, and Moving facilities provided there is also one to insert a blank line between entries.

Selecting the Insert Option will force a blank line before the currently highlighted line. The existing entry will then be moved down. If this means that an entry at the bottom of the bar list page will be moved onto the next page, then you are warned that other bar list pages will be changed if you continue.

You cannot insert lines onto 'Issued' bar list pages.

11.3.2 Delete Option

The Delete Option allows you to erase struck-out entries within a previously defined block of entries (See Block Start, Block End & All). It will only delete struck-out entries. Note that struck-out entries cannot be restored to full entries.

You cannot delete lines on 'Issued' bar list pages.


11.3.3 Headers Option

The Headers Option displays the Header field options for the bar list page currently displayed. The Bar List Page No. is displayed at the top of the dialog.

Figure 12.2 Headers Editing Dialog

When the Header option is picked, the header information for the bar list page displayed at that time is shown. The page number is shown at the top of the Header Editing dialog. Data can be entered and a block of pages defined to be updated to the entered data.

The Header data for other pages can be viewed and edited by using the 'Back' and 'Next' buttons to display the required page.

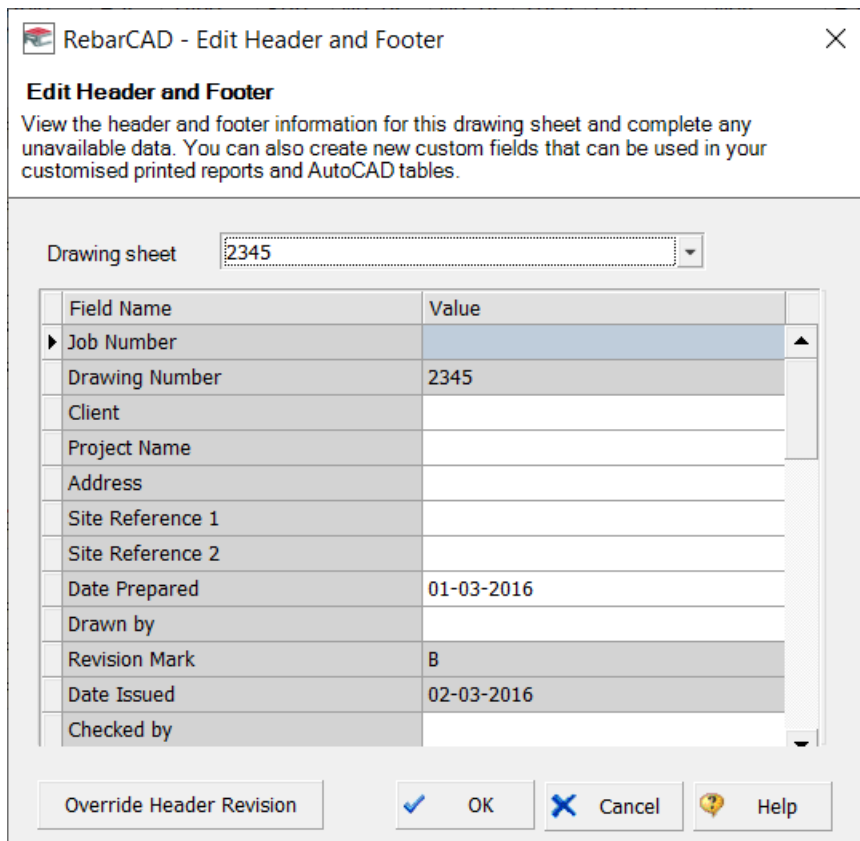


RebarCAD - Edit Header and Footer

Edit Header and Footer
 View the header and footer information for this drawing sheet and complete any unavailable data. You can also create new custom fields that can be used in your customised printed reports and AutoCAD tables.

Drawing sheet: 2345

Field Name	Value
Job Number	
Drawing Number	2345
Client	
Project Name	
Address	
Site Reference 1	
Site Reference 2	
Date Prepared	01-03-2016
Drawn by	
Revision Mark	B
Date Issued	02-03-2016
Checked by	

Override Header Revision ☒ OK ☐ Cancel  Help

User Fields

The user field button accesses a dialog (see Figure 12.3) where 20 additional data fields are available for inclusion on bar list printouts which are produced by customised SDL files. These 20 fields can be positioned anywhere using the SDL file and contain up to 80 characters.

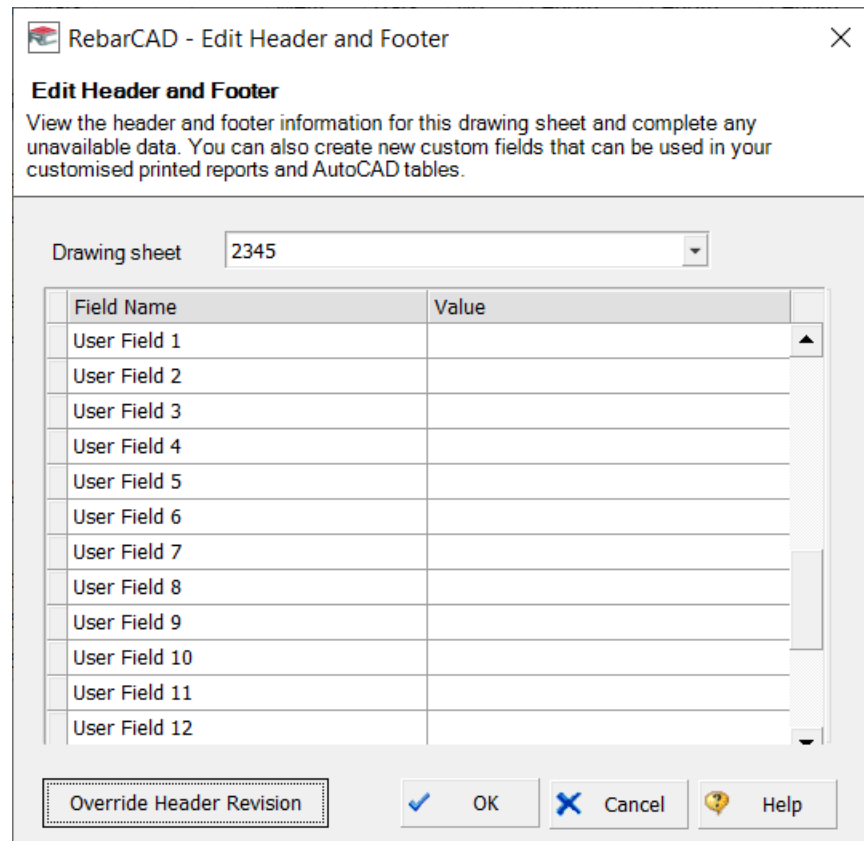


Figure 12.3 User Data Fields Dialog

For example:

User 1 can be incorporated into SDL controlled bar list printouts by adding the following line to the SDL file beneath existing "Field1" entries.

FIELD1, UDATA1, x, y

For further information, contact CADS Support.

11.3.4 Attach Option (Attach slide to special bars or standard bend types)

RebarCAD supports two types of special bars: -

- ▶ Special Bars pre-defined in RebarCAD and selected via the bend type list;
- ▶ Quick Special Bars, where the user controls dimensions while drawing the bar and is free to define the bar as almost any shape. These bars require the user to create the required bar list slide when either drawing the bar or after using the AutoCAD Mslide command. Make sure the slide is saved in the nominated special bar slide folder.

- ▶ The attach option allows diagrams to be attached to special bars (or standard bend types) which will be printed on the bar list printout, whether printed via a external printer or placed on the drawing using the bar list on drawing option.
- ▶
- ▶ Generally, the attaching of diagrams is best done after the bar list has been formatted (sorted, combined etc.), as bar list data has to be moved down the bar list as diagrams are attached. With this in mind, it is best to leave the defining of bar list descriptions until all diagrams have been attached, as descriptions do not move with the bar list data as they are line number specific.
- ▶

There are 5 options for attaching diagrams to special bars: -

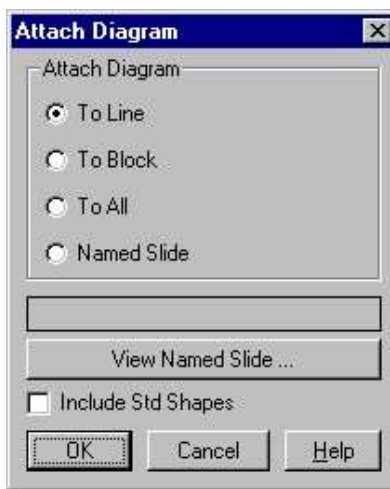


Figure 12.4 Attach Diagram Dialog

To Line

Used to attach a diagram to the line currently highlighted in the bar list.

To Block

Used to attach slides to all standard and Quick special bars within a defined block of bar list data. In order that Quick special bars have automatic slide attachment, they must have a slide name the same as the special bar name defined when drawing the bar. Where a Quick special bar is found and no slide is found, 3 soft blank lines will be placed after the data line.

To All

This is in essence similar to the To Block option but all bar list pages are included.

Named Slide

Used to attach diagrams where the slide name is different to the bend type name. The line to have the named slide attached must be highlighted prior to selecting the Attach option. The

required slide name is entered in the field below (.sld extension is not required). RebarCAD looks for the slide in the following locations: -

- ▶ The current working directory;
- ▶ The ??\CADS-RC\PARAMS directory;
- ▶ The directory defined in the Slide Path option within the RebarCAD Bar List Configuration. The entered slide can be viewed by picking the View Named Slide option.

NOTE - If a diagram is already attached to the line, its name is displayed in the slide name field.

Include Standard Bend Types

When activated slides will also be applied to standard bend types when used in conjunction with the To Block and To All options.

11.3.5 Detach Option (Detach slide from special bars or standard bend types)

The Detach Option allows diagrams to be removed for the bar list. There are 4 options for detaching diagrams from special bars and standard bend types: -

From Line

Used to detach a diagram from the line currently highlighted in the bar list.

From Block

Used to detach diagrams from all lines within a defined block of bar list data. The block must be defined prior to selecting the Detach option.

From All

Used to detach diagrams from all bars over all bar list pages.

Named Slide

Not applicable.

11.4 Review Options

RebarCAD has a bar list revision handling facility which, if required, will mark changes in the bar list with revision letters or numbers. Alterations must be carried out on the drawing, thereby ensuring that the bar list is updated correctly. Bending data cannot be edited on the bar list. It must be edited on the drawing and so update the bar list accordingly.

NOTE - This revision handling facility applies to the bar list only. Revision of the DRAWING TITLE BLOCK is the responsibility of the user.

The Review dialog has 6 options as listed below: -

11.4.1 Issue

The Issue Option is used to set the revision handling facility in motion. Revision handling will not commence until Issue has been used. This allows bars to be deleted while a drawing is being built up without marking them as revisions in the bar list. You are asked for an issue date and this will appear on all headers as Date Prepared. Once issued, any bars deleted on the drawing will be shown struck out in the bar list (indicated as a line with an S to the right of the line) along with a revision letter to the right of the line. Extra bar sets added to the drawing will be placed on a new bar list page.

Formatting of bar list pages is not allowed once Issue has been used.

11.4.2 View Issues

Not available in this version.

11.4.3 Move Lines

If additional bars sets are added to a drawing which has an issued bar list, the new bars are placed on a new bar list page. New bar sets cannot be combined but they can be moved from the new bar list page onto existing pages if space is available in the form of soft blank lines. To move a line of data from a new bar list page onto an existing page, the following procedure should be adopted:

- ▶ Select the line/lines you wish to move onto an existing bar list page by marking them as a block using Block Start and Block End;
- ▶ Highlight the line on the existing bar list page where you want the first line in the marked block of new lines to be positioned;
- ▶ Select Move Lines from the Review options. You will then be asked to confirm the move command. Picking Yes will return you to the Revision dialog, which you should exit via the OK button. The lines will then be placed on the bar list page and marked with the current revision suffix.

11.4.4 Bar List Status

Picking the Bar List Status option will display a list of the bar list pages giving each page's current revision status. The revision status prompts are as follows:

- ▶ First Issue - Indicates that the page is a new bar list page which has not been issued yet;
- ▶ No change - Indicates that the bar list page has had no revisions since the bar list was last issued;
- ▶ Issue as Rev.? - Indicates that the bar list page has been revised since the bar list was last issued.

11.4.5 Revision Config

Accesses the Revision Configuration dialog. See the chapter entitled “Enquiry”.


11.4.6 Unissue

The Unissue Option will remove any revision marks on the bar list and allow the use of the Format Options. There is no 'undo' facility to this command. Once used, all previous revision history is lost. The bar list/drawing is NOT returned to its state as when issued. It simply returns the current bar list to an unissued state.

11.4.7 Line Revision - Manual Control

This option is only available on Issued schedules. Double clicking on a bar list line displays a small dialog where the required revision suffix for that line can be entered manually.

11.5 Weights Option

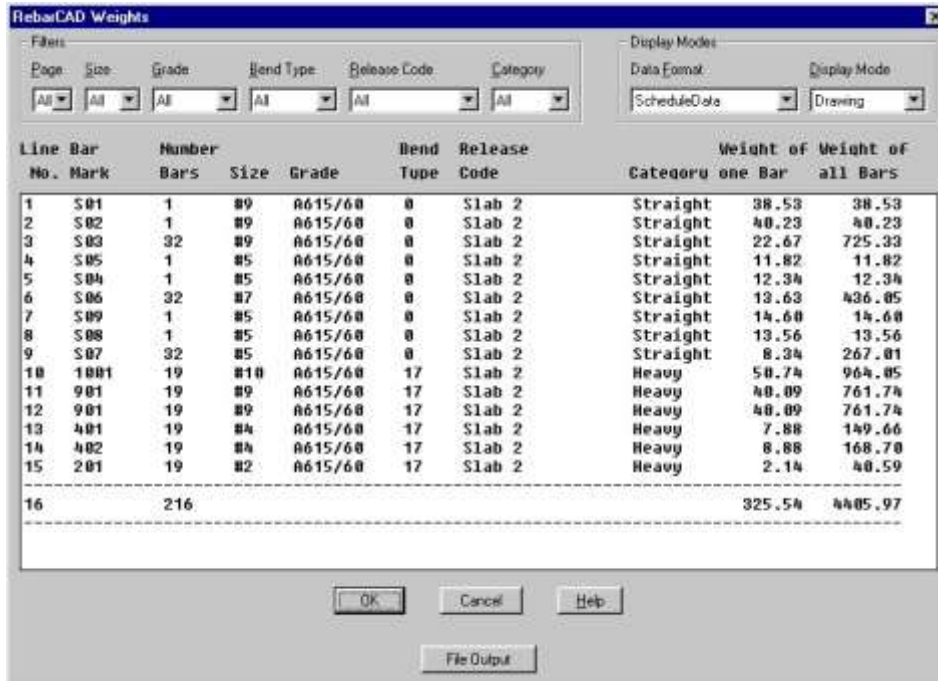


The dialog box shows filters for Page (All), Size (All), Grade (All), Bend Type (All), Release Code (All), and Category (All). The Display Modes are set to Schedule Data and Drawing. The table below shows the weight data for all bars.

Line No.	Bar Mark	Number Bars	Size	Grade	Bend Type	Release Code	Category	Weight of one Bar	Weight of all Bars
1	S01	1	#9	A615/60	0	Slab 2	Straight	38.53	38.53
2	S02	1	#9	A615/60	0	Slab 2	Straight	40.23	40.23
3	S03	32	#9	A615/60	0	Slab 2	Straight	22.67	725.33
4	S05	1	#5	A615/60	0	Slab 2	Straight	11.82	11.82
5	S04	1	#5	A615/60	0	Slab 2	Straight	12.34	12.34
6	S06	32	#7	A615/60	0	Slab 2	Straight	13.63	436.05
7	S09	1	#5	A615/60	0	Slab 2	Straight	14.60	14.60
8	S08	1	#5	A615/60	0	Slab 2	Straight	13.56	13.56
9	S07	32	#5	A615/60	0	Slab 2	Straight	8.34	267.01
10	1001	19	#10	A615/60	17	Slab 2	Heavy	50.74	964.05
11	901	19	#9	A615/60	17	Slab 2	Heavy	40.09	761.74
12	901	19	#9	A615/60	17	Slab 2	Heavy	40.09	761.74
13	401	19	#4	A615/60	17	Slab 2	Heavy	7.88	149.66
14	402	19	#4	A615/60	17	Slab 2	Heavy	8.88	168.70
15	201	19	#2	A615/60	17	Slab 2	Heavy	2.14	40.59
16		216						325.54	4405.97

Figure 12.5 Weights Dialog

The Weights dialog, by default, displays the weight of the bars of each bar list line. However, there are controls along the top of the dialog that allow the user to select the weighting criteria required. i.e. the weighting of Page 1, with Release Code "Slab2", showing 'Heavy' steel only.

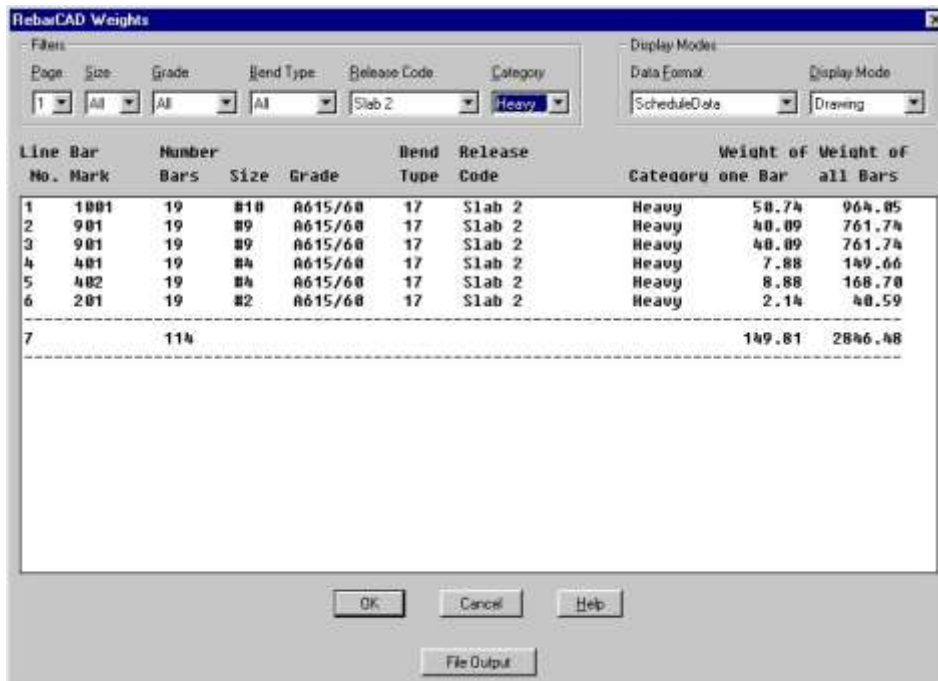

The dialog box shows filters for Page (1), Size (All), Grade (All), Bend Type (All), Release Code (Slab 2), and Category (Heavy). The Display Modes are set to Schedule Data and Drawing. The table below shows the weight data for heavy steel only.

Line No.	Bar Mark	Number Bars	Size	Grade	Bend Type	Release Code	Category	Weight of one Bar	Weight of all Bars
1	1001	19	#10	A615/60	17	Slab 2	Heavy	50.74	964.05
2	901	19	#9	A615/60	17	Slab 2	Heavy	40.09	761.74
3	901	19	#9	A615/60	17	Slab 2	Heavy	40.09	761.74
4	401	19	#4	A615/60	17	Slab 2	Heavy	7.88	149.66
5	402	19	#4	A615/60	17	Slab 2	Heavy	8.88	168.70
6	201	19	#2	A615/60	17	Slab 2	Heavy	2.14	40.59
7		114						149.81	2846.48

Figure 12.6 Weights Dialog with Filters Applied

11.6 Schedule Printout Option

At any stage during the detailing process all or part of the current schedule contents can be output for printing. The schedule will be output to the printer in the order it was when the Print option was selected. If you want the schedule to be in a sorted, combined etc. state you must do this before selecting the Print option.

The RebarCAD Excel print option for schedules is based on an excel template and can be customised easily for any requirement for a defined domain.

To use this print option, the Microsoft Excel program must be installed in the computer. Use “SDL print option “ if Microsoft Excel is not available.

11.6.1 Using the Print Option

Operation

Selecting the print option displays the Print dialog as shown.

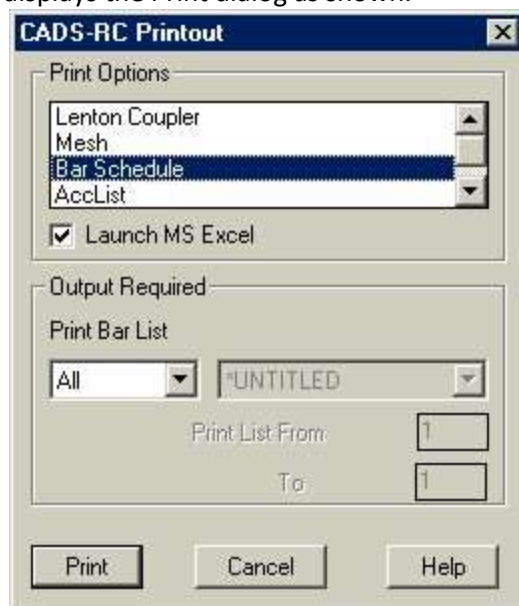


Figure 12.7 CADS-RebarCAD Print Option dialog

This has the following key inputs.

Templates

The following templates are supplied with the installation and are listed in the print option list box.

- | | | |
|----------------|---|--|
| Bar schedule | - | Bar list including attached diagrams with coupler information. |
| Mesh | - | Mesh list of mesh fabric inserted using Mesh option from RcToolbox |
| Lenton coupler | - | Filtered list of Lenton couplers alone |
| Accessory list | - | List of all accessories present in the drawing |
| Coupler list | - | List of all Couplers present in the drawing |

Select the appropriate template from the list.

Launching Excel / Printing the Schedule

Checking the check box "Launch MS Excel" launches the excel if the print option is selected.

If this is "Off", the program will send the information to the current printer.

11.7 Bar List Printout Option Using SDL file

At any stage during the detailing process, all or part of the current bar list contents can be output for printing. The bar list will be output to the printer in the order it was when the Print option was selected. If you want the bar list to be in a sorted, combined etc. state, you must do this before selecting the Print option.

To output bar list data to a printer, select the Print option from inside the internal bar list display.

Upon selecting the Print button, the RebarCAD Printout dialog is displayed. In this, the printout layout can be defined via the SDL File option and the output contents selected via the Output Required option.

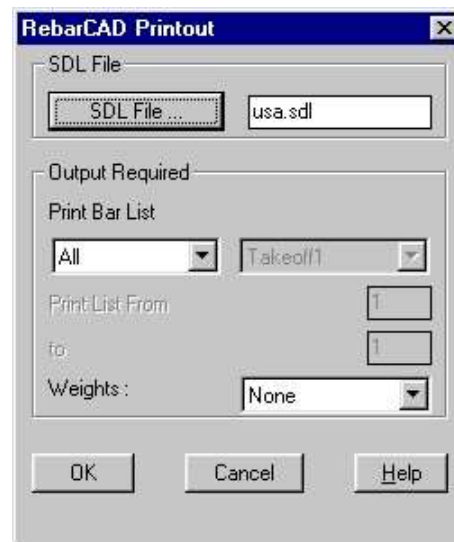


Figure 12.8 Bar List Printout options

11.7.1 SDL File option

The SDL File option controls the printed page layout of the bar list. RebarCAD is supplied with 6 *.sdl files, namely usa.sdl which is used when printing the full bar list. Wdefault.sdl is used when printing bar list weight reports.

The required SDL file can be selected for use by picking the SDL File button. This activates a standard AutoCAD file selection dialog where the available .sdl files are displayed. The required file can then be selected in the normal AutoCAD fashion. SDL files can be stored on any accessible drive or directory available to AutoCAD.

Customised .sdl files can be created to provide printed bar list layouts to specific client requirements. For more information on this service, please contact CADS Technical Support Department who will be pleased to provide the relevant information.

11.7.2 Output Required option

RebarCAD allows the following bar list output options:

- ▶ All;
- ▶ Selected;
- ▶ Take Off.

which are selected from the Print Bar list pop down list.

All

Selecting the All option in the Print Bar list pop down list will output the entire bar list (all release codes) contents for printing.

Selected

Selecting the Selected option from the Print Bar List pop down list activates the 'Print List From' and 'to' fields where you may select a block of bar list pages for printing by entering the first page number and last page number in the relevant fields.

Take Off

Selecting the Take Off option from the Print Bar list pop down list allows the scheduling for a previously defined Partial Take Off to be output to the printer. When Take Off is selected, the pop down list beside it is activated. You may then select the required Partial Take Off release code you wish to output to the printer.

When you have selected the required SDL File and output, whether it be All, Selected or Take Off, to continue the print procedure, pick the OK button. Your operating system Print Setup is then activated so that you may select your preferred printer etc.

11.7.3 Weights

When set to None, the Bar list is printed. When set to Schedule, the Bar Weights are output. In order to output bar weights in the correct format, the sdl file option must be set to wdefault.sdl.

11.8 Output Options

Selecting Output from inside the internal bar list display displays the RebarCAD Output Options dialog.

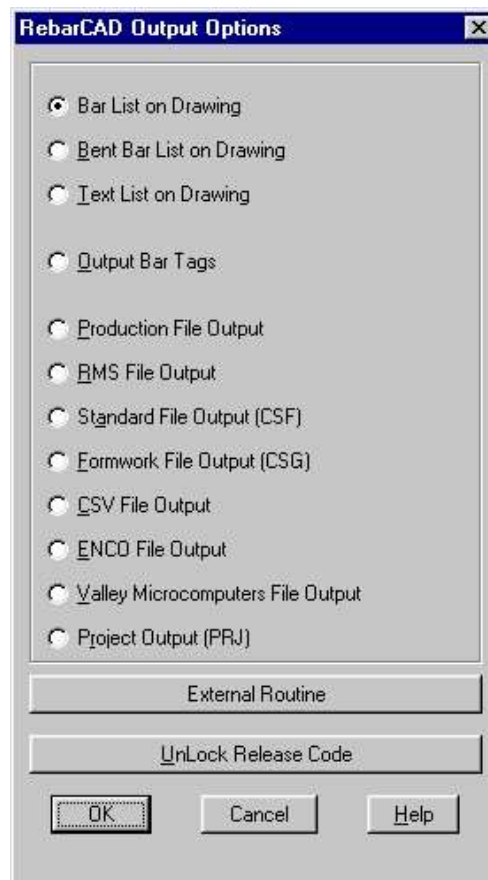


Figure 12.9 RebarCAD Output options dialog

11.8.1 Bar List on Drawing

The Bar List on Drawing option creates wblocks of each bar list page for a particular release code for placement on the drawing. If the Bar List has been previously placed on the drawing, you are asked if you wish to replace the existing bar list. On completion of the placement of all the bar list pages, you have the option to place bend diagrams on the drawing of the bend types included on the bar list.

The bar list will be output to the drawing in the order it was when the Bar List on Drawing option was selected. If you want the bar list to be in a sorted, combined etc. state, you must do this before selecting the Bar List on Drawing option.

11.8.2 Bent Bar List on Drawing

The Bent Bar List on Drawing option creates wblocks of each bar list page for a particular release code for placement on the drawing, straight bars will not be shown. If the Bent Bar List has been previously placed on the drawing, you are asked if you wish to replace the existing bent bar list.

On completion of the placement of all the bent bar list pages, you have the option to place bend diagrams on the drawing of the bend types included on the bar list.

The bent bar list will be output to the drawing in the order it was when the Bent Bar List on Drawing option was selected. If you want the bar list to be in a sorted, combined etc. state, you must do this before selecting the Bar List on Drawing option.

11.8.3 Text List on Drawing

Places a text list of all the used bar marks on the drawing.

11.8.4 Output Bar Tags

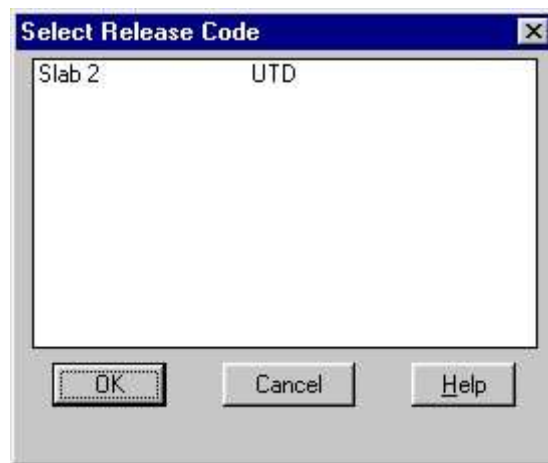


Figure 12.10 Select Release Code for Bar Tags Output



Figure 12.11 Tagging Options Dialog

11.8.5 Standard File Output (CSF)

Standard CADS output file format for linking to CADS Bar List or user spreadsheet applications. For more information about how to implement these options, please contact CADS (UK) Technical Support Department.

A number of US production systems support this format. These include Soule Teleprocessing and Shear 97 production software.

11.8.6 Formwork File Output (CSG)


Customised CSF file output. For more information about how to implement these options, please contact CADS (UK) Technical Support Department.

11.8.7 Links to Production Software

RebarCAD is capable of supporting a number of output file formats that allow users to integrate it with their production software applications. For more information about how to implement these options, please contact CADS (UK) Technical Support Department.

RebarCAD aSa Interface

The RebarCAD Production File Output interface is designed to download the Bar Bending, Project Manager and Bar List Header information from RebarCAD to the aSa production software.



The dialog box is titled "RebarCAD Production File Output". It contains several sections:

- Control Code Selection:** A dropdown menu labeled "Highlight required Control Code :" with "UT3" selected.
- Job Information:**
 - Job No: "WoC2000", Job Name: "World of Concrete Ex"
 - Customer: "Accu-Bar"
 - Dwg No: "Channel", Desc: "Takeoff3"
 - By: "DV", Reference: (empty)
 - Rel: (empty), SAC Code: (empty), Recut: (dropdown arrow)
- Limits:**
 - Straight Bundle Weight: "0", Bent Bundle Weight: "0"
- File Details:**
 - File Path: "C:\My Documents\asa sa", with a "Browse ..." button.
 - File Extension: "DV"

At the bottom are three buttons: "OK", "Cancel", and "Help".

Figure 12.12 aSa Production File Output Dialog

In order to use the RebarCAD aSa Production File Output, select Production File Output from the RebarCAD Output options inside the Bar List.

If you have purchased the RebarCAD Project Manager software, the Project Information is automatically carried through as the default information to the Bar List Header and then on to the aSa header / input dialog box.

However, if RebarCAD Manager has not been purchased the user can add

Project Information into the header / footer dialog box for the first page of the Bar List. This information will then be used for the aSa header / input defaults.

All the default information from either the Project Manager or the Bar List Header can be altered inside the aSa header / input dialog box.

The Control Code is used as the primary ordering control in the aSa Interface. Users can input up to 30 characters in this field and this is used as the aSa default description.

The Default Data that is transferred through to the aSa Production File Output is;

Job No and Job Name

Customer

Dwg No

By

The Desc is RebarCAD's Release Code that, as stated earlier has been enhanced to permit 30 characters.

The user is expected to enter the Rel, SAC Code, Recut, Straight and Bent Bundle Weight Values.

Ordinarily, the file details will be defined by the configuration and no user input is normally required.

11.8.8 Unlock Release Code


This option overrides the lock out when the release code has been 'taken off' the drawing.

11.8.9 External Routines

Output to a number of Production systems are now written for RebarCAD as external dll files. These can be selected from this option.

Pinnacle Data Systems.

This Interface supports production software supplied by Pinnacle Data Systems In order to use this format, select pinnacle.dll from the list.

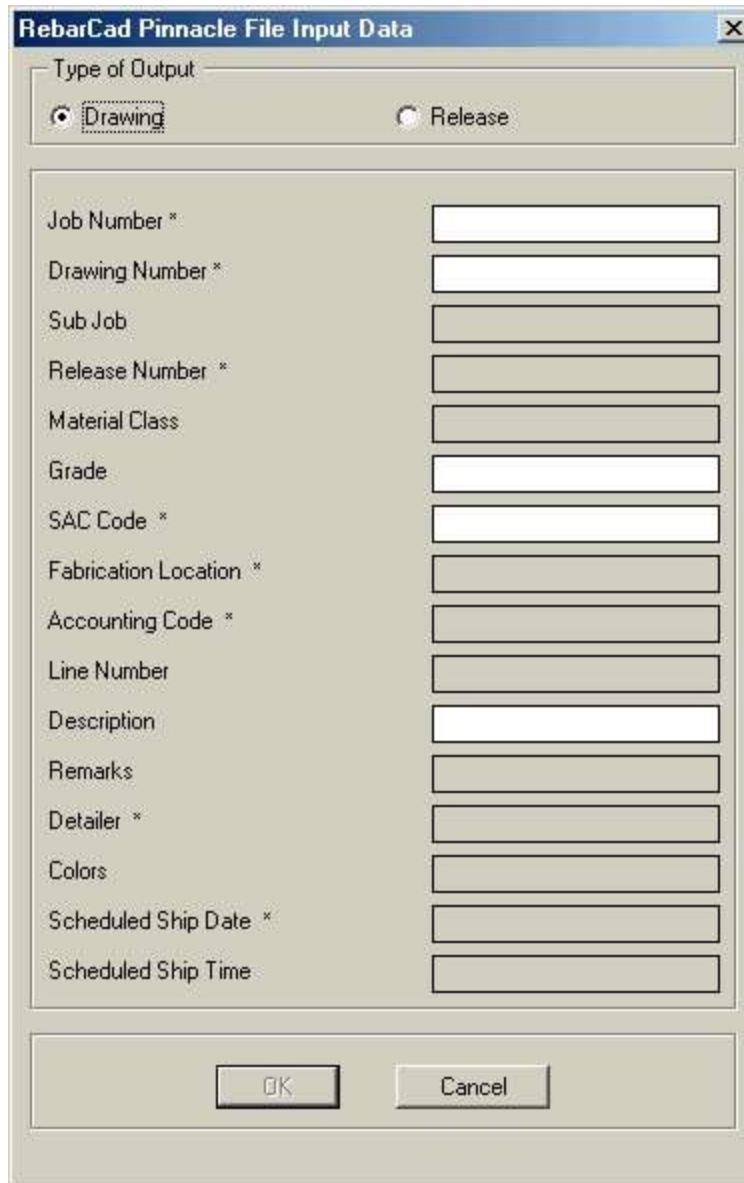

The dialog box is titled "RebarCad Pinnacle File Input Data". It features a "Type of Output" section at the top with two radio buttons: "Drawing" (selected) and "Release". Below this is a list of input fields, each with a label and an asterisk indicating it is required, except for "Sub Job", "Material Class", "Line Number", "Description", "Remarks", and "Colors". The fields are: Job Number *, Drawing Number *, Sub Job, Release Number *, Material Class, Grade, SAC Code *, Fabrication Location *, Accounting Code *, Line Number, Description, Remarks, Detailer *, Colors, Scheduled Ship Date *, and Scheduled Ship Time. At the bottom are "OK" and "Cancel" buttons.

Figure 12.13 Pinnacle Production File Output Dialog

RebarCAD will output a file type. pin which should be written to a location that the Pinnacle system knows as a download area. Please contact your Pinnacle vendor direct for download location and default data information.

SteelPAC Systems

This Interface supports SteelPAC production software supplied by Pac Technologies. In order to use this format, select Steelpac.dll from the list.

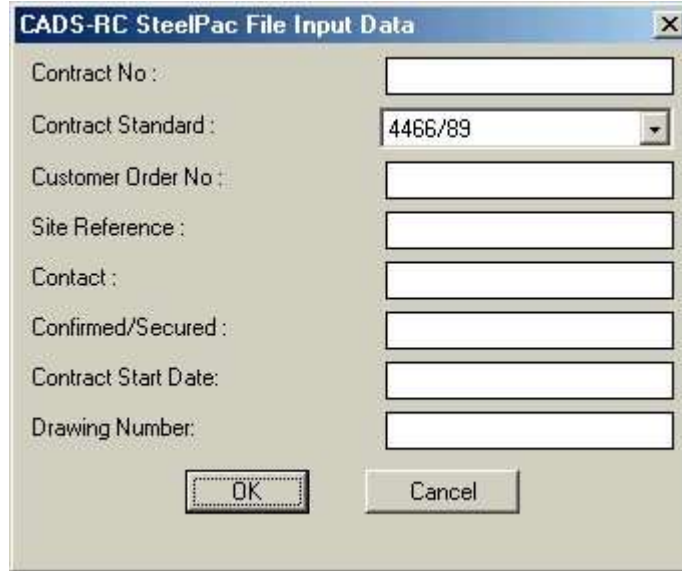
A screenshot of a Windows-style dialog box titled "CADS-RC SteelPac File Input Data". The dialog box has a blue title bar with a close button (X) in the top right corner. The main area is light gray and contains several input fields with labels to their left: "Contract No :", "Contract Standard :", "Customer Order No :", "Site Reference :", "Contact :", "Confirmed/Secured :", "Contract Start Date:", and "Drawing Number:". The "Contract Standard" field is a dropdown menu currently showing "4466/89". At the bottom of the dialog box, there are two buttons: "OK" and "Cancel".

Figure 12.14 Pinnacle Production File Output Dialog

RebarCAD will output a file type. sdi which should be written to a location that the Steelpac system knows as a download area. Please contact your Steelpac vendor directly for download location and default data information.

12 Special Bars

Chapter Objectives

This chapter describes the Special Bar options within RebarCAD.

12.1 Overview


RebarCAD provides 2 special bar options.

- ▶ Over 30 predefined special bars are supplied in addition to the standard bend types. The special bars supplied with RebarCAD are available for selection from the standard bend type list and have the same detailing and editing functionality as the standard bend types;
- ▶ Quick 99 option which allows the user to create special bars by drawing the required shape on the drawing. The user can define the length calculation required and create a fully dimensioned shape slide for inclusion on the bar list printout.

Note: Rctoolbox Macros include “Special Bar” macro which makes the process of creating Special Bars easier.

12.2 Quick Special Bar Option

The Quick Special Bar option is available for use in the bar drawing dialog. Bend types created by the Quick Special Bar option can be saved to a specials.spl file for use on subsequent drawings. They are saved only on the drawing as required. An input field has been provided beside the Bend Type List where the user may enter the Special Bars bend type name’ (e.g. 99C01) required as shown in Figure 13.1.

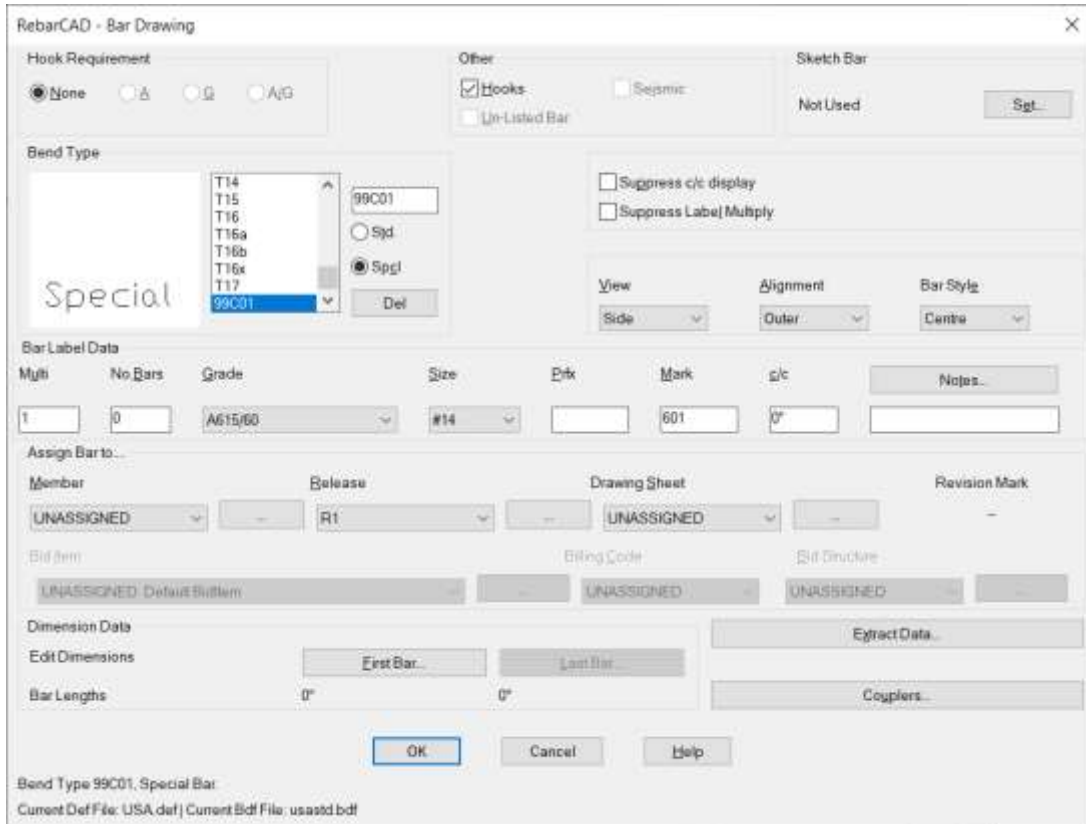


The dialog box is titled "RebarCAD - Bar Drawing". It contains several sections:

- Hook Requirement:** Radio buttons for None, A, Q, and A/G. "None" is selected.
- Other:** Checkboxes for Hooks (checked), Seismic, and Un-Listed Bar.
- Sketch Bar:** A button labeled "Not Used" and a "Sgt..." button.
- Bend Type:** A list box showing T14, T15, T16, T16a, T16b, T17, and 99C01. "99C01" is selected. To the right is a text field containing "99C01" and a "Def" button.
- Special:** A text field containing the word "Special".
- Suppress c/c display** and **Suppress Label Multiply** checkboxes.
- View:** A dropdown menu set to "Side".
- Alignment:** A dropdown menu set to "Outer".
- Bar Style:** A dropdown menu set to "Centre".
- Bar Label Data:** Fields for Multi (1), No Bars (0), Grade (A615/60), Size (#14), Etc (), Mark (601), c/c (0), and a Notes... button.
- Assign Bar to:**
 - Member:** A dropdown menu set to "UNASSIGNED".
 - Release:** A dropdown menu set to "R1".
 - Drawing Sheet:** A dropdown menu set to "UNASSIGNED".
 - Revision Mark:** A dropdown menu set to "-".
- Bid Item:** A dropdown menu set to "UNASSIGNED: Default Bid Item".
- Billing Code:** A dropdown menu set to "UNASSIGNED".
- Bid Structure:** A dropdown menu set to "UNASSIGNED".
- Dimension Data:**
 - Edit Dimensions:** Buttons for "First Bar..." and "Last Bar...".
 - Bar Lengths:** Two text fields, both set to "0".
 - Buttons:** "Extract Data..." and "Couplers...".
- Buttons:** "OK", "Cancel", and "Help" at the bottom.
- Status Bar:** Text at the bottom left reads "Bend Type 99C01, Special Bar" and "Current Def File: USA.def | Current Bdf File: usaadd.bdf".

Figure 13.1 Bar Drawing dialog

Picking on the 99 check box below will prompt if a special bend with this 'bend type name' is to be created. If Yes is chosen, then the bend type name is added to the bend type list.

The required Dimensions etc. for this bend type can then be defined in the Dimensions dialog. This dialog, as shown in Figure 13.2, is different to that shown for standard bend types.

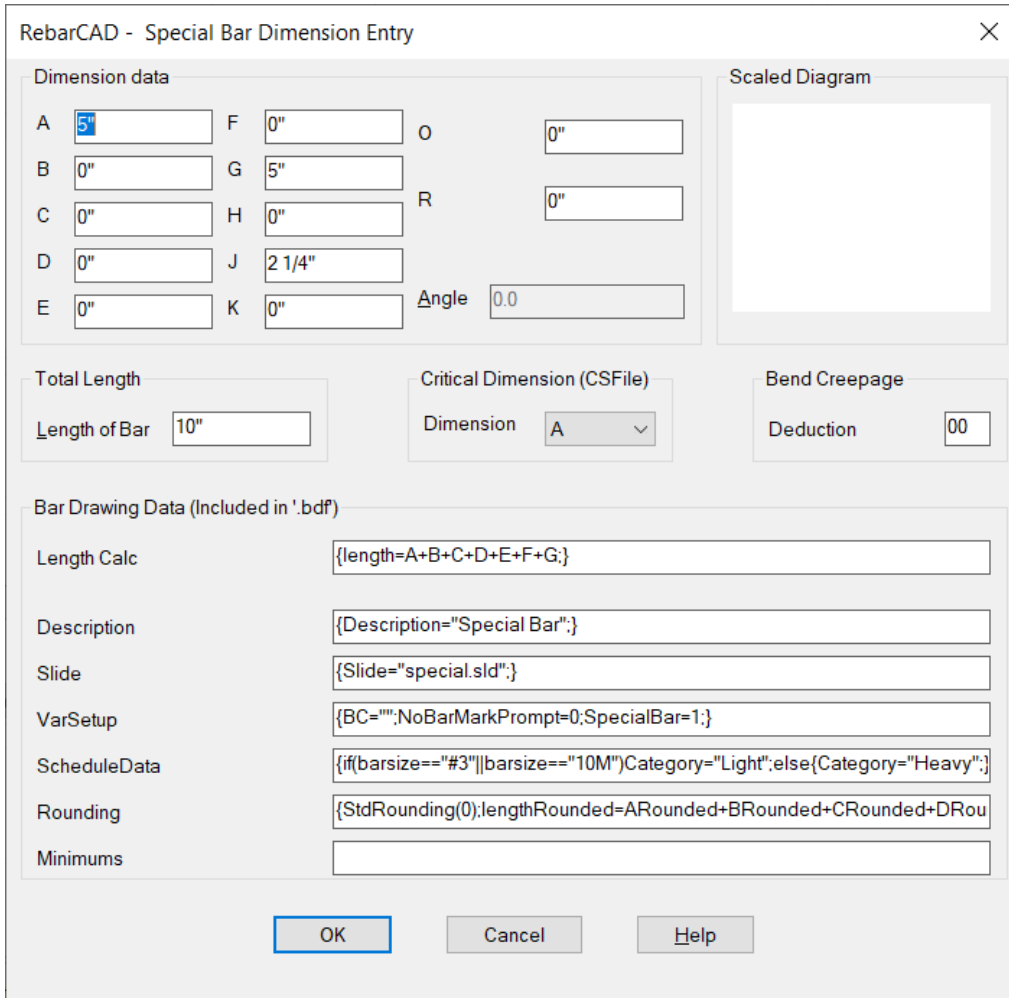

RebarCAD - Special Bar Dimension Entry

Dimension data

A	5"	F	0"	O	0"
B	0"	G	5"	R	0"
C	0"	H	0"		
D	0"	J	2 1/4"		
E	0"	K	0"	Angle	0.0

Scaled Diagram

Total Length

Length of Bar: 10"

Critical Dimension (CSFile)

Dimension: A

Bend Creepage

Deduction: 00

Bar Drawing Data (Included in '.bdf')

Length Calc: {length=A+B+C+D+E+F+G;}

Description: {Description="Special Bar";}

Slide: {Slide="special.sld";}

VarSetup: {BC="";NoBarMarkPrompt=0;SpecialBar=1;}

ScheduleData: {if(barsize=="#3"||barsize=="10M")Category="Light";else{Category="Heavy";}}

Rounding: {StdRounding(0);lengthRounded=ARounded+BRounded+CRounded+DRou}

Minimums:

OK Cancel Help

Figure 13.2 Special Bar Dimensions dialog

The options available in the Special Bend Type 'Dimensions' dialog are as follows: -

Dimension Data - All dimensions A through to J are available for use. The length of bar required is calculated from the length calculation defined below, but can be edited to any value. If the length is edited to a value different to that calculated and the bar is edited later using Edit Bar / Label, the length will be re-set to its calculated value.

Length Calc

The default length calculation 'A+B+C+D+E+F+G' but can be edited by the user to add or remove dimensions, include fixed values (+ ½ ", - 25 etc.), or any valid expression such as (-2*barrad), (-4*bardia).

Description

This is printed at the bottom of the Bar Drawing and Bar Editing dialogs when the bend type is selected.

Slide

This is the AutoCAD slide name which is displayed when the bend type is selected. If a slide is created during the bar drawing process then that slide will be used in preference.

VarSetup

Contact CADS Technical Support Department for more information on this option.

ScheduleData

Contact CADS Technical Support Department for more information on this option.

Rounding

Contact CADS Technical Support Department for more information on this option.

Minimums

Contact CADS Technical Support Department for more information on this option.

The Quick Special Bar option only calculates bar leg dimensions automatically (Figure 13.3 dimensions B, C and D). Bend crank dimensions, such as dimension E on the example shown in Figure 13.3 below, must be entered manually.

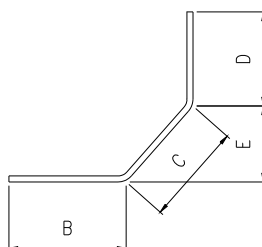


Figure 13.3 Example Special Bar

If it is intended to use the automatic slide creation option within Quick Special Bar, to ensure that any bend crank dimensions (Figure 13.3 dimension E) or overall bar dimensions are included in the slide, they must be flagged as being in use by entering an arbitrary value in the relevant 'bar data -> First Bar' dimensions field prior to exiting the bar drawing dialog and drawing the bend type.

12.3 Quick Special Bar Example

This section is a step by step guide to creating the Special Bar shown in Figure 13.3 with a bend type name of 99C01. As Quick special bars can be quite complicated, RebarCAD does not allow Outer or Inner faces to be defined when drawing the bar. The centre line of the bar must always

be defined. There is also no support for left, right or plan views. These views are achieved by using the sketch bar option.

To ensure that any slide created is clear, it is best to create the bend type off the drawing sheet so that only the bar shape and dimensions are included in the slide. Once created, the bar can be deleted but it remains available for selection in the bend type list where it can be used to detail the actual bar required.

The procedure is as follows: -

Select the RebarCAD command Draw Bar -> New Mark.

In the Bar Drawing dialog, enter 99C01 in the input field adjacent to the bend type list and pick the 99 radio button below. If a bend type with that bend type name exists, it will be selected for use, otherwise you are asked to confirm that you wish to create a special bar with that bend name. Selecting Yes will create the special bar in the bend type list.

As the special bar we are creating has a crank dimension, we will flag this dimension as used by picking the First Bar dimension data button.

The Special Bar Dimensions dialog is displayed as shown in Figure 13.2. Enter an arbitrary value for dimension E (e.g. 4"), we can also define the required length calculation (e.g. {length=B+C+D;}) and Rounding (e.g. StdRounding(0);lengthRounded=BRounded+CRounded+DRounded; StdRounding(1);}).

Exit the dimensions dialog via the OK button.

Exiting the bar drawing dialog via the OK button will prompt 'Do you want to be able to draw 99C01' - Select Yes. A further prompt 'Do you want to create a slide for 99C01' is displayed - Select Yes.

The command line will prompt

Allow individual dimension selection <No> :

If you enter No to this prompt, then RebarCAD will allocate each bar leg drawn the next dimension suffix automatically. In the above special bar, we need to control the allocation of dimension suffixes as we wish to specify the crank height as E and the leg dimensions as B, C and D. We will therefore enter YES to the Allow individual dimension selection <No> : prompt.

You will then be prompted:

Centre start point: which can be selected in any AutoCAD manner.

You will then be prompted:

Enter next dimension or ENTER to quit <A>:

as the first leg we are going to specify is dimension B, enter B at the command line.

You will then be prompted:

Enter next dimension or ENTER to quit :

Enter @2'<0 to draw leg B 2' to the right.

You will then be prompted:

Enter next dimension or ENTER to quit <A>:

as the second leg we are going to specify is dimension C, enter C at the command line.

You will then be prompted:

Enter next dimension or ENTER to quit <C>:

Enter @1'-6" <45 to draw leg C 1'-6" at an angle of 45 degrees.

You will then be prompted:

Enter next dimension or ENTER to quit <A>:

as the third leg we are going to specify is dimension D, enter D at the command line.

You will then be prompted:

Enter next dimension or ENTER to quit <D>:

Enter @3'<90 to draw leg D 3' at an angle of 90 degrees.

You will then be prompted:

Enter next dimension or ENTER to quit <A>:

As leg D is the last on the bar press Enter to complete the bar drawing process.

You will then be prompted:

Pick first corner of zoom window:

You are now asked to define a zoom window which will be used to determine the slide area. With this in mind, pick a zoom window which allows for the placement of dimensions etc. When the zoom window has been defined, you will be prompted:

Place text for dimension B:

Pick the lower left insertion point for the dimension B.

You will then be prompted:

Place text for dimension C:

Pick the lower left insertion point for the dimension C.

You will then be prompted:

Place text for dimension D:

Pick the lower left insertion point for the dimension D.

You will then be prompted:

Place text for dimension E:

Pick the lower left insertion point for the dimension E.

You will then be prompted:

Draw line(s) by picking start point <Escape>:

You may now draw any lines to indicate the dimension points. On completion of drawing any lines required, press Enter to finish.

You are then presented with a standard file selection dialog defaulted to the ??\CADS-RC\PARAMS folder. Enter in the Filename\Pattern field the slide name for use on the bar list. Enter 99C01 (placing the bar list in the default directory with a name the same as the bend name will ensure the slide is automatically attached by the attach diagram option).

The slide is then created and you are prompted to label the bar as required.

All that remains is to determine the actual value of any crank/offset dims and enter the required dimension using bar/label edit.

New sets or marks of bend type 99C02 can now be created as the bend type is available from the bend type list.

NOTE - Only side views using centre alignment can be drawn. Any left, right or plan views required must be created using the sketch bar option or AutoCAD lines.

13 Couplers

Chapter Objectives

This chapter describes the scope and use of the RebarCAD ERICO Lenton, MSP MacAlloy 500 and Annotate Coupler library facilities.

13.1 Overview of the RebarCAD coupler facility

The RebarCAD coupler facility allows bars with couplers or coupler threads to be easily detailed and added to the bar list in a logical manner. To enable coupler data to be controlled, some basic rules have been incorporated into the RebarCAD coupler facility.

- ▶ Couplers can be applied to any bend type (including standard and Quick special bars) which have one or two free legs. Couplers cannot be applied to closed stirrups i.e. bend types T1 and bend type X etc (Coil bar);
- ▶ Any bar which has a coupler applied to it using the RebarCAD coupler facility will be scheduled as a bend type 99. All bending dimensions will be printed in the bar list, including those that make up standard bobs or hooks;
- ▶ Bar List diagrams are available for all bend types with up to 5 bending dimensions which can have couplers attached. Quick special bars which have couplers or coupler threads do not have supplied diagrams, the required slide must be created by the user;
- ▶ Bars which have all couplers removed using the RebarCAD coupler facility will revert back to their standard bend type in the bar list;
- ▶ No additions are made to the bar length or leg length in the bar list.

13.2 RebarCAD coupler facility commands

The RebarCAD coupler facility has 7 command options which are listed below:

- ▶ Add/Edit Coupler - Available from the Coupler sub-menu;
- ▶ Add Symbols/Labels - Available from the Coupler sub-menu;
- ▶ Couple Bars - Available from the Coupler sub-menu;
- ▶ Couple to Face - Available from the Coupler sub-menu;
- ▶ Connect to Coupler - Available from the Coupler sub-menu;
- ▶ Lenton P13 Cage Cplr - Available from the Coupler sub-menu;
- ▶ Lenton P13/P15 Closer - Available from the Coupler sub-menu.

13.2.1 Add/Edit Coupler

Menu Option Couplers->Add/Edit Coupler


Command Line cads_rc_coupler

Toolbar



The Add/Edit Coupler command is selected from the Coupler sub-menu and is used for adding, editing or removing couplers and threads from individual bars via the RebarCAD Coupler dialog (Figure 14.1).

NOTE - The Add/Edit Coupler command adjusts the leg dimension based on selected End conditions wherever applicable.

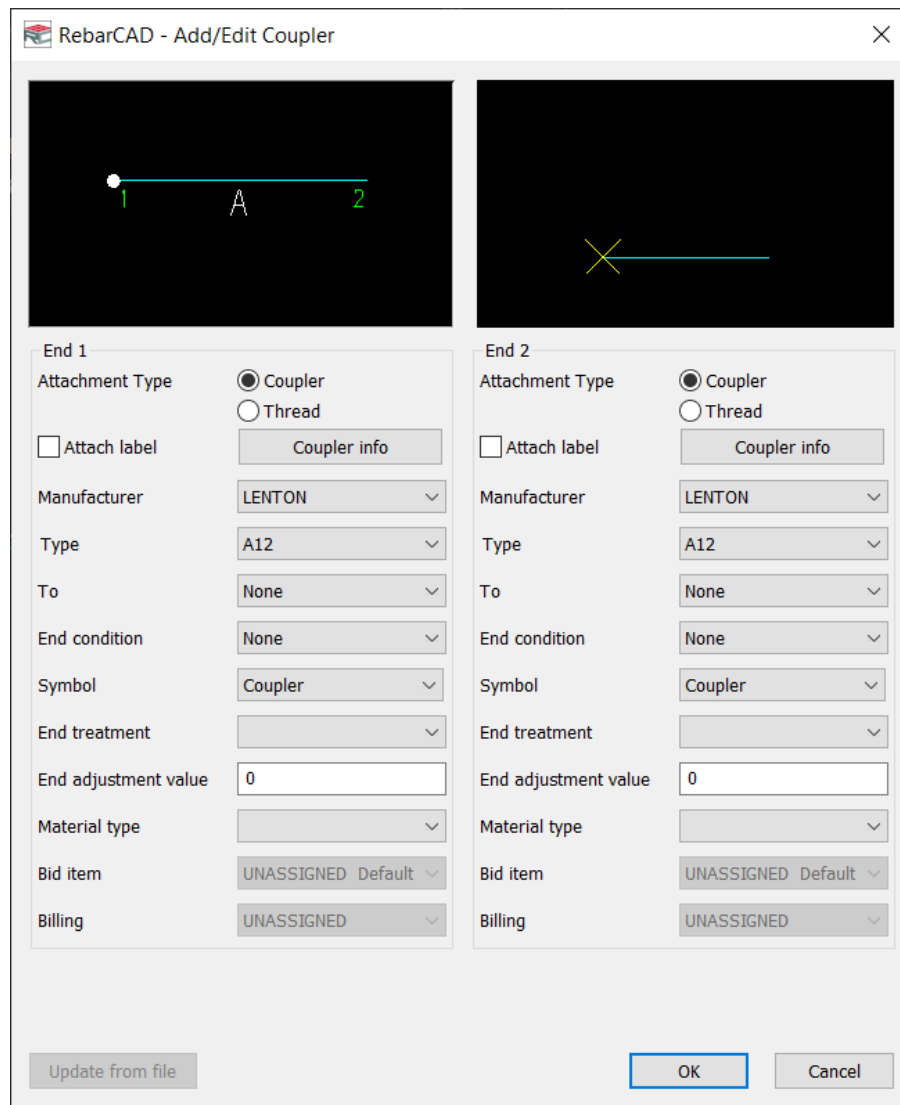

The dialog box is titled "RebarCAD - Add/Edit Coupler" and features a close button (X) in the top right corner. It is divided into two main sections for "End 1" and "End 2". Each section contains a preview window at the top and a configuration panel below. The "End 1" preview shows a horizontal line with a white dot at the left end, labeled "1" and "A", and "2" at the right end. The "End 2" preview shows a horizontal line with a yellow 'X' at the left end. The configuration panels for both ends are identical, with the following fields:

- Attachment Type:** Radio buttons for "Coupler" (selected) and "Thread".
- Attach label:** A checkbox (unchecked).
- Coupler info:** A button.
- Manufacturer:** A dropdown menu with "LENTON" selected.
- Type:** A dropdown menu with "A12" selected.
- To:** A dropdown menu with "None" selected.
- End condition:** A dropdown menu with "None" selected.
- Symbol:** A dropdown menu with "Coupler" selected.
- End treatment:** A dropdown menu.
- End adjustment value:** A text input field with "0" entered.
- Material type:** A dropdown menu.
- Bid item:** A dropdown menu with "UNASSIGNED Default" selected.
- Billing:** A dropdown menu with "UNASSIGNED" selected.

At the bottom of the dialog, there is an "Update from file" button on the left, and "OK" and "Cancel" buttons on the right.

Figure 14.1 RebarCAD Coupler dialog

The RebarCAD Coupler dialog contains 2 slides. The left-hand slide displays the bend type used to create the bar picked (along with the bar diameter) whilst the right-hand slide displays a scaled diagram of the actual view picked. The scaled diagram includes a red cross on one bar leg. This red cross toggles between bar legs when the 'Coupler or thread' option is selected for that bar leg. This allows the user to see which bar leg will be affected on the drawing.

The options available within the RebarCAD Coupler dialog are applicable to each free leg which can be coupled/threaded and are as follows:

Manufacturer

The Manufacturer option controls the coupler types available from the Coupler Type option. The required coupler manufacturer can be set for each bar leg/end. This makes it possible to apply a different manufacturer's coupler to each end of a bar.

Note

For the Ancon range, the manufacturer field also defines the coupler type.

Two MSP MacAlloy options are available, MSP-STD lists the stock MSP 500 couplers while MSP-SPEC lists the non-stock MSP 500 couplers.

The MSP Coupler abbreviations indicate the following: -

13.2.1.1.1 MSP-STD

M5LN	-	Lock Nut
M5PC	-	Pin Stop Coupler
M5C	-	Standard Coupler
VF	-	Void Former
M5ST	-	Turnbuckle (25mm Adjustment)
M5PCN	-	Pin Stop Coupler with Lock Nut
M5CN	-	Standard Coupler with Lock Nut
M5STN	-	Turnbuckle (25mm Adjustment) with Lock Nut

13.2.1.1.2 MSP-SPEC

M5HC	-	Hexagonal Coupler
M6LT	-	Turnbuckle (100mm Adjustment)
M5HCN	-	Hexagonal Coupler with Lock

M5LTN - Turnbuckle (100mm Adjustment) with Lock Nut

CFG...

The CFG... button accesses the RebarCAD Coupler Configuration dialog for the manufacturer selected. (See the chapter entitled "Enquiry").

Info...

Displays technical information of the coupler type selected

Coupler or Thread

This option controls the treatment to be applied to the end of that bar leg. The options are:

Coupler

The free end of this bar leg is to have a coupler attached and is to be threaded to suit the coupler type selected. Setting this option to Coupler activates the Coupler Type option so that the required coupler type can be selected.

Thread

The free end of this bar leg is to be threaded to suit the Lenton coupler type selected. Setting this option to Thread activates the Coupler Type option so that the coupler type this bar is to be threaded to suit can be selected.

NOTE - The Thread option is only available if that leg's manufacturer option is set to Lenton.

Coupler Type

Lists the coupler types available from the manufacturer chosen for attachment to the free end of this bar leg.

End Conditions

End condition lists set of end conditions available for the coupler type selected.

Couplers can be given following end conditions so that the bar legs will be reduced physically according to the end condition value defined in the coupler definition file.

- ▶ None - No end condition will be applied. This is default;
- ▶ Coupled between bars - This has to be used if two bars are coupled and a face reduction is required;
- ▶ Coupled to Face - This will be useful for the bar stopping at the face;
- ▶ Coupled to Face with Form fixer- This will be useful for the bar stopping at form works with a fixer;

Coup'd to Diam

This is used if the coupler attached to the free end of this bar leg is connected to a different diameter bar. The default is the diameter of the bar selected, if a different diameter is entered then the bars coupler label and bar list diagram will indicate a coupler with reducer e.g. the bar coupler label and bar list diagram will show:

Lenton Coupler or	maculae M5PC
Type A12 'R'	16/12 Reducer
16/12	

Attach Label

If this option is checked, label will be attached.

13.2.2 Add Symbols/Labels

Menu Option Couplers->Add Symbols/Labels

Command Line: cads_rc_acoupler

Toolbar



The Add Symbols/Labels command is selected from the Coupler sub-menu and it is used to add or remove symbols/labels from individual bar views on the drawing without entering the Add/Edit Coupler dialog. It has no affect on the bar list printout for the bar selected.

On picking the 'Add Symbols/Labels' command from the Couplers sub-menu, you are asked to select one of the following options from the side menu:

Symbol

Only a coupler symbol will be attached.

Label

Only a coupler label will be attached.

Both

A coupler label and symbol will be attached.

None

No label or symbol will be attached. (This option is used to removed symbols/labels already attached to the bar view).

Once you have selected the required option, you will be asked to pick the bar view you wish to apply the setting to. This command applies the setting selected to all coupled legs in the bar view picked. If you require more control over the symbol/label for each bar leg, then this can be achieved from the RebarCAD Coupler dialog where symbol/label settings can be different for each bar leg end.

If the picked bar is part of a bar set which has no couplers/coupler threads attached, you are asked if you wish to attach a coupler/coupler thread to that bar set. Selecting Yes takes you into the RebarCAD Couplers dialog where the options described earlier in the section Add/Edit Coupler are available, whilst selecting No returns you to the AutoCAD command prompt.

13.2.3 Couple Bars

Menu Option Couplers->Couple Bars

Command Line: `cads_rc_cbars`

Toolbar



The Couple Bars command is used to connect two existing bars using an appropriate coupler type.

You are asked to pick the bar you want to allocate the coupler to (picking towards the end of the leg you want the coupler placed on) followed by the bar you want to couple to (again picking towards the end of the leg you want the thread applied). The RebarCAD Couplers dialog (Figure 14.2), where the required coupler type can be selected, is then displayed. On exiting the dialog via the OK button, the bar leg allocated the coupler is adjusted so that the correct clearance is achieved between the bar ends and you are asked to place the relevant coupler labels.

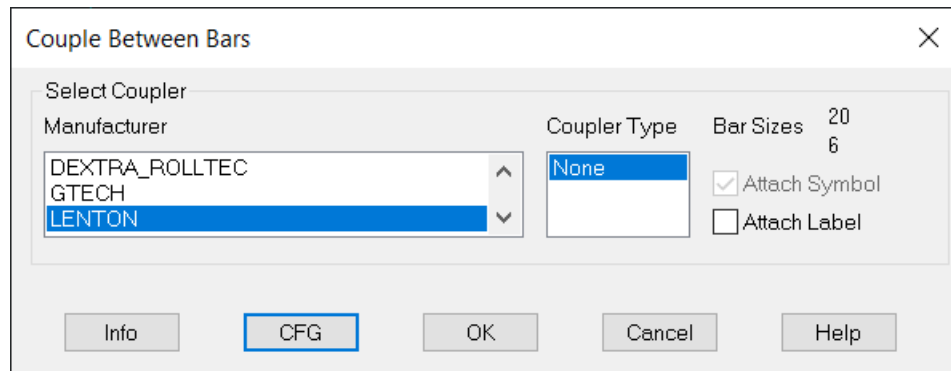


Figure 14.2 RebarCAD Couplers dialog

Notes

- ▶ For the Couple Bars command to work, the bar legs picked must be drawn in line or parallel on the drawing;
- ▶ Any adjustments required to achieve the correct clearance between the bar ends are always made to the bar allocated the coupler;
- ▶ If the bars picked are of different diameters, the coupler is always allocated to the larger diameter bar.

13.2.4 Couple To Face

Menu Option Couplers->Couple to Face

Command Line: `cads_rc_c2face`

Toolbar



The Couple To Face command is used to add a coupler to an existing bar when the coupler is to be placed/fixed to a known face. (e.g. when a coupler is to be placed up to a formwork face ready for the connecting bar in the next element to be attached after the removal of the formwork).

You are asked to pick the bar you want to couple and then to define the face on which the coupler is to be placed. The RebarCAD Couplers dialog (Figure 14.3) is then displayed and the required coupler type can be selected. On exiting the dialog via the OK button, the bar leg allocated the coupler is adjusted so that the correct clearance is achieved between the bar end and the face. You are then asked to place the relevant coupler label.

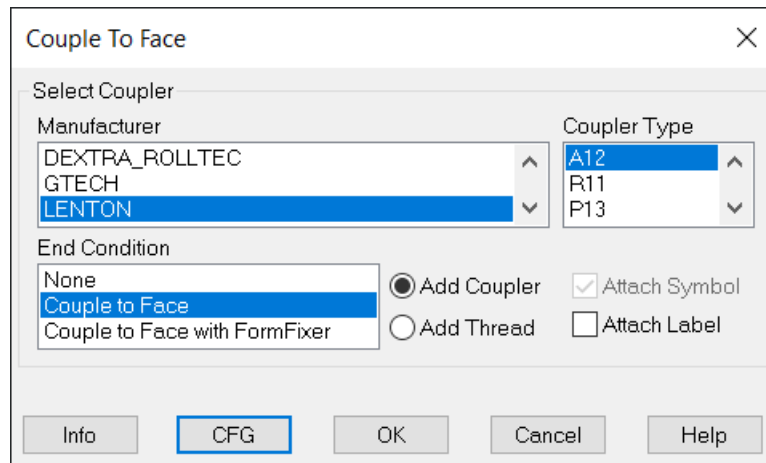


Figure 14.3 RebarCAD Couplers dialog

NOTE.

- ▶ Where the coupler type selected is of a two part construction, the coupler is placed with the end of the female part adjacent to the face so that the male part can be attached when the formwork is removed;
- ▶ Where the coupler is to be fixed to the formwork using a sealing cap, you must, if required, allow for the thickness of the sealing cap when defining the face, as this is not taken into account when adjusting the bar end position.

13.2.5 Connect To Coupler

Menu Option Couplers->Connect to Coupler

Command Line: `cads_rc_c2coupler`

Toolbar 

The Connect To Coupler command is used to connect a bar to another bar which has a coupler already allocated to the bar end.

You are asked to pick the bar leg which is already coupled and then the bar which is to be connected to it. The non-coupled bar leg is then adjusted to achieve the correct clearance between the bar ends (the relevant thread is applied to the end of the bar if the coupled bar is using a Lenton coupler). You are then asked to place the relevant coupler thread label.

NOTE.

- ▶ For the Connect To Coupler command to work, the bar legs picked must be drawn in line or parallel on the drawing;
- ▶ Any adjustments required to achieve the correct clearance between the bar ends is always made to the bar which is connecting to the existing coupled bar;
- ▶ If the non-coupled bar is of a larger diameter to the existing coupled bar, the command is aborted, as the coupler must always be applied to the larger diameter bar.

13.2.6 Annotate Couplers

Menu Option Couplers->Add/Edit Annotated Coupler

Command Line: `cads_rc_atcoupler`

Toolbar



The RebarCAD Annotate Coupler function provides support for annotating and scheduling coupler types other than those provided by Erico Lenton or MSP MacAlloy.

The Annotate Coupler command is selected from the Coupler sub-menu and is used for adding, editing or removing annotated couplers and threads from individual bars via the RebarCAD Annotate Couplers dialog (Figure 14.5).

NOTE - The Annotate Coupler command does not make any adjustment to the bar on the drawing. It simply adds a coupler or thread to the end of the bar at its existing position on the drawing.

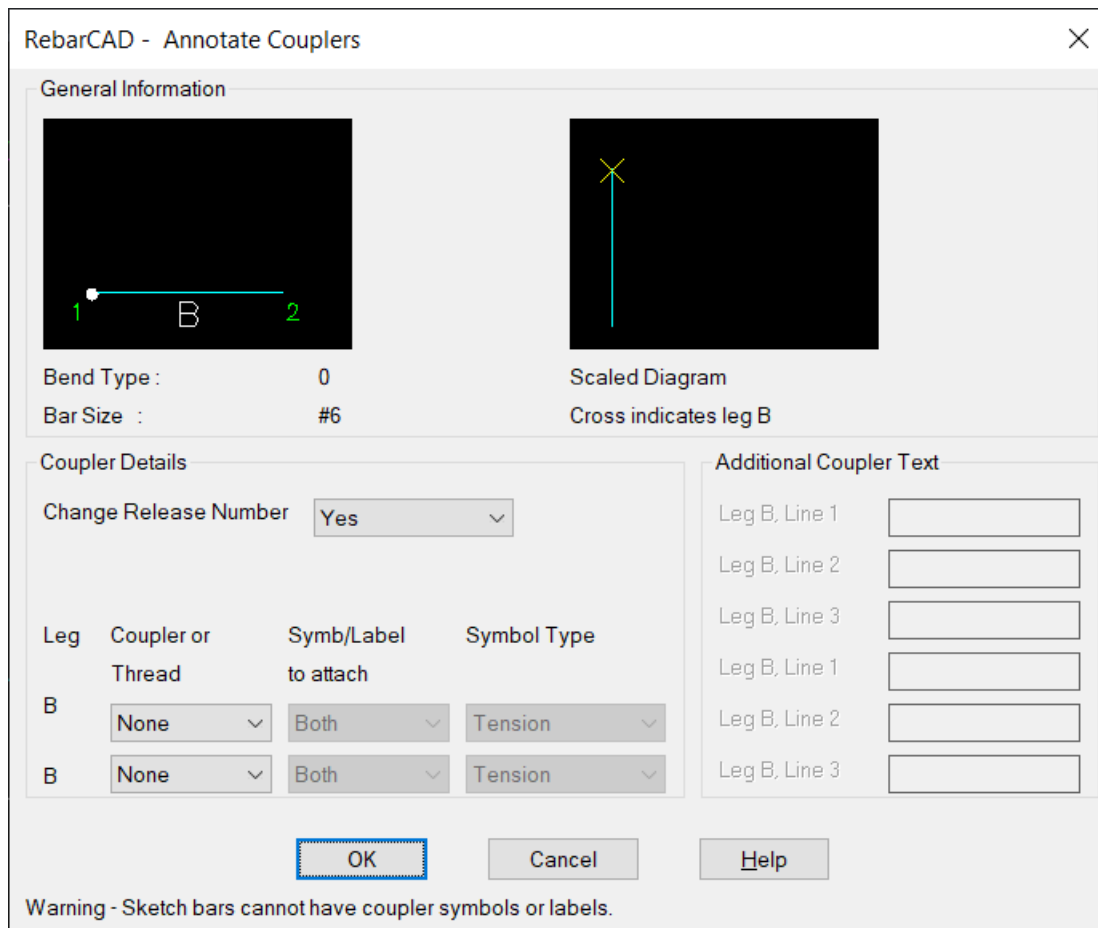


Figure 14.5 RebarCAD Annotate Couplers dialog

The RebarCAD Coupler dialog contains 2 slides. The left-hand slide displays the bend type used to create the bar picked (along with the bar diameter) whilst the right-hand slide displays a scaled diagram of the actual view picked.

The scaled diagram includes a red cross on one bar leg. This red cross toggles between bar legs when the 'Coupler or thread' option is selected for that bar leg. This allows the user to see which bar leg will be affected on the drawing.

The options available within the RebarCAD Annotate Coupler dialog are applicable to each free leg which can be coupled/threaded and are as follows:

13.2.7 Coupler or Thread

This option controls the treatment to be applied to the end of that bar leg. The options are:

None - No treatment is required to the free end of this bar leg.

Coupler - The free end of this bar leg is to have a coupler attached and is to be threaded to suit the coupler type selected.

Thread - The free end of this bar leg is to be threaded to suit the coupler type.

13.2.8 Symbol/Label to attach

This option is used to specify the symbol and label to be attached on the drawing adjacent to this bar leg end for the picked bar view only. The options are:

None - No label or symbol will be attached.

Label - Only a coupler label will be attached.

Symbol - Only a coupler symbol will be attached.

Both - A coupler label and symbol will be attached.

This setting does not apply to all views of this bar leg, only the bar view picked from the Add/Edit Coupler command. Labels can be applied to other views of this bar using the Add Symbols/Labels command described in the section Add Symbols/Labels to be found later in this chapter.

13.2.9 Symbol Type

This option is used to specify the symbol type to be attached to this bar leg if the 'Symbol/Label to attach' option is set to 'Symbol' or 'Both'. The options are:

None - No symbol will be attached regardless of 'Symbol/Label to attach' setting.

Tension - Will attach the Tension symbol block specified in the Coupler Configuration.

Compression - Will attach the Compression symbol block specified in the Coupler Configuration.

Thread - Will attach the Thread symbol block specified in the Coupler Configuration.

Additional Coupler Text

Three lines of text can be added for each leg, the text entered is shown on the bar view and also included on the bar list printout if the relevant diagram is attached to the bar data line.

14 OverStock Length Feature

Chapter Objectives

This chapter describes the scope and use of the Over Stock Length feature for RC bars.

14.1 Overview of the RebarCAD Over Stock Feature.

Over stock length feature allows to splice the bars whose length is above the user specified stock length and enables editing as a group.

It increases the overall productivity for spliced bars as re editing as a group makes revisions much easier.

The Tapered Range macro also has the option to draw the bars as Over Stock bars.

This feature can be turned off completely if the Global config as shown below is set as "No".

[OverStockFeature]

UseOverStockLength=No

14.2 Drawing Bars Beyond Stock Length

The feature gets triggered automatically if the length of the bar is beyond the Stock length.

The following dialog pops up in the program with the options "Yes", "No" and Cancel.


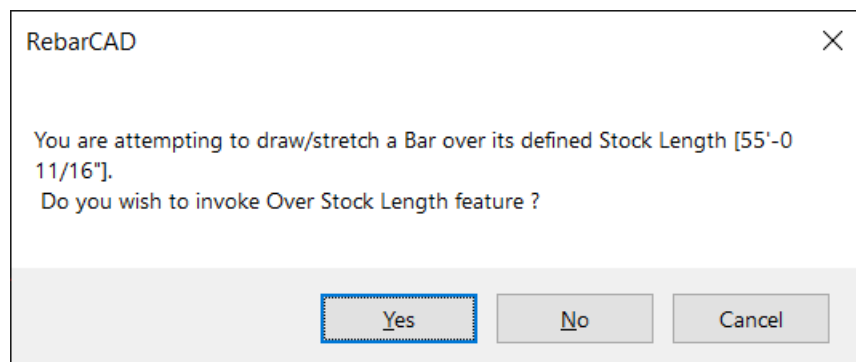


Figure 15.2.1 OverStock Warning Dialog

- ▶ Yes - invokes Over Stock Feature Dialog;
- ▶ No - Works as Previous version of the program;
- ▶ Cancel - Cancels the operation.

OverStock Feature Dialog

If the OverStock option is selected, the following dialog appears.

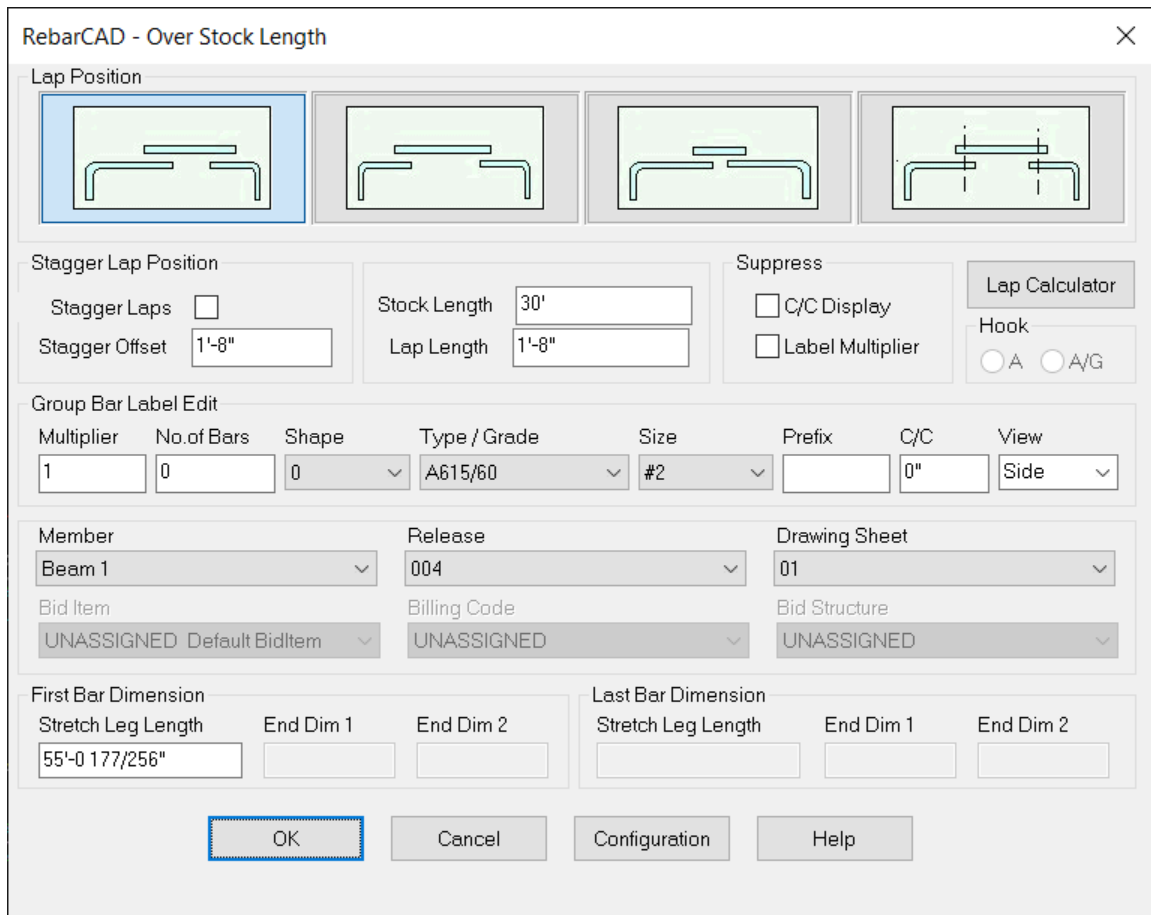

The dialog box is titled "RebarCAD - Over Stock Length" and contains the following sections:

- Lap Position:** Four diagrams showing different lap configurations. The first diagram is highlighted with a blue border.
- Stagger Lap Position:**
 - Stagger Laps: ☐
 - Stagger Offset: 1'-8"
 - Stock Length: 30'
 - Lap Length: 1'-8"
- Suppress:**
 - ☐ C/C Display
 - ☐ Label Multiplier
 - Lap Calculator
 - Hook: ☐ A ☐ A/G
- Group Bar Label Edit:**


Multiplier	No. of Bars	Shape	Type / Grade	Size	Prefix	C/C	View
1	0	0	A615/60	#2		0"	Side
- Member:** Beam 1
- Release:** 004
- Drawing Sheet:** 01
- Bid Item:** UNASSIGNED Default BidItem
- Billing Code:** UNASSIGNED
- Bid Structure:** UNASSIGNED
- First Bar Dimension:**
 - Stretch Leg Length: 55'-0 177/256"
 - End Dim 1:
 - End Dim 2:
- Last Bar Dimension:**
 - Stretch Leg Length:
 - End Dim 1:
 - End Dim 2:
- Buttons:** OK, Cancel, Configuration, Help

Figure 15.2.2 OverStock Main Dialog

Splice Options


There are four splice options as shown in the dialog and each one splices the bar as explained below.

Splice Option 1:

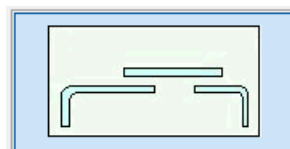


The first and Intermediate bars are the stock bars and the last bar is the run out bar.

An example of a spliced detail is shown below. The Set number shown indicates as to how the bar mark is determined.




Splice Option 2:

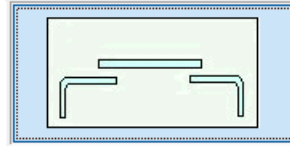


The first, last and Intermediate bars are stock bars. The last but one bar is the run out bar.

An example of a spliced detail is shown below.




Splice Option 4:

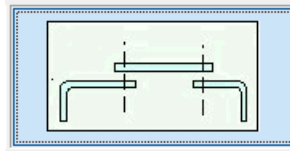

Each splice is defined by selecting set of lines. If the distance between two lines goes beyond the Maximum Stock Length, the program splices this zone by maximum stock length.

An example of a spliced detail is shown below.

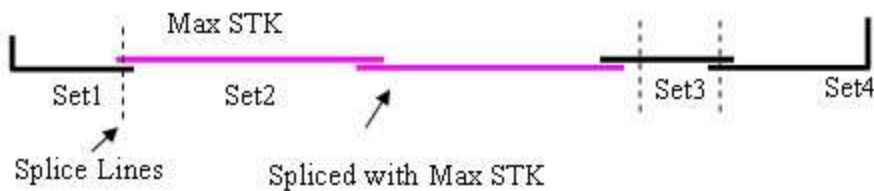

Stock Length

This is the length of the bars for splicing. This cannot be more than the Program Stock Length (Max Stock Length).

For e.g if the construction joint is set at 8000 mm (or 30') and the bar needs splicing at those points, the stock length can be entered as 8000 mm (30') which is less than the program stock length (12000 mm or 66').


The stock length can also be based on the available Stock lengths of bars specified by the Manufacturers.

Lap Length

This is the length of the Lap for splicing defaulted to 500 mm (1'-8"). This is not automatically calculated according to the size of the bar. Hence it is the user's responsibility to enter the proper Lap value.

Staggered Lap

This option calculates and adjusts the first and last bar lengths such that if the alternate bars are placed by mirroring, the lap distance is staggered by the given value. Note that this option should be used with care for U and L shaped bars which are unsymmetrical.

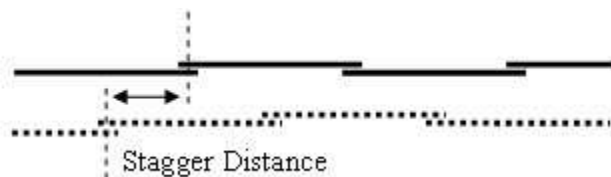

Bar Group Data

This is similar to the options available for bar.

Multi:

Multiplier for the group.

No. of Bars:

No of bars for the group.

Group Bar Label Edit							
Multiplier	No. of Bars	Shape	Type / Grade	Size	Prefix	C/C	View
1	0	0	A615/60	#2		0"	Side

Shape:

Shapes that are supported for OverStock feature are listed here.

Following shapes are supported.

Straight bar

Straight bar with Hooks U bar and L bar.

For U and L shape, only the Second leg is allowed to stretch beyond beyond the Stock length.

Grade:

Grade of the bars within the group.

Size:

Size of the bars in the group.

When the Size is changed, it will give the following warning message that it does not automatically calculate the lap required for the selected size.

Prefix:

Prefix for the bars in the group.

C/C:

Centre to Centre distance of the bars in the group.

View:

Side view and Plan view for the group are supported. The views can be changed as required.

Release Code:

Release Code of the bars in the group.

Hooks:

User can select either A or A/G hooks for bars in the group.

Suppress c/c Display

If toggled by picking the box to display an X, the c/c value will be suppressed in the label display for the entire group. (Refer 4.1.11 "Suppress c/c display" for more details)


Suppress Label Multiplier

If activated by picking the box to display an X, the multiplier will be suppressed in the label display for the entire group. (Refer 4.1.12 "Suppress Label Multiply" for more details)

First Bar and Last Bar Data

This is similar to the options available for bars.

The stretch length is the leg length of the bar to which splicing is done. Stretch length , end dim1 and end dim2 are shown in the figure below.

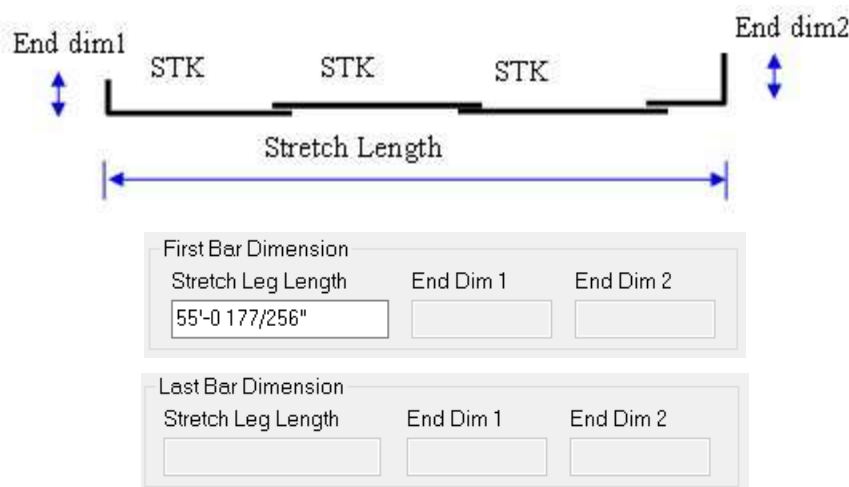

Lap Calculator

This invokes the lap calculator for US config.

14.3 Editing of the RebarCAD Over Stock Bars

This is similar to the options available for bar.

Barlabel editing and Double click editing of OverStock bars invoke the OverStock Feature's main dialog.

Multiple Edit can also be done for groups.

Note:

Any editing done on lables such as moving label / leader will retain it's position on most cases of editing such as changing bar size, grade etc. There are certain cases where it will reposition the labels to OSL defaults. User needs to reposition if required.

Copy Operation

Autocad Copy command or RC copy command invokes the following dialog and the options available are given below.



Figure 15.3.1 OverStock Copy warning Dialog

Copy Group:

Allows to Copy the group as View or Set.

Note:

Copying the group as Set and then editing any of the set updates the bar Mark of the Over Stock Group.

Explode Group:

Explodes the group into individual bars.


Exploding as individual bars

The Command "cads_rc_Explode" prompts to select the Over Stock bars and explodes it as individual bars.

Now the bars no longer behave as a group of bars which react to the features available in over stock length command.

14.4 Configuration Options for Over Stock Bars

If the OverStock Config option is selected, the following dialog appears.

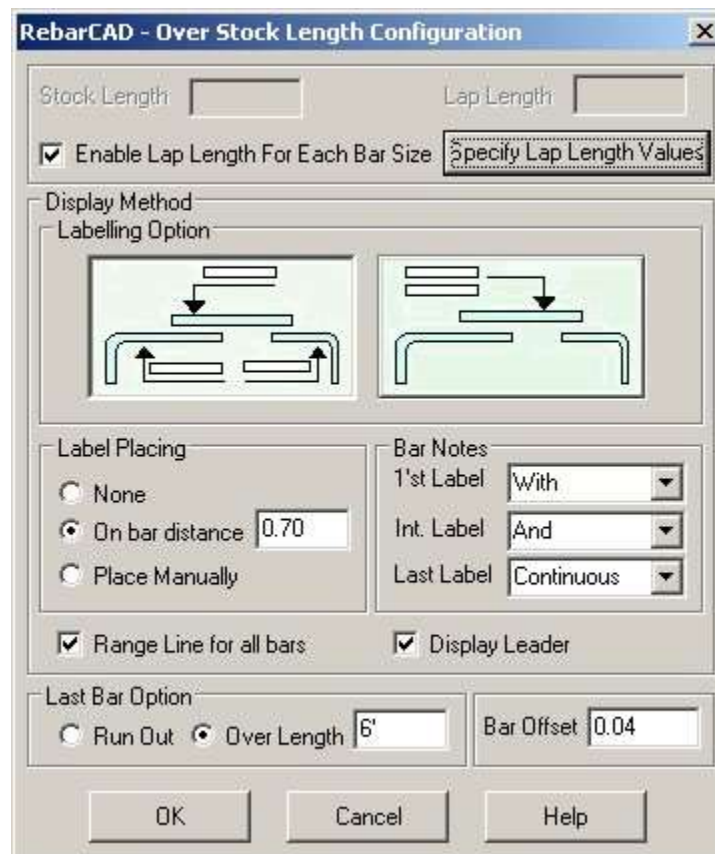



RebarCAD - Over Stock Length Configuration

Stock Length: Lap Length:

☒ Enable Lap Length For Each Bar Size

Display Method

Labelling Option

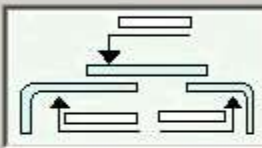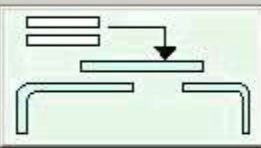Label Placing

☐ None ☒ On bar distance ☐ Place Manually

Bar Notes

1'st Label: Int. Label: Last Label:

☒ Range Line for all bars ☒ Display Leader

Last Bar Option

☐ Run Out ☒ Over Length Bar Offset:

Stock Length

This value is the stock length that can be provided by the user. This edit box will be enabled when invoked from Area Detailer Macro and disabled when invoked from RebarCAD. While using RebarCAD the stock length value can be provided in the OSL main dialog.

Lap Length


This value is the lap length that can be provided by the user. This edit box will be enabled when invoked from Area Detailer Macro and disabled when invoked from RebarCAD. While using RebarCAD the lap length value can be provided in the OSL main dialog.

Lap Length for each bar size

The new feature of specifying Lap length for each bar size can be availed by activating the below check box.

14.5 Configuration Options for Over Stock Bars

If the OverStock Config option is selected, the following dialog appears.

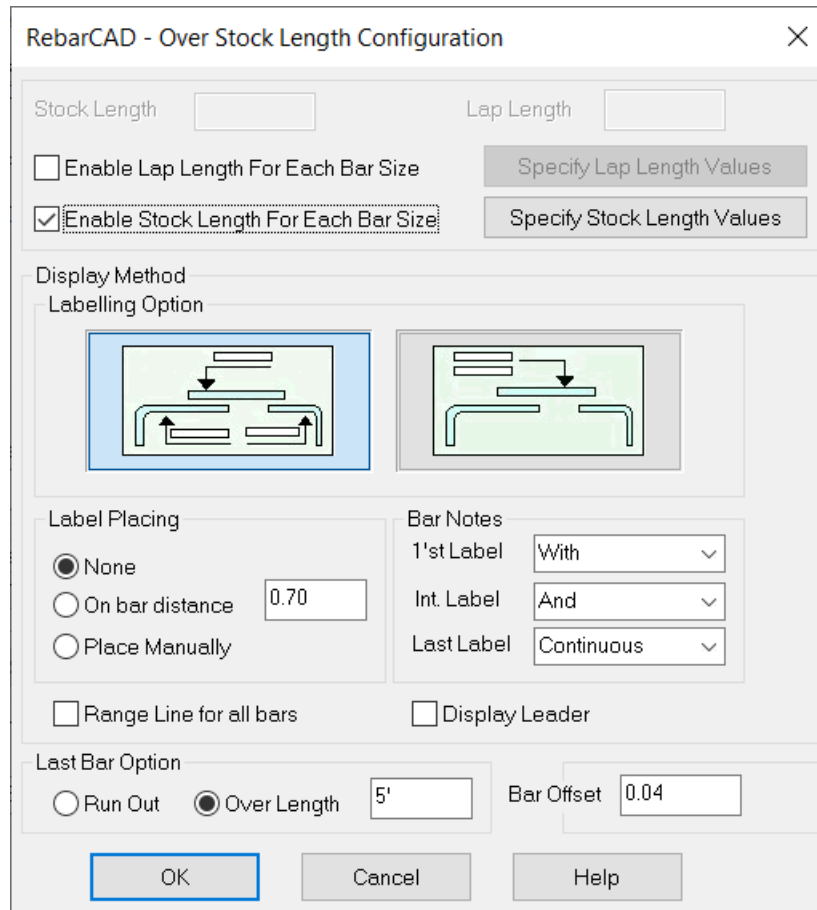

The dialog box is titled "RebarCAD - Over Stock Length Configuration". It contains the following sections:

- Stock Length**: An input field.
- Lap Length**: An input field.
- Enable Lap Length For Each Bar Size**: A checkbox.
- Specify Lap Length Values**: A button.
- Enable Stock Length For Each Bar Size**: A checked checkbox.
- Specify Stock Length Values**: A button.
- Display Method**: A section containing two diagrams of rebar layouts. The left diagram is highlighted with a blue border.
- Labelling Option**: A section containing three radio buttons: "None" (selected), "On bar distance" (with a value of 0.70), and "Place Manually".
- Bar Notes**: A section containing three dropdown menus: "1'st Label" (With), "Int. Label" (And), and "Last Label" (Continuous).
- Range Line for all bars**: A checkbox.
- Display Leader**: A checkbox.
- Last Bar Option**: A section containing two radio buttons: "Run Out" and "Over Length" (selected, with a value of 5').
- Bar Offset**: An input field with a value of 0.04.
- Buttons**: "OK", "Cancel", and "Help".

Stock Length


This value is the stock length that can be provided by the user. This edit box will be enabled when invoked from Area Detailer Macro and disabled when invoked from RebarCAD. While using RebarCAD the stock length value can be provided in the OSL main dialog.

Lap Length

This value is the lap length that can be provided by the user. This edit box will be enabled when invoked from Area Detailer Macro and disabled when invoked from RebarCAD. While using RebarCAD the lap length value can be provided in the OSL main dialog.


Lap Length for each bar size

The new feature of specifying Lap length for each bar size can be availed by activating the below check box.

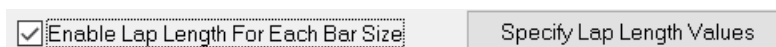

This section shows a checked checkbox labeled "Enable Lap Length For Each Bar Size" and a button labeled "Specify Lap Length Values".


The lap length for each bar size can be viewed/changed by clicking on the “Specify Lap Length Values” button.

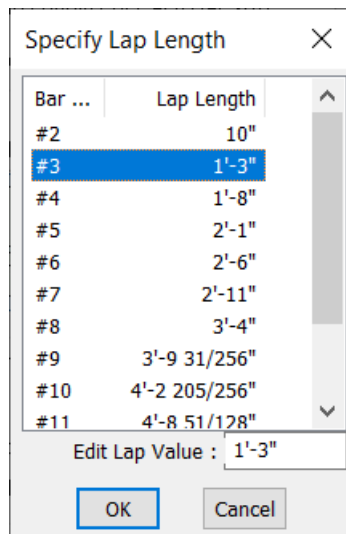

The default value for lap length for each bar size is 40 X Bar diameter. User can change the default lap length values by clicking on the respective row in the list box and then enter the value in the below text box. The lap length value for each bar size will be retained for future use and is stored as configuration items in the drawing. This lap length value will be automatically used by the program while drawing over stock length bars.

Labeling Option

This option controls the manner in which the intermediate bars are drawn i.e as view or set. It also indicates how the labels are placed i.e label all the bars individually or stack them.

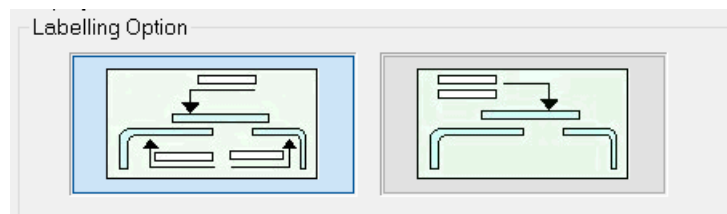

Option 1: Label the bars individually

Labels all the bars individually and the intermediate bars are drawn as new Sets.

Option 2: Label the bars as Stack

Labels are stacked and the intermediate bars are drawn as new views and the multiplier is adjusted accordingly

Label Placing

Label placing options available are as shown below.

Label Placing
☒ None
☐ On bar distance 0.70
☐ Place Manually

None:

Does not label the bars.

On bar distance:

Places the labels at a distance from the bar. The distance is calculated by multiplying the dimscales with the "On bar distance" factor.

Place Manually:

Allows to place the bars manually i.e user has to manually pick the arrow position and leader position for each bar.

Bar Notes for Label

The following Label Notes are available for the first bar, Intermediate bar and Last bar.

1'st Bar's Label: Default value is "With"

Bar Notes
 1'st Label With
 Int. Label And
 Last Label Continuous

Intermediate Bar's Label: Default value is "And"

Last Bar's Label: Default value is "Continuous".

The Label Notes can be either entered or selected from the standard notes provided in the list box.

Range line for All Bars

This is used for a range of bars which are grouped with the OSL feature.

If the "Range Line for all Bars" option is "On", the program draws the Range line for all bars.

☐ Range Line for all bars

Display Leader

If this option is turned off, leader will not be drawn. This option is 'off' by default for ranges.

☐ Display Leader

Last Bar Option

The last bar option as shown in the figure below allows to control the manner in which the last bar is drawn.



Last Bar Option
☐ Run Out ☒ Over Length 5'

Run Out:

This option just makes the last bar's length as the calculated length based on the available stretch length and stock length.

Over Length:


If the last bar is slightly higher than the stock length, it can be set to a value such that it can be more than stock length by a given "Over length" value.

Note:

For the Run out option, if the last bar calculated is too small which is not practical, the program automatically switches to "Over Length value" after giving a warning message at the Autocad command window.

Bar Offset

This is the factor which allows the user to adjust the position of each alternate bar near the "Lap" as shown in the figure below to add more visibility.

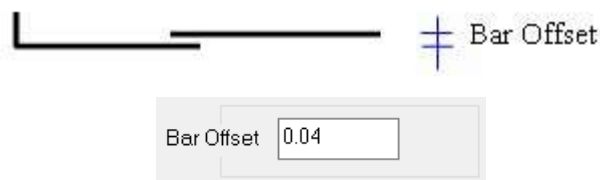

The "Bar offset" value is multiplied with the "Dimscale" value and is used to calculate the actual height in the drawing.

Over Stock Feature - Limitations

The Over Stock feature has the following limitations.

- ▶ It supports only the following shapes;
 - Straight bar;
 - Straight bar with Hooks;
 - U bar;
 - L bar.
- ▶ It supports only the following range types;

- Single indicator range;
 - Double indicator range;
 - Double indicator tapered range.
- ▶ For U bar, the second Leg alone can be stretched beyond stock length;
 - ▶ Couplers cannot be added;
 - ▶ Add view or Set command and Range view command are not supported for Over Stock bars;
 - ▶ If the difference between the first and last bar is more than the stock length of a double indicator tapered range, it will not be spliced as Over Stock bars.

15 Appendix A - Important Operating Notes

Chapter Objectives

This appendix lists points to note when using RebarCAD software.

The following notes are intended to assist you in using RebarCAD: -

- ▶ For maximum efficiency try to make the most of the AutoCAD copy commands, even if the new bar is to be different from the one copied. If, for instance, the new bar is edited to a different diameter, then you will be given the opportunity to give the bar a new bar mark and leave the original bar unchanged;
- ▶ If you find the bar list contains more bars than the bar labels on the drawing, then you will probably have some un-labelled bar sets on the drawing. These were probably created by using New Set options when you required an Add View option. To ensure the bar list matches the bar labels on the drawing, the bar list configuration option Bar list Unlabelled Bars can be set to No. This will then only bar list bar sets which have their associated label on the drawing. Alternatively, you could use the command Drawing Audit which has an option to highlight all un-labelled bar sets on the drawing. Any un-labelled sets could then be converted to New Views of other bar sets by using the Set to View option off the View to Set Toggle menu option. As each un-labelled set is converted to a New View of an existing bar set its entry in the bar list will be removed;
- ▶ If you wish to edit a tapered range which has had a step increment applied and the bar list has been issued, the following point should be noted before editing the tapered range. If the bar c/c or number of bars is edited on a tapered range, then any step increment previously applied will be set back to zero, therefore probably increasing the number of bar suffixes in the range. This in turn will increase the number of lines required to display the bars in the bar list. If there is insufficient space to do this on the bar list the bar set will be placed on a new page with its existing line positions being marked as revisions. In cases like this you are advised to delete the existing tapered range which will then be shown as struck out in the bar list and marked as a revision and replace the deleted bar set with a new range which will be placed on a new bar list page;
- ▶ If a Prototype or Title Block drawing is created from an existing drawing which has RebarCAD loaded into it, you must ensure no RebarCAD database is present on the Prototype or Title Block drawing. This can be achieved by loading RebarCAD into the drawing and entering the following at the command line: `CADS_RC_RCTOACAD`

This command will then ask you to de-reference any RebarCAD entities and delete any database found. You should reply YES to both options. On completion of the command the drawing should then be saved. The saved drawing will then be free of any RebarCAD database and associated entities. The drawing is then suitable for use as a Prototype or Title Block drawing which will have future use of RebarCAD. You may wish to adopt this sequence of database deletion on all drawings to be used with RebarCAD especially if the outline drawing has come from a source outside of your control;

- ▶ If the match bars function is used and bar marks are rationalised, gaps may occur in the bar marking sequence e.g. 601, 602, 604 where 603 is no longer in use. Where this is the

case the Compact Bar Marks function can be used to compact the bar marks used e.g. in the above sequence bar mark 604 would be renumbered to 603 and so on;

- ▶ The following Display settings are recommended when using RebarCAD:
 - Number of command lines 3
 - RebarCAD Toolbar - ON
 - RebarCAD Snaps Toolbar - ON
 - CADS Keypad Toolbar – ON
- ▶ Users wishing to use 800x600 screen resolution need to set the Gconfig variable [ScheduleVars] SchedDlgName to schedule800 to enable the internal bar list to be visible;
- ▶ You can disable the range offset prompt by typing in CADS_RC_OFFSET and then pressing enter. You will be prompted with a Yes / No option;
- ▶ RebarCAD reads .def / .ini configuration files which determine the program setup. Several *.def files are supplied with RebarCAD.

By default, RebarCAD uses CADS-RC.DEF on new drawings, if another set-up is required the relevant *.def file should be loaded by using the Change Cfg. Option prior to detailing any bars. If the Write Prototype Settings option is used to write a new cfg. file the new file is named the same as the current .def file but has a .ini extension when a .def file is selected for use RebarCAD reads the cfg values from this file first and then reads the .ini file (if present). Existing def files can be copied to new file names and used to create specific project/office settings as required. Any .def file can be copied as

CADS-RC.DEF and will therefore become the default RebarCAD settings.

16 Appendix B - RebarCAD Configuration Reference

Chapter Objectives

The following pages list some of the more useful configuration variables for use in RebarCAD.

Please be aware, that it is possible, by making changes to the Global

Configuration Centre to cause RebarCAD to behave incorrectly. Only Advanced Users should attempt to edit these settings unless directed to do so by CADS Technical Support Department.

Appendix D1 -

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[Config]			
CurrentCFG			Default cfg (USA)
Setup			USA
MMConfig			USA
MMBarSizeDisplayUnitType			2
MMBarSizeConfiguration			1
MMWeightDisplayUnitType			6
MMWeightDisplayUnitMode			1
ScheduleLayer			BARLIST
RevisionTableLayer			BARLIST

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[SoftMetric]			
UnitsMode	-	USA Soft Metric Variable	1
NoModes	-	USA Soft Metric Variable	5

Multiplier1	-	USA Soft Metric Variable	1.0
Multiplier2	-	USA Soft Metric Variable	0.03937007874016
Multiplier3	-	USA Soft Metric Variable	25.4
Multiplier4	-	USA Soft Metric Variable	10
Multiplier5	-	USA Soft Metric Variable	0.254
Units1	-	USA Soft Metric Variable	0
Units2	-	USA Soft Metric Variable	4
Units3	-	USA Soft Metric Variable	2
Units4	-	USA Soft Metric Variable	2
Units5	-	USA Soft Metric Variable	2
Precision1	-	USA Soft Metric Variable	-1
Precision2	-	USA Soft Metric Variable	2
Precision3	-	USA Soft Metric Variable	0
Precision4	-	USA Soft Metric Variable	2
Precision5	-	USA Soft Metric Variable	2
Id1	-	USA Soft Metric Variable	Drawing
Id2	-	USA Soft Metric Variable	MM ->Inches

Id3	-	USA Soft Metric Variable	Inches->MM
Id4	-	USA Soft Metric Variable	MM ->Metres
Id5	-	USA Soft Metric Variable	Inches-Metres
WeightMultiplier1	-	USA Soft Metric Variable	1.0
WeightMultiplier2	-	USA Soft Metric Variable	2.20462262
WeightMultiplier3	-	USA Soft Metric Variable	0.45359237
WeightMultiplier4	-	USA Soft Metric Variable	2.20462262
WeightMultiplier5	-	USA Soft Metric Variable	0.45359237

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[DimensionExclusion]			
ExcludeSeismic	-		Seismic
ExcludeHidden1			Hidden1
ExcludeHidden2			Hidden2
ExcludeHidden3			Hidden3
ExcludeHidden4			Hidden4
ExcludeHidden5			Hidden5

ExcludeHidden6	Hidden6
ExcludeHidden7	Hidden7
ExcludeHidden8	Hidden8
ExcludeHidden9	Hidden9
ExcludeHidden10	Hidden10
ExcludeHidden11	Hidden11
ExcludeHidden12	Hidden12

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[Bars]			
Suffix	BAR Configuration - Bar Marking...	Tapered Start (letter/number)	Suffix A
RcBarLay	BAR Configuration	Reinforcement Bar Layer	rebars
BarCenCol	BAR Configuration	Centre Line Colour	Cyan
BarProCol	BAR Configuration	Profile Line Colour	White
RcBarSecLay	BAR Configuration	Bar Section Layer	0-70
ShapeWin	BAR Configuration	Bend Type Window	On

BarDescFilePathAndName	SUPPORT FILES	Bar Bend Types file	usa.bdf
BarBendingDataFilePathAndName	SUPPORT FILES	Bar Bending Data file	
DimsDataFilePathAndName	SUPPORT FILES	Bar Dims Txt file	usadims.txt
BarTypesPathAndName	SUPPORT FILES	Bar Types File	
LegacyBarDescFilePathAndName			usa.bdf
DisplaySetWarning	BAR Configuration	Display SET warnings	Yes
NewViewDLG	BAR Configuration	New View Dialog Appears	Always
DisplayOldShapes	---	Displays Old 9, 11, 13 and 21	No
Sc99SlidePath	---	Special Bar Slide Path	
DiamChangeCheck	BAR Configuration - Advanced...	Diameter Change Check	Yes
UsePlineWidth	BAR Configuration	Use Pline Width rather than centreline	No
PlineWidthFact	---	Pline Width Factor	0.3
DrawBlips	BAR Configuration - Advanced...	Blips when doing Tapered Ranges	Yes
DrawOverSizedEnds	BAR Configuration	Draw Over Sized Ends	No
OverSizeEndsFact	BAR Configuration	Over Sized Ends Factor	0.3
DrawOverSizedEndsProportionalToSize			No

InvailldBarColor	---	The colour Incomplete/Unlabelled bars are shown at	6
AutoLeaderBars	---	Automatically Leader Bars	Yes
ShowType2As17	---	Shows a type 2 as a 17 in the bar list	No
UseFastBBD	BAR Configuration - Advanced...	Use Fast BBD	Yes
ShowSlideError	---	Display warning if view slide not present	No
StartBarPos	---	Contact CADs	0
StretchChangesMark	BAR Configuration - Advanced...	Stretch Changes Mark	Ask
StretchAsksForMark	BAR Configuration - Advanced...	Stretch Asks for Mark	No
MaxLengthWarning	BAR Configuration - Advanced...	Maximum Length Warning	Ask
AlwaysDisplayLengthInches	BAR Configuration - Advanced...	Always Display Length in Inches	No
ZeroLengthInchesTxt	BAR Configuration - Advanced...	Zero Length Inches text	-0"
RadDimToOuter	BAR Configuration - Advanced...	Radius Dimensions to Outer	No
ExcludeBarShapes	BAR Configuration - Advanced - Exclude Bar Shapes...	Bar shapes can be selectively excluded from Bend Types list	
SchedRadialBarAsStraight	---	Schedule bend type 9 as a 0 in Bar List	Yes

RadialMaxHeight	---	Maximum H Dim suitable for Transport	2235.0
MaxDimensionLength			800.0
MaxDefaultBarLength			800.0
DimensionMinimums			Yes
UpdateBarDimensions			Yes
AskForBmarkinput			Yes
HooksButtonOnEdit			On
AllowDimsBelowMinimum			No
WarnOfNonStandardHooks			No
AllowDuplicateControlCodes			Yes
UpdateSlopingLegsDimsOnEntryToDimsDlg			Yes
AlwaysDefaultToAandGHookOnDrawBar			No
AskToChangeConfigOnNewDrawing			No
SortShapeList			No
ShapeGroupSortingOrder			
ShowShapeCodeWarning			YES

UnScheduledBarLayer	UnscheduledRebars
RestrictedBarSizes	
BentMaxHeight	88.0
USER180STIRRUPHOOK	Yes
HookDim1	A
HookDim2	G

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[SpecialBars]			
UseSpecialsFile	BAR Configuration - Special Bars	Use Special Bar File	No
SpecialBarFilePathAndName	BAR Configuration - Special Bars	Special Bar Path and Filename	specials.spl
DefaultDescription			{Description = "Special Bar";}
DefaultSlidename			{Slide = "special.sld";}
DefaultVarSetup			{BC="";NoBarMarkPrompt = 0;SpecialBar = 1;}

DefaultScheduleData					<code>{if(barsize == "#3" barsize == "10M")Category = "Light";else{Category = "Heavy";}}</code>
DefaultLengthCalc	BAR Configuration - Special Bars		Default Length Calculation		<code>{length=A+B+C+D+E+F+G;}</code>
DefaultRounding	BAR Configuration - Special Bars		Default Rounding Calculation		<code>{StdRounding(0);lengthRounded=ARounded+BRounded+CRounded+DRounded+ERounded+FRounded+GRounded;StdRounding(1);}</code>
SpecialBarsSlidePath	---		Special Bars slide path		
SlideTxtWidthFact	---		Width factor of Slide Text	1.0	
SlideTxtLay	---		Layer for Slide Text	bar-lbl	
SlideTxtHeightFact	---		Height factor of Slide Text	0.1	
SlideTxtStyle	---		Text Style for Slide Text	Romans	
UseSpecialBarText	---		Use Special Bar Text	No	
SpecialBarText	---		Special Bar Text		
ReadSpecialsFromDwg	BAR Configuration - Special Bars		Read Special Bars from the Drawing database	Yes	
ReadBarThatAlreadyExists	BAR Configuration - Special Bars		Contact CADS	No	

ReReadSpecialsFromFile	No
AutoNameBarLegDimsForPline	No
AutoNameSpecialShape	No
AutoSpecialShapeNamePrefix	SS
DefaultPlineToSpecialShape	3
CouplerBarDisplayShape	No

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[Label]			
LabelLay	LABEL Configuration	Bar Label Layer...	bar-lbl
CircleLay	-	Layer of Circle used in Indian Labelling	bar-lbl
LabelHeight	LABEL Configuration	Bar Label Height	~mm~3.0
LabelWidthFactor	LABEL Configuration	Bar Label Width Factor	1.0
LabelTextStyle	LABEL Configuration	Bar Label Text Style	romans
LabelBarQuestionDef	LABEL Configuration	Label Question Default	No

AutoLabelEdit	---	Goes into Edit Bar label off automatically after each draw bar	
NotesFile	LABEL Configuration	Notes File...	rc_lab.def
StackLabelsDistFac	---	Distance between stacked labels	1.8
LabelForm1	LABEL Configuration	Label Format	
TaperedLabelForm1	LABEL Configuration	Label Format	
BarMarkFormat	LABEL Configuration	Bar Mark Format	
TaperedBarMarkFormat	LABEL Configuration	Bar Mark Format	
BarMarkExcludeChars	BAR Configuration - Bar Marking...	Exclude size characters in bar mark	#M
BarMarkPrefix	BAR Configuration - Bar Marking...	Bar Mark Prefix	
BarMarkFormat	BAR Configuration - Bar Marking...	Bar Mark Format String	\$BMARK
BarMarkExcludeChars			
NumberOfMarkZeros	BAR Configuration - Bar Marking...	Value of 2 gives bar marks 01, 02 etc	2
NumberOfTaperedMarkZeros	BAR Configuration - Bar Marking...	Value of 2 gives bar marks 01, 02 etc	2

OldStyleMarking	BAR Configuration - Bar Marking...	USA Consecutive marking within size	Yes
StrghtLabelForm1	LABEL Configuration	Label Format	\$MULTI~x\$NOBAR \$BDIAM X \$LNGTH (~\$SUF1~-\$SUF2~)@~\$CENTR ~\$NOTES
StrghtTapLabelForm1	LABEL Configuration	Label Format	\$MULTI~x\$NOBAR \$BDIAM MK \$BMARK (\$SUF1~-\$SUF2~)@~\$CENTR ~\$NOTES
StrghtEPLabelFormat			\$MULTI~x\$NOBAR \$BDIAM MK \$BMARK (\$SUF1~-\$SUF2~)@~\$CENTR ~\$NOTES
StrghtBarMarkFormat	LABEL Configuration	Bar Mark Format	\$PREFIX\$BMARK
StrghtTapBarMarkFormat	LABEL Configuration	Bar Mark Format	\$PREFIX\$BDIAM\$BMARK
StrghtEpBarMarkFormat			\$PREFIX\$BDIAM\$BMARK
LabelBlockPath		Path for Blocks in labels	
CalcNewViewBarMark		Contact CADS	
AltlengthFactor		Multplier for inch/mm conversion	25.4
NewLabelCallsAutoLeader			Yes
AskForRotationAngleWhilePlacing			No

LABELCIRCLEOFFSET	1.2
LABELFORMATEXTRANOTES1	
LABELFORMATEXTRANOTES2	
LABELFORMATEXTRANOTES3	
LABELFORMATEXTRANOTES4	
LABELBLOCKSCALEFACTOR	
PLACELABELBLOCKMANUALLY	No
LABELBLOCKXOFFSET	0
LABELBLOCKYOFFSET	0
CCDecimalPlaces	
ExcludeBmarkForUnSchedBars	No
CCSuffix	

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[TicksTags]			
AutoTickTag	LABEL Config - Ticks and Tags...	Automatically Ticks and Tags bars off drawn	

EndBarToBottomTail	LABEL Config - Ticks and Tags...	Ticks and formatting	Tag	size/placement	~mm~2.0
EndBarToTopTail	LABEL Config - Ticks and Tags...	Ticks and formatting	Tag	size/placement	~mm~14.0
EndBarToArrowTip	LABEL Config - Ticks and Tags...	Ticks and formatting	Tag	size/placement	~mm~12.0
ArrowHeadWidth	LABEL Config - Ticks and Tags...	Ticks and formatting	Tag	size/placement	~mm~0.6
ArrowHeadLength	LABEL Config - Ticks and Tags...	Ticks and formatting	Tag	size/placement	~mm~2.0
ArrowTailLength	LABEL Config - Ticks and Tags...	Ticks and formatting	Tag	size/placement	~mm~6.0
BmarkTxtHeight	LABEL Config - Ticks and Tags...	Ticks and formatting	Tag	size/placement	~mm~2.0
TagLay	LABEL Config - Ticks and Tags...	Layer for Tag			0.25TEXT
TickXDim	LABEL Config - Ticks and Tags...	Tick Size			~mm~1.4
TickYDim	LABEL Config - Ticks and Tags...	Tick Size			~mm~1.4
TickLay	LABEL Config - Ticks and Tags...	Layer for Tick			rebars
TxtOffset	LABEL Config - Ticks and Tags...	Offset for Tag Text			~mm~1.0
TxtLay	LABEL Config - Ticks and Tags...	Layer for Text			0-25TEXT

TagForm1	LABEL Config - Ticks and Tags...	Tag Text Format to be used	\$BMARK
LineBreakZSize	---	Tools and Symbols Line Break Size	1.0
LineBreakExtend	---	Tools and Symbols Line Break Size	~mm~3.0
StrghtTagForm1	---	Straight Tag Text format	\$LNGTH
StrghtTapTagForm1	---	Straight Tapered Tag Text format	\$LNGTH
StrghtEPTagFormat			LNGTH
DrawProfileTicks			No
ProfileTicksFactorX			4.0
ProfileTicksFactorY			2.0
Style			Romans
WidthFactor			1.0
DisplayAcadLeader			No
StartTickAtBarEnd			No
SwapTickDir			No

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[Outlines]			

OutlineLay	MISC Config - More Misc Config	Outlines Layer	0-35
CoverLay	MISC Config - More Misc Config	Cover Layer	cover
DimLineOffset	MISC Config - More Misc Config	Dims Line Offset	~mm~400.0

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[GroupLayering]			
GLOactive	MISC Config - More Misc Config	Group Layering Option	Off
GLOPathAndName	MISC Config - More Misc Config	Group Layering File	rcgrplay.glo
LayerDefPathAndName	MISC Config - More Misc Config	Layer Defin. File	rc-lay.txt
AllowLayerNameOfAnyCase			No

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[RcLibrary]			
RcLibPath	MISC Config - More Misc Config	RC Library Directory Path	

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[SectionMarkers]			

MarkerLay	MISC Config - Section Marker Configuration	Section Marker Layer	0-35text
MarkerTxtLay	MISC Config - Section Marker Configuration	Section Marker Text Layer	0-35text
MarkerSizeFactor	MISC Config - Section Marker Configuration	Section Marker Size Factor	1.0
MarkerTxtSizeFactor	MISC Config - Section Marker Configuration	Section Marker Text Size Factor	1.0

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[RcLeader]			
LeaderAlignment	LABEL Config - Leaders...	Leader Mode	Underneath
LeaderLay	LABEL Config - Leaders...	Bar Leader Layer...	0-25TEXT
LeaderArrowLength	LABEL Config - Leaders...	Leader Arrow Length	~mm~2.0
LeaderArrowWidth	LABEL Config - Leaders...	Leader Arrow Width	~mm~0.6
ArrowHeadPathAndName	LABEL Config - Leaders...	Leader Arrow File...	leadrbk.dwg
LeaderAlignment2	LABEL Config - Leaders...	Leader Mode	Underneath
LeaderLay2	LABEL Config - Leaders...	Bar Leader Layer...	0-25TEXT
LeaderArrowLength2	LABEL Config - Leaders...	Leader Arrow Length	~mm~1.0
LeaderArrowWidth2	LABEL Config - Leaders...	Leader Arrow Width	~mm~1.0
ArrowHeadPathAndName2	LABEL Config - Leaders...	Leader Arrow Path and Filename	leadrdot.dwg

LeaderAlignment3			Underneath
LeaderLay3			0-25TEXT
LeaderArrowLength3			~mm~1.0
LeaderArrowWidth3			~mm~1.0
ArrowHeadPathAndName3			leadrnon.dwg
UnderneathDist	LABEL Config - Leaders...	Distance Underneath	0.35
ARXLeader			Off
ACADLeader			Off
RangeLeaderStyle			Leader 1
LeaderSnapSetting			Near
LeaderLineOffset			0

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[BarRefs]			
Style	LABEL Config	Bar Ref Text Style	romans
Layer	LABEL Config	Bar Ref Text Layer	25TEXT
HeightFactor	LABEL Config	Bar Ref Height	~mm~2.5

WidthFactor	LABEL Config	Bar Ref Width Factor	1.0
RefForm1	LABEL Config	Bar Ref Formatting	\$BMARK
StrghtRefForm1	---	Bar Ref Formatting for Straight bars	\$BMARK
StrghtTapRefForm1	---	Bar Ref Formatting for Tapered Straight bars	\$BMARK
StrghtEPRefForm			\$BMARK
BarRefBlock			None
BarRefBlockName			Blocks\BarmarkCir_Imperial.dwg
BarRefShapeDiagramPath			DWGSketches\LabelSketches\
BarRefBlockScaleFactor			1
RedrawBarRefBlocksBasedOnConfig			No

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[Range]			
IndicatorLineLay	RANGE Config	Range Indicator Line Layer	rangelay
EndMarkerLay	RANGE Config	Range End Marker Layer	rangelay

RcDotLay	RANGE Config	RC Dot layer	0-25TEXT
SeparateTxtLay	---	Range Text Layer	0-25TEXT
IntermediateLineLay	RANGE Config	Intermediate Line Layer	rangelay
DrawRCDots	RANGE Config	Option to draw RC Dots or not	yes
DrawRangeTxt	RANGE Config	Option to draw Range Text or not	yes
DefStaggeredLabelTxt	RANGE Config	The Default Text for staggered Range Label	stg.
DefAlternateLabel1Txt	RANGE Config	The Default Text for 1st Alternate Range Label	
DefAlternateLabel2Txt	RANGE Config	P	alt.
Fdist	RANGE Config	The Default Text for 2nd Alternate Range Label	~mm~0.0
Sdist	RANGE Config	P	~mm~0.0
EnableDist	---	First Range Offset	Yes
NewViewDLG	RANGE Config	New View Range Dialog appears for Both, Run, Range, Neither	Both
StSnap	RANGE Config	Start of Range Snap	Leave
OtSnap	RANGE Config	Other Range Snap	Leave

DisplayCCInInches	Display C/C In Inches (12") rather than feet (1')	Yes
RangeNumBarsIncValue	Minimum decimal fraction for inclusion in no. bars calc for ranges	0.0
AutoTaperedStepping	Allow Automatic Step Tapering	Yes
SteppingValue	Value for Automatic Step Taper	~mm~0.0
SteppingIncOrDec	Stepping Inclined or Declined	Inclined
UseRunSizeFact	Bars in section below a certain diameter drawn oversize	No
UseRunSizeFactUnderSize		
RunSizeFact	Size for the bar in section to be drawn if using RunSizeFactor	0.3
DrawRunsProportionalToBarSize		No
RcDotBlock	BlockName inserted for RC Dot	rc-dot
AlwaysPickTaperedBar		No
RangeTxtStyle		romans
RangeTxtHeight		~mm~2.0
DisplayRangeBarPointers		No

RangeBarPointersBlock

RangeEndBlock

DoubleIndicatorRangeEndBlock

RangeTxtWidthFactor

MultiCcTxt

 Text on multiple ranges showing no. Yes
 off and c/c

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[RangeText]			
SingleIndicatorRangeTxtFormat1			(\$NOBAR)
SingleIndicatorRangeTxtAlignment1			Right(Above)
SingleFixedPitchRangeTxtFormat1			(\$NOBAR)
SingleFixedPitchRangeTxtAlignment1			Right(Above)
SingleMultiplePitchRangeTxtFormat1			(\$NOBAR@\$CENTR)
SingleMultiplePitchRangeTxtAlignment1			Middle(Above)
AlternateSingleFixedPitchRangeTxtFormat1			(\$ALTNOBAR1+\$ALTNOBAR2)
AlternateSingleFixedPitchRangeTxtAlignment1			Right(Above)

AlternateMultiplePitchRangeTxtFormat1	(\$ALTNOBAR1+\$ALTNOBAR2)
AlternateMultiplePitchRangeTxtAlignment1	Right(Above)
StaggeredFixedPitchRangeTxtFormat1	(\$NOBAR)
StaggeredFixedPitchRangeTxtAlignment1	Right(Above)
StaggeredMultiplePitchRangeTxtFormat1	(\$NOBAR@\$CENTR)
StaggeredMultiplePitchRangeTxtAlignment1	Middle(Above)
SingleIndicatorRangeTxtFormat2	
SingleIndicatorRangeTxtAlignment2	
SingleFixedPitchRangeTxtFormat2	
SingleFixedPitchRangeTxtAlignment2	
SingleMultiplePitchRangeTxtFormat2	
SingleMultiplePitchRangeTxtAlignment2	
AlternateSingleFixedPitchRangeTxtFormat2	
AlternateSingleFixedPitchRangeTxtAlignment2	
AlternateMultiplePitchRangeTxtFormat2	@\$CENTR
AlternateMultiplePitchRangeTxtAlignment2	Right(Below)
StaggeredFixedPitchRangeTxtFormat2	

StaggeredFixedPitchRangeTxtAlignment2

StaggeredMultiplePitchRangeTxtFormat2

StaggeredMultiplePitchRangeTxtAlignment2

TaperedRangeTxtFormat1

TaperedRangeTxtAlignment1

Left(Above)

TaperedRangeTxtFormat2

(\$SUFx2)

TaperedRangeTxtAlignment2

Right(Above)

Orientationtolerance

10

AlternateRangeTxtFormat1

AlternateRangeTxtAlignment1

AlternateRangeTxtFormat2

AlternateRangeTxtAlignment2

[Miscellaneous]

EditReactorQuickPromptStyle=No

No

Set2ViewLabDel

Delete First of second label when a first
set changed to view

BarUtilPathAndName			scutils.txt
LapDefsPath		n/a	
UseRcAsAcad		Sketch Mode On/Off	No
CheckForDataBases		Check for 2 or more RC databases on drawing	yes
RadiusCheck99		n/a	yes
LengthRulesPathAndName		n/a	maxlens.rle
SaveAsPre510		n/a	no
RestoreLibOrder		n/a	yes
DCLFile		Dialog Control File	uk.dcl
GhostImagesOnMove		Ghosted Images appear on Move	No
MasterProjectDirectory			
OnlineFeature			On
UnloadOldRCToolboxMenuOnLoad			Yes

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[AboutBox]			

StaticSlideName	---	n/a	cadslogo
NumberOfSlides	---	n/a	20
SlideNamePrefix	---	n/a	logo
SlideLibraryName	---	n/a	logo
AnimationSpeed	---	n/a	1.0

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[LayerAliasManager]			
Status		Layer Aliasing On/Off	0

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[MemorySavers]			
UsingCADS-SC		Contact CADS	Yes
UsingCouplers		Contact CADS	No
UpdateDependants		Contact CADS	Yes
NumberTapered		Contact CADS	705
UsingOldTapered		Contact CADS	No

NotShownUnLabeledBars	Contact CADS	No
EnableRecNoUpdate	Contact CADS	No
ChangeToDBLayer	Contact CADS	No

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[Couplers]			
Leg1AttachSymbol	COUPLER Config	Symbol default setting	Both
Leg2AttachSymbol	COUPLER Config	Symbol default setting	Both
ReducerText	COUPLER Config	Default Text	R
Line1Text	COUPLER Config	Default Text	\$MANUF \$CTYPE Coupler '~\$REDCR~' \$FMDIA~/ \$TODIA
Line2Text	COUPLER Config	Default Text	and \$CTYPE thread.
Line3Text	COUPLER Config	Default Text	
ThreadLine1Text	COUPLER Config	Default Text	Thread bar end to suit
ThreadLine2Text	COUPLER Config	Default Text	\$MANUF Type \$CTYPE.
ThreadLine3Text	COUPLER Config	Default Text	

DefManuf	COUPLER Config	Default Text	Lenton
HTMLFilePath			
CplFilePath			
TotalEndConditions			3
CouplerFolder			

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[CouplersConfig]			
TensionSymbol	COUPLER Config	Drawing to be inserted for Tension Block	tension.dwg
CompressionSymbol	COUPLER Config	Drawing to be inserted for Compression Block	compress.dwg
ThreadSymbol	COUPLER Config	Drawing to be inserted for Thread Block	thread.dwg
CouplerLengthFact	COUPLER Config	Default scaling factor	~mm~5.0
CouplerWidthFact	COUPLER Config	Default scaling factor	~mm~2.0
TensionLayer	COUPLER Config	Tension Layer	couplay
CompressionLayer	COUPLER Config	Compression Layer	couplay
ThreadLayer	COUPLER Config	Thread Layer	couplay
RealCouplerSize	COUPLER Config	Draw Coupler Symbol True Size	No

LabelLayer	COUPLER Config	Label Layer	couplay
LabelTStyle	COUPLER Config	Label Text Style	romans
LabelHeight	COUPLER Config	Label Height	~mm~2.0
HeightBetweenTxt	COUPLER Config	Between Distance	~mm~1.0
LabelWFactor	COUPLER Config	Label Width Factor	1
SymbolORlabel	COUPLER Config	Information of prnted schedule slide	Both
SchedExtra	COUPLER Config	Addition on printed schedule	No
DefSchedExtra	COUPLER Config	Default addition on printed schedule	1
CouplerTolerance	COUPLER Config	Dimension tolerance on printed schedule	No
DefTolerance	COUPLER Config	Default dimension tolerance on printed schedule	-1
BlocksDir	COUPLER Config	Couplers Block directory	uscplrs
AnnotationChangesRelease	COUPLER Config	Add coupler changes release code	yes
CouplerLayer	COUPLER Config		couplay
AutoAttachLabel	COUPLER Config		No

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[Grid]			

OffsetGridLines	---	~mm~50.0
OffsetDimLines	---	~mm~50.0
OffsetBalloonCC	---	~mm~11.0
DistBetweenGrid	---	~mm~5000.0
SubLineOffset	---	~mm~5.0
GridLayer	---	0-35TEXT

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[MatchBars]			
StraightTolerance	Bar Config - Rounding/Match Bars	Tolerance allowed for matching straight bars	~mm~0.0
BentBarDimTolerance	Bar Config - Rounding/Match Bars	Tolerance allowed for matching bent bars	~mm~6.35
SelectLengthTolerance	Bar Config - Rounding/Match Bars	Tolerance for Select/Show bars	~mm~1.0
SuppressQuestions	Bar Config - Rounding/Match Bars		No

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
-----------------	----------------------------	-------------	---------

[Rounding]

RndDir	BAR Config - Rounding/Match Bars	Rounding Direction (1.0 is UP, 0.0 is Nearest, -1.0 is DOWN)	-1
RndVal	BAR Config - Rounding/Match Bars	Rounding Value	0.25
LenRndDir	BAR Config - Rounding/Match Bars	Length Rounding Direction	-1
LenRndVal	BAR Config - Rounding/Match Bars	Length Rounding Value	0.25
StraightRndDir	BAR Config - Rounding/Match Bars	Straight Bar Rounding Direction	-1
StraightRndVal	BAR Config - Rounding/Match Bars	Straight Bar Rounding Value	1
StraightLenRndDir	BAR Config - Rounding/Match Bars	Straight Bar Length Rounding Direction	-1
StraightLenRndVal	BAR Config - Rounding/Match Bars	Straight Bar Length Rounding Value	1
LapDir	---	Lap Rounding Direction	1
LapVal	---	Lap Rounding Value	0.25
BarDimensionPreRoundingAddition			0.02

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
------------------------	-----------------------------------	--------------------	----------------

[StockBars]

MaxStockLength	Bar Config - Advanced - Stretch to Stock Defaults	Maximum Stock length	800
DefaultLapType	Bar Config - Advanced - Stretch to Stock Defaults	Lap Types	USA
OffsetBars	Bar Config - Advanced - Stretch to Stock Defaults	Bar Offset	~mm~3.0
AutoLabelInsert	Bar Config - Advanced - Stretch to Stock Defaults	Labels Inserted	Yes
AskForLap	Bar Config - Advanced - Stretch to Stock Defaults	Prompt for Lap	Yes
StraightBar	Bar Config - Advanced - Stretch to Stock Defaults	Straight Bar	0
StraightBarDim	Bar Config - Advanced - Stretch to Stock Defaults	Straight Bar Dimension	B

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[OverStockLength]			Yes
UseOverStockLength			360
OverStockLength			792
MaxStockLength			4725

MaxStretchLength	1
LapPosition	0
StaggerLap	20
StaggerOffset	20
LapLength	1
LabelOption	1
LabelPlacing	0.7
LblBarDistance	0.2
LblBarDistanceMin	3.9
LblBarDistanceMax	0
RangeLineForAllBars	With
LabelNotes1	And
LabelNotes2	Continuous
LabelNotes3	rebars
GroupLayer	2
LastBarOption	60
OverLength	0

OverLengthMin	0.04
BarOffset	0
BarOffsetMin	0.2
BarOffsetMax	180
MaxLapLength	0.25
LabelPlacingFactor	0.5
RangeLineFactor	No
UseCurrentStockLengthForManualSplicing	No
MoveOSLGroup	No
RotateOSLGroup	4
SupportedShapes	Yes
Shape1	0
Shape1NumDims	1
Shape1Dim1	B
Shape1Dim	B
Shape1StartBarShape	0
Shape1EndBarShape	0

Shape1NumberOfHooks	0
Shape1NumberOfBendDia	0
Shape2	1
Shape2NumDims	1
Shape2Dim1	B
Shape2Dim	B
Shape2StartBarShape	1
Shape2EndBarShape	1
Shape2NumberOfHooks	1
Shape2NumberOfBendDia	0
Shape3	2
Shape3NumDims	1
Shape3Dim1	B
Shape3Dim	B
Shape3StartBarShape	2
Shape3EndBarShape	2
Shape3NumberOfHooks	1

Shape3NumberOfBendDia	0
Shape4	17
Shape4NumDims	3
Shape4Dim1	B
Shape4Dim2	C
Shape4Dim3	D
Shape4Dim	C
Shape4StartBarShape	17
Shape4EndBarShape	17
Shape4NumberOfHooks	0
Shape4NumberOfBendDia	0

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[Tolerances]			
ToleranceRules	BAR Config - Tolerance Rules...	Contact CADS	

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
-----------------	----------------------------	-------------	---------

[OverridingBarRadii]

OverrideBarRadii	No
rcen	0
r	0

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[ProjectSettings]			
InProjectMode			No
ImperialTemplateDwg			..\support\cadsimp.dwt
MetricTemplateDwg			..\support\cadsiso.dwt
DrawingSetupDllPath			..\cads-sc\cads-sc.arx
DrawingSetupDll			cads-sc.arx
DrawingSetupFunctionCall			CadsSetup
DefFileRulesFile			cads-rc.dfr
MMConfigurationFile			USA_config.xml

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
-----------------	----------------------------	-------------	---------

[AccessoriesListConfig]

ListLayerName	0-25TEXT
BlockHeaderHeight	5
BlockListHeight	5

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[Slide]			
SlideLibName			UsaSched.slb
DestinationFolder			USA
BlockScaleFactor			10

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[WmfConfiguration]			
WmfTextScaleFactor			2
WmfTextFontName			Arial
WmfTextWeight			700
WmfPenThickness			10

GenerateWmfFromDwg

No

GCONFIG SETTING
DIALOG Equiv (if relevant)
DESCRIPTION
DEFAULT
[ExcelPrint]

ExcelTemplatePath

XLT/USA

GCONFIG SETTING
DIALOG Equiv (if relevant)
DESCRIPTION
DEFAULT
[TitleBlockConfig]

AutoSearchTitleBlock

Yes

GCONFIG SETTING
DIALOG Equiv (if relevant)
DESCRIPTION
DEFAULT
[USA_BBD]

HOOK90

Hook90

HOOK135

Hook135

HOOK180

Hook180

NMIN_HOOK90

amin

NMIN_HOOK135

dmin135

NMIN_HOOK180

hmin180

GCONFIG SETTING
DIALOG Equiv (if relevant)
DESCRIPTION
DEFAULT
[USAM_BBD]

HOOK90

Hook90

HOOK135

Hook135

HOOK180

Hook180

NMIN_HOOK90

amin

NMIN_HOOK135

dmin135

NMIN_HOOK180

hmin180

GCONFIG SETTING
DIALOG Equiv (if relevant)
DESCRIPTION
DEFAULT
[IMMT_BBD]

HOOK90

Hook90

HOOK135

Hook135

HOOK180

Hook180

NMIN_HOOK90

amin

NMIN_HOOK135		dmin135
NMIN_HOOK180		hmin180

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[SMIM_BBD]			
HOOK90			Hook90
HOOK135			Hook135
HOOK180			Hook180
NMIN_HOOK90			amin
NMIN_HOOK135			dmin135
NMIN_HOOK180			hmin180

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[cani_bbd]			
HOOK90			Hook90
HOOK135			Hook135
HOOK180			Hook180

NMIN_HOOK90	amin
NMIN_HOOK135	dmin135
NMIN_HOOK180	hmin180

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[canm_bbd]			
HOOK90			Hook90
HOOK135			Hook135
HOOK180			Hook180
NMIN_HOOK90			amin
NMIN_HOOK135			dmin135
NMIN_HOOK180			hmin180

GCONFIG SETTING	DIALOG Equiv (if relevant)	DESCRIPTION	DEFAULT
[COUPLERSYMBOLANDGRADE]			
NOOFSYMBOLS			MaleCoupler.dwg
SYMBOLNAME1			FemaleCoupler.dwg

SYMBOLNAME2

SYMBOLNAME3

SYMBOLNAME4

SYMBOLNAME5

SYMBOLNAME6

SYMBOLNAME7

SYMBOLNAME8

SYMBOLNAME9

Terminator.dwg

LongThread.dwg

CouplerWithLongThread.dwg

FormSaver.dwg

Positional.dwg

Positional_FP.dwg

CouplerWithThread.dwg

MaleCoupler.dwg

GCONFIG SETTING
DIALOG Equiv (if relevant)
DESCRIPTION
DEFAULT
[RELEASEANDORDERING]

ALLOWSUBRELEASE

NO

SPLITSUBRELEASEBY

-

GCONFIG SETTING
DIALOG Equiv (if relevant)
DESCRIPTION
DEFAULT
[ExtraLabelNotes]

HideExtraLabelNotes1

No

HideExtraLabelNotes2

No

HideExtraLabelNotes3

No

HideExtraLabelNotes4

No

GCONFIG SETTING

DIALOG Equiv (if relevant)

DESCRIPTION

DEFAULT

[BarGrades]

GradesSupportingFractionalSizes

SmoothRnd